

Shop Manual

ENGINE

95E-5 SERIES
(KOHAG SPEC.)

ENGINE

95E-5 Series (KOHAG SPEC.)

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04357-00
00 Index and foreword	SEN04358-00
Index	SEN04359-00
Foreword and general information	SEN04360-00
01 Specification	SEN04361-00
Specification and technical data	SEN04362-00
10 Structure, function and maintenance standard	SEN04363-00
Structure, function and maintenance standard, Part 1	SEN04364-00
Structure, function and maintenance standard, Part 2	SEN04365-00
20 Standard value table	SEN04366-00
Standard service value table	SEN04367-00
30 Testing and adjusting	SEN04368-00
Testing and adjusting	SEN04369-00
40 Troubleshooting	SEN04370-00
General information on troubleshooting	SEN04371-00
Troubleshooting of electrical system (E-mode), Part 1	SEN04372-00
Troubleshooting of electrical system (E-mode), Part 2	SEN04373-00
Troubleshooting of mechanical system (S-mode)	SEN04374-00
50 Disassembly and assembly	SEN04375-00
General information on disassembly and assembly	SEN04376-00
Disassembly and assembly, Part 1	SEN04377-00
Disassembly and assembly, Part 2	SEN04378-00
Disassembly and assembly, Part 3	SEN04379-00

Table of contents

00 Index and foreword	
Index	SEN04359-00
Composition of shop manual.....	2
Table of contents	3
Foreword and general information	SEN04360-00
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN04362-00
Outline.....	2
Specifications	4
General view	6
Weight table	9
Engine performance curves	10
10 Structure, function and maintenance standard	
Structure, function and maintenance standard, Part 1	SEN04364-00
General structure	4
Air intake and exhaust system	6
Air intake and exhaust unit	6
Turbocharger	8
Engine unit	12
Cylinder head	12
Cylinder block	14
Cylinder	17
Main moving parts	18
Crankshaft	20
Camshaft	21
Piston, piston ring and piston pin.....	22
Connecting rod	23
Flywheel and flywheel housing.....	24
Timing gear.....	26
Valve system	30
Valve, valve guide.....	32
Rocker arm shaft, push rod and tappet	33
Structure, function and maintenance standard, Part 2	SEN04365-00
Lubrication system	3
Lubrication system diagram.....	3
Oil pump	4
Regulator valve.....	6
Oil filter	7
Fuel system.....	9
Fuel system diagram	9
Supply pump.....	10
Fuel injection nozzle.....	12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$