

Shop Manual

ENGINE

95E-5 SERIES

KOMATSU

ENGINE

95E-5 Series

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01966-00
00 Index and foreword	SEN02120-00
Index	SEN02121-00
Foreword and general information	SEN02122-00
01 Specification	SEN02123-00
Specification and technical data	SEN02124-00
10 Structure, function and maintenance standard	SEN02125-00
Structure, function and maintenance standard, Part 1	SEN02126-00
Structure, function and maintenance standard, Part 2	SEN02127-00
20 Standard value table	SEN02128-00
Standard service value table	SEN02129-00
30 Testing and adjusting	SEN02130-00
Testing and adjusting	SEN02182-00
40 Troubleshooting	SEN02131-00
General information on troubleshooting	SEN02183-00
Troubleshooting of electrical system (E-mode), Part 1	SEN02185-00
Troubleshooting of electrical system (E-mode), Part 2	SEN02186-00
Troubleshooting of mechanical system (S-mode)	SEN02184-00

Table of contents

00 Index and foreword	
Index	SEN02121-00
Composition of shop manual.....	2
Table of contents	3
Foreword and general information	SEN02122-00
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling electric equipment and hydraulic component.....	11
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN02124-00
Outline.....	2
Specifications	4
General view	5
Weight table	8
Engine performance curves	9
10 Structure, function and maintenance standard	
Structure, function and maintenance standard, Part 1	SEN02126-00
General structure	4
Air intake and exhaust system	6
Air intake and exhaust unit	6
Air cleaner	8
Turbocharger	10
Muffler.....	13
Engine unit	14
Cylinder head	14
Cylinder block	16
Cylinder	19
Main moving parts	20
Crankshaft	22
Camshaft	23
Piston, piston ring and piston pin.....	24
Connecting rod	25
Flywheel and flywheel housing.....	26
Timing gear.....	28
Valve system	32
Valve, valve guide.....	34
Rocker arm shaft, push rod and tappet	35
Structure, function and maintenance standard, Part 2	SEN02127-00
Lubrication system	3
Lubrication system diagram.....	3
Oil pump	4
Regulator valve.....	6
Oil filter	7
Fuel system.....	9
Fuel system diagram	9
Supply pump.....	10

Fuel injection nozzle	12
Fuel filter	13
Common rail	14
Various sensor	16
Cooling system	18
Cooling system diagram	18
Water pump	19
Cooling fan drive and thermostat	22
Electrical equipment	26
Starting and charging system electrical circuit diagram	26
Alternator	27
Starting motor	29
Starting aid	30
Engine controller	31
20 Standard value table	
Standard service value table	SEN02129-00
Standard service value table for testing, adjusting, and troubleshooting	2
Running-in standard and performance test standard	3
30 Testing and adjusting	
Testing and adjusting	SEN02182-00
Testing and adjusting tools list	3
Measuring intake air pressure	4
Testing exhaust temperature	5
Adjusting valve clearance	6
Testing compression pressure	8
Testing blow-by pressure	10
Testing oil pressure	11
Handling fuel system parts	12
Releasing residual pressure in fuel system	12
Testing fuel pressure	13
Reduced cylinder mode operation	14
No-injection cranking	14
Testing leakage from pressure limiter and return rate from injector	15
Bleeding air from fuel circuit	18
Testing fuel system for leakage	20
Testing and adjusting alternator belt tension	21
Handling controller voltage circuit	22
40 Troubleshooting	
General information on troubleshooting	SEN02183-00
Points on troubleshooting	2
Error code and failure code table	4
Information in troubleshooting table	6
Troubleshooting of electrical system (E-mode), Part 1	SEN02185-00
E-1 Code [111/CA111] ECM Critical Internal Failure	4
E-2 Code [115/CA115] Eng. Ne and Bkup Speed Sensor Error	7
E-3 Code [122/CA122] Charge Air Press Sensor High Error	8
E-4 Code [123/CA123] Charge Air Press Sensor Low Error	10
E-5 Code [131/CA131] Throttle Sensor High Error	11
E-6 Code [132/CA132] Throttle Sensor Low Error	14
E-7 Code [144/CA144] Coolant Temp. Sensor High Error	15
E-8 Code [145/CA145] Coolant Temp. Sensor Low Error	16
E-9 Code [153/CA153] Charge Air Temp. Sensor High Error	18
E-10 Code [154/CA154] Charge Air Temp. Sensor Low Error	20
E-11 Code [187/CA187] Sensor Sup. 2 Volt. Low Error	21

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$