

Shop Manual

ENGINE

107E -1 SERIES

KOMATSU

Engine

107E-1 Series

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00161-23
00 Index and foreword	SEN00162-23
Index	SEN00163-23 ●
Foreword and general information	SEN00164-06
01 Specification	SEN00165-16
Specification and technical data	SEN00166-16 ●
10 Structure, function and maintenance standard	SEN00167-07
Structure, function and maintenance standard	SEN00168-07 ●
20 Standard value table	SEN00247-16
Standard service value table	SEN00248-16 ●
30 Testing and adjusting	SEN00249-09
Testing and adjusting	SEN00250-09 ●
40 Troubleshooting	SEN00251-05
General information on troubleshooting	SEN00252-04
Troubleshooting of electrical system (E-mode), Part 1	SEN00254-04
Troubleshooting of electrical system (E-mode), Part 2	SEN00255-04
Troubleshooting of mechanical system (S-mode)	SEN00253-02
50 Disassembly and assembly	SEN00256-10
General information on disassembly and assembly	SEN00257-06
Disassembly and assembly, Part 1	SEN00258-07
Disassembly and assembly, Part 2	SEN00259-10
90 Repair and replacement of parts	SEN05210-00
Information related to repair and replacement	SEN05211-00
Parts related to cylinder head	SEN05212-00
Parts related to cylinder block	SEN05213-00

Table of contents

00 Index and foreword	
Index	SEN00163-23
Composition of shop manual	2
Table of contents	3
Foreword and general information	SEN00164-06
Safety notice	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00166-16
General.....	2
Specifications.....	3
General view.....	24
Dimensions table	64
Engine performance curves.....	65
10 Structure, function and maintenance standard	
Structure, function and maintenance standard	SEN00168-07
Intake system	3
Exhaust system.....	4
Lubricating oil system.....	6
Cooling system.....	10
Fuel system.....	11
Fuel supply pump	12
CRI system.....	13
Turbocharger.....	17
Cylinder head	18
Cylinder block.....	20
Crankshaft.....	22
Piston, piston ring and piston pin	24
Connecting rod.....	26
Vibration damper	28
Timing gear	29
Camshaft.....	30
Valve and valve guide	32
Rocker arm, shaft and tappet.....	34
Flywheel and flywheel housing	36
Oil pump.....	38
Water pump drive and fan drive	39
Water pump.....	41
Thermostat	42
Alternator.....	43
Starting motor	48
Sensor.....	52
Engine controller	58
Control system	61

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$