



REPAIR MANUAL

ZF - MULTITRAC

MT-E 3050/3060/3070 II

REPAIR MANUAL

ZF - Multitrac

MT-E 3050/3060/3070 II

IMPORTANT INFORMATION:

Due to the great variety of ZF units it is necessary to limit disassembly and reassembly manuals to a current ZF production unit. Continuous technical upgrading of the ZF units and extensions concerning design options may require differing steps, which can be carried out by qualified specialists without greater difficulties by means of the perspective views included in the corresponding spare parts lists.

This disassembly and reassembly manual is based on the design level of a ZF production unit at the time of issue of the manual.

ZF Friedrichshafen AG reserves the right to replace this disassembly and reassembly manual by a successive edition at any time without advance notice. Upon request, ZF Friedrichshafen AG will advise which edition is the latest one.

Any maintenance work is to be done in accordance with ZF's Operating Instructions (ZF Order No: 5871 565 902) and ZF's List of Lubricants TE-ML 05!

The ZF list of lubricants is being continuously updated and can be obtained or viewed as follows:

- In all ZF-plants
 - In all ZF-service organizations
 - Internet www.zf.com
-

CAUTION:

For the installation as well as for the commissioning of the unit, the Instructions and Specifications of the Vehicle Manufacturer have to be observed!

ZF Friedrichshafen AG

ZF Services

Donaustr. 71

D - 94034 Passau

Copyright ZF Passau GmbH!

Copying even partially not permitted!

With the reserve of technical modifications!

Design level 2008/05

5. Edition 2016/01

TABLE OF CONTENTS	Chapter/Page
Preface	0/1
General	0/2 ... 3
Examples of contact patterns for the Gleason gear-tooth system	0/4 ... 7
Conversion table	0/8
Denomination of standard dimensions	0/9
Tightening torques for screws	0/10
TOOLS	WS/1 ... WH/5
Special tools	WS/1 ... 7
Commercial tools	WH/1 ... 5
DISASSEMBLY	1/1 ... 3/3
1. Disassembly of output 1.1 Disassembly of planetary carrier 1.2 Disassembly of brake 1.3 Disassembly of hub 1.4 Disassembly of output assy	1/1 ... 6 1/1 ... 2 1/2 ... 4 1/4 ... 5 1/6
2. Disassembly of input 2.1 Version with HL transmission 2.2 Standard version	2/1 ... 5 2/1 ... 2 2/3 ... 5
3. Disassembly Differential 3.1 Version DZ-500 und D-500 3.2 Version DZ-750 und D-750	3/1 ... 5 3/1 ... 3 3/4 ... 5

REASSEMBLY

4/1 ... 6/10

4. Reassembly Differential

4.1 Version DZ-500 und D-500

4.2 Version DZ-750 und D-750

4/1 ... 8

4/1 ... 4

4/5 ... 8

5. Reassembly of input

5.1 Version MT-E 3050/3060 II with HL transmission

5.2 Standard version MT-E 3050/3060 II (without HL transmission)

5/1 ... 13

5/1 ... 5

5/5 ... 13

6. Reassembly of output

6.1 Reassembly of hub carrier

6.2 Reassembly of hub

6.3 Reassembly of multi-disk brake

6.3.1 Leakage test of multi-disk brake

6.3.2 Adjustment and check of piston stroke

6.4 Reassembly of planetary carrier

6.5 Reassembly of output assy

6/1 ... 10

6/1

6/1 ... 4

6/4 ... 9

6/7

6/8

6/9 ... 10

6/10

PREFACE

This documentation has been developed for specialized staff trained by ZF Friedrichshafen AG for repair and maintenance work to be done on ZF units.

This documentation describes a ZF series product with a design level valid at the date of edition.

Due to the continuous technical upgrading of the product, however, the repair of the unit at your disposal may require both deviating work steps and differing setting and testing data.

We would therefore recommend you to entrust masters and servicemen with the work on your ZF product whose practical and theoretical training is constantly updated in our training school.

The Service Stations established by ZF Friedrichshafen AG all over the world offer you:

- 1. Permanently trained staff**
- 2. Specified equipment, e.g. special tools**
- 3. State-of-the-art genuine ZF spare parts**

All work is done there with utmost care and reliability.

In addition, repair work carried out by ZF Service Stations is covered by the ZF warranty within the terms of the currently applicable contractual conditions.

Any damage resulting from work which is done in an improper and unprofessional manner by third parties and any consequential costs incurred shall be excluded from this contractual liability.

This shall also be applicable if other than genuine ZF spare parts are used.

ZF Friedrichshafen AG

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$