

**521E**

**Loader**

84186213 A - EU

Use for Repair Manual



# 521E Wheel Loader Repair Manual 84186213 A - EU

## Table of Contents

Description	Section No.
<b>General</b> <span style="float: right;"><b>Tab 1</b></span>	
Section Index - General	
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
<b>Engines</b> <span style="float: right;"><b>Tab 2</b></span>	
Section Index - Engines	
Engine and Radiator Removal and Installation	2000
Stall Tests	2002
After Cooler	2003
For Engine Repair, See the Engine Service Manual 87630273	
<b>Fuel System</b> <span style="float: right;"><b>Tab 3</b></span>	
Section Index - Fuel System	
For Fuel System Repair, See the Engine Service Manual 87630273	
<b>Electrical</b> <span style="float: right;"><b>Tab 4</b></span>	
Section Index - Electrical	
Removal and Installation of Starter and Alternator	4001
Electrical Specifications and Troubleshooting	4002
Batteries	4003
Instrument Cluster	4005
<b>Steering</b> <span style="float: right;"><b>Tab 5</b></span>	
Section Index - Steering	
Removal and Installation of Steering Components	5001
Steering Specifications, Pressure Checks, and Troubleshooting	5002
Steering Cylinders	5005
Center Pivot	5006
Auxiliary Steering Motor and Pump	5008
Joystick Steering System (JSS) (option)	5009

# 521E Wheel Loader Repair Manual 84186213 A - EU

## Table of Contents

	Description	Section No.
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		
Removal and Installation of Power Train Components		6001
Transmission Specifications, Pressure Checks, and Troubleshooting		6002
Transmission		6003
Front Axle		6004
Rear Axle		6004
Drive Shafts, Center Bearing, and Universal Joints		6005
Wheels and Tires		6006
Transmission Control Valve		6007
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		
Removal and Installation of Brake Components		7001
Hydraulic Brake Troubleshooting		7002
Brake Pump		7003
Brake Accumulators		7004
Parking Brake		7008
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		
How to Read Hydraulic Schematics		8000
Removal and Installation of Hydraulic Components		8001
Hydraulic Specifications, Troubleshooting, and Pressure Checks		8002
Cleaning the Hydraulic System		8003
Loader Control Valve		8005
Cylinders		8006
Coupler Solenoid Locking Valve		8007
Ride Control Accumulator		8013
Ride Control Valve		8014

# 521E Wheel Loader Repair Manual 84186213 A - EU

## Table of Contents

Description	Section No.
<b>Mounted Equipment</b>	<b>Tab 9</b>
Section Index - Mounted Equipment	
Air Conditioning Troubleshooting and System Checks	9002
Air Conditioner System Service	9003
Removal And Installation Of Air Conditioning And Heater Components	9004
Loader	9006
Roll Over Protective Structure (ROPS), Cab Structural Frame (CSF)	9007
Cab Glass Installation	9010
<b>Electrical Schematic Foldouts and Hydraulic Schematic Foldout</b>	<b>In Rear Pocket</b>

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$