

521F
Tier 4
Wheel Loader

SERVICE MANUAL

Part number 47462778
1st edition English
January 2013



Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.310] Aftercooler.....	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.5
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35

[35.000] Hydraulic systems	35.1
[35.106] Variable displacement pump	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.357] Pilot system	35.4
[35.359] Main control valve	35.5
[35.701] Front loader arm hydraulic system	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
Frames and ballasting	39
[39.100] Frame	39.1
41 - Steering	41
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders	41.2
[41.910] Auxiliary steering	41.3
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning.....	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.012] Engine cooling system	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.031] Parking brake electrical system	55.6
[55.036] Hydraulic system control	55.7
[55.047] Steering control system	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.10
[55.100] Harnesses and connectors.....	55.11
[55.201] Engine starting system	55.12

[55.202] Cold start aid	55.13
[55.301] Alternator	55.14
[55.302] Battery.....	55.15
[55.404] External lighting	55.16
[55.405] External lighting switches and relays	55.17
[55.408] Warning indicators, alarms, and instruments	55.18
[55.415] Loader arm and bucket control system	55.19
[55.510] Cab/Platform harnesses and connectors	55.20
[55.512] Cab controls.....	55.21
[55.514] Cab lighting	55.22
[55.518] Wiper/Washer system.....	55.23
[55.519] Cab brake controls	55.24
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.25
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.26
[55.DTC] FAULT CODES.....	55.27
Platform, cab, bodywork, and decals	90
[90.124] Pneumatically-adjusted operator seat.....	90.1



INTRODUCTION

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$