570MXT Loader Landscaper

Service Manual 6-43571

Table of Contents

Description	Section No.	Publication Form No.
General	Tab 1	
Section Index - General		6-43590
Standard Torque Specifications	1001	7-52931
Fluids and Lubricants	1002	6-43460
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		8-98902
Engine	Tab 2	
Section Index - Engine		6-43600
Engine and Radiator Removal and Installation	2000	6-43820
Stall Tests	2002	6-43470
For Engine Repair, see the Engine Service Manual.		
Fuel System	Tab 3	
For Fuel System Repair, see the Engine Service Manual.		
Electrical	Tab 4	
Section Index - Electrical		6-43610
Removal and Installation of Electrical Components	4000	6-41930
Electrical Specifications and Troubleshooting	4001	6-43480 7-49440 7-11451
Batteries	4003	
Starter Motor - Denso	4004	
Instrument Cluster	4005	6-41880
Alternator	4007	7-49250
Steering	Tab 5	
Section Index - Steering		6-43620
Removal and Installation of Steering Components	5000	6-41950
Steering Specifications, Pressure Checks and Troubleshooting	5001	6-43490
Steering Control Valve	5002	7-11920
Steering Cylinders	5003	7-11930
Front Axle - Two Wheel Drive	5005	7-10470
	5006	6-43840

Reprinted

Table of Contents

Description	Section No.	Publication Form No.	
Power Train	Tab 6		
Section Index - Power Train		6-43630	
Removal and Installation of Power Train Components	6000	6-43850	
Standard (Carraro) Transmission Specifications, Pressure Checks and Troubleshooting	6002	6-40700	
Wheels and Tires	6003	6-43860 6-43870	
Rear Axle and Planetaries	6004		
Standard (Carraro) Transmission	6007	6-41730	
Brakes	Tab 7		
Section Index - Brakes		6-43640	
Removal and Installation of Brake Components	7000	6-42040	
Master Cylinder	7003	7-49490	
For parking brake and brake pedal adjustments, see Section 9001.			
Hydraulics	Tab 8		
Section Index - Hydraulics		6-43650	
Removal and Installation of Hydraulic Components	8001	6-43881	
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-43511	
Cleaning the Hydraulic System	8003	7-49640	
Hydraulic Pump	8004	7-14761	
Loader Control Valve	8005	7-11223	
Cylinders	8006	7-50880	
Three Point Hitch Control Valve	8007	6-43670	
Accumulator for Machines with Optional Ride Control	8009	7-52450	
Solenoid Valve for Machines with Optional Ride Control	8010	7-14561	
Flow Control Valve	8011	6-4389	
Lock Valve	8012	6-43900	
Flow Control Priority Valve	8013	6-76990	
Mounted Equipment	Tab 9		
Section Index - Mounted Equipment		6-43660	
Pedals and Levers	9001	6-43520	
Air Conditioning Troubleshooting For Systems With R-134a Refrigerant	9002	7-50091	
Air Conditioning System Gauges and Testing For Systems With R-134a Refrigerant	9003	7-50901	
Air Conditioning System Service For Systems With R-134a Refrigerant	9004	7-51030	
Air Conditioning Components Service For Systems With R-134a Refrigerant	9005	7-51050	
Loader	9006	6-42110	
ROPS Cab and Canopy	9007	7-14800	
Standard and Mechanical Suspension Seat	9009	6-42140	
Schematics			
Electric and Hydraulic Schematic Foldout P.I.N. JJG0301854 and Before	In Rear Pocket	6-43530	
Electric and Hydraulic Schematic Foldout P.I.N. JJG0301855 and After	In Rear Pocket	6-77010	

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluid and Lubricants	
Metric Conversion Chart	
Loctite Product Chart	

Section 1001

STANDARD TORQUE SPECIFICATIONS

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$