

588 crawler and wheeled hydraulic excavators

Table of contents

DIVISION : SECTION	SECTION NO	REFERENCE NO
1 GENERAL INFORMATION		
Safety, General Information and Standard Torque Settings.....	1001	7-56942GB
Specifications (Crawler Excavators)	1002	7-80591GB
Specifications (Wheeled Excavators)	1002	7-80601GB
2 ENGINE		
Engine removal and installation	2002	7-80610GB
Radiator and oil cooler	2003	7-80621GB
Engine specifications	2401	**
Cylinder head and valve assembly	2415	**
Short engine block	2425	**
Lubrication system	2445	**
Cooling system	2455	**
Turbocharger.....	2465	**
Turbocharger troubleshooting	2565	**
3 FUEL SYSTEM		
Circuit and fuel filter	3410	**
CAV injection pump.....	3411	**
BOSCH injection pump	3412	**
Fuel injector	3412	**
BOSCH ANEROID injection pump.....	3416	**
4 ELECTRICAL SYSTEM		
Electrical schematics (Crawler Excavators) - before November 99.....	4001	7-80630GB
Electrical schematics (Wheeled Excavators) - before November 99	4001	7-80640GB
Electrical schematics (Crawler Excavators)	4001	7-26571GB
Electrical schematics (Wheeled Excavators)	4001	7-26541GB
Starter motor	4003	7-58691GB
Alternator	4004	7-58701GB
Anti - start device tool	4020	7-29370GB
5 UNDERCARRIAGE		
Set of tracks (Crawler excavators).....	5002	7-80650GB
6 DRIVE TRAIN		
Travel reduction gear and brake (Crawler excavators)	6002	7-80661GB
Swing reduction gear and brake	6003	7-80671GB
Front axle and service brake (Wheeled excavators).....	6004	7-80681GB
Rear axle and service brake (Wheeled excavators)	6005	7-80691GB
Gearbox and parking brake (Wheeled excavators)	6008	7-80701GB
Twin Wheels.....	6020	7-26170GB
7 UNDERCARRIAGE HYDRAULICS		
Hydraulic travel motor (Mono-speed crawler excavators).....	7002	7-80711GB
Hydraulic travel motor (Two-speed crawler excavators)	7003	7-80721GB
Hydraulic travel motor (Two-speed wheeled excavators)	7003	7-80731GB
Travel control valve	7030	7-80741GB
Travel, stabilizer or dozer blade control valve (Wheeled excavators).....	7031	7-84151GB
Steering, stabilizer, dozer blade and axle locking cylinders (Wheeled excavators).....	7080	7-80761GB

** Refer to the Engine Service Manual

DIVISION/SECTION	SECTION NO	REFERENCE NO
8 UPPERSTRUCTURE HYDRAULICS		
Checks, adjustments and hydraulic schematics (Wheeled Excavators).....	8001	7-80771GB
Checks, adjustments and hydraulic schematics (Wheeled excavators)	8001	7-80781GB
Hydraulic swivel (Crawler Excavators).....	8011	7-80791GB
Hydraulic swivel (Wheeled Excavators).....	8011	7-80801GB
Hydraulic pumps	8020	7-80810GB
Attachment control valve.....	8031	7-80821GB
Swing control valve	8033	7-80831GB
Rotary control valve (Orbitrol) (Wheeled excavators).....	8037	7-80841GB
Hydraulic swing motor and safety forced-feed block	8040	7-80851GB
Attachment and swing control block (Control lever).....	8050	7-80261GB
Travel and option control block (Pedal valve, wheeled excavators)	8051	7-80270GB
Travel hand control block (Inching, crawler excavators)	8052	7-80870GB
Direction of travel inverter control block (Inching, wheeled excavators)	8053	7-80290GB
Travel control block (Wheeled excavators)	8054	7-80301GB
Brake unit (Wheeled excavators).....	8060	7-80882GB
Parking brake solenoid valve	8061	7-80952GB
Electro-control valve block (Crawler excavators).....	8070	7-80891GB
Electro-control valve block (Wheeled excavators)	8071	7-80901GB
Attachment cylinders.....	8080	7-80910GB
Safety valves.....	8081	7-26640GB
Large format hydraulic and electrical schematic (Crawler excavators).....	Kit	7-26800GB
Large format hydraulic and electrical schematic (Wheeled excavators).....	Kit	7-26790GB
9 UPPERSTRUCTURE		
Upperstructure and turntable bearing	9002	7-58932GB
Cab	9004	7-58191GB

NOTA : La Société CASE se réserve le droit de modifier sans avis préalable les caractéristiques et la conception de la machine sans obligation d'y procéder sur la machine déjà vendue.

La description des modèles déclinés dans ce manuel a été établie à partir des caractéristiques techniques connues à la date de conception de ce document.

Section

1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

SAFETY.....	3
TWIN WHEELS	5
Safety rules	5
Safety instructions.....	5
GENERAL INFORMATION	6
CORRECT USE OF TORQUE WRENCHES	7
HARDWARE TIGHTENING ORDER	8
STANDARD SCREW A TORQUE SPECIFICATIONS.....	9
Correct screw identification	9
METAL CAP REFERENCES.....	10
PLASTIC PLUG AND CAP REFERENCE CHART	11

SAFETY



WARNING: This symbol means **WARNING ! BE VIGILANT ! YOUR SAFETY IS AT RISK**. The message that follows the symbol contains important safety information. Read it carefully. Be sure you understand the possible risks of injury or even death.

To avoid all risks, always follow the safety notes contained in this section and throughout this manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags, Part Number 321-4614, are available from your service parts supplier.



PDG0328



WARNING: Read the Operator's Manual carefully and make sure you understand how to operate the controls correctly.



WARNING: Never operate the machine and attachment controls unless you are seated in the operator's seat. If you are not in the operator's seat, you run the risk of serious injury.



WARNING: The machine is built to carry the operator only. Do not allow passengers to ride on the machine.



WARNING : Prior to starting up the engine read the safety messages contained in the operator's manual carefully. Read all safety stickers on the machine. Have people move back from the machine. Learn how to use the controls before starting up the machine. It is your responsibility to follow the manufacturer's instructions on how to operate and maintain the machine. It is your responsibility to follow applicable rules and regulations. Service and Operator's Manuals are available from your J.I. Case Dealer.



WARNING: If you wear loose clothing or if you omit to use safety equipment for your work, you risk injury. Always wear clothes that do not risk getting caught in the machine. Other safety equipment may be necessary, in particular : helmets, safety shoes, ear plugs, safety glasses, protection mask, thick gloves and reflecting clothes.



WARNING: When working close to the fan with the engine running, avoid wearing loose clothing and operate with extreme caution.



WARNING: When checking the hydraulic circuits, follow procedures to the letter. **DO NOT CHANGE** procedures.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$