

**621G
721G
Stage IV
Wheel Loader**

SERVICE MANUAL

Part number 51428211
English
November 2017
© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

621G WHEEL LOADER XR-EH, NEW CAB TIER4B MULTIP., 621G WHEEL LOADER XR-EH, NEW CAB TIER4B, 621G WHEEL LOADER XT-EH, NEW CAB TIER4B, 621G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B MULTIP., 621G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B, 721G WHEEL LOADER XR EH, New Cab TIER 4B, 721G WHEEL LOADER XR-EH, NEW CAB TIER4B MULTIP., 721G WHEEL LOADER XT EH, New Cab TIER 4B, 721G WHEEL LOADER ZBAR EH, New Cab TIER 4B, 721G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B MULTIP.

Link Product / Engine

Product	Market Product	Engine
621G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B	Europe	F4HFE613W*B003
621G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B MULTIP.	Europe	F4HFE613W*B003
621G WHEEL LOADER XT-EH, NEW CAB TIER4B	Europe	F4HFE613W*B003
621G WHEEL LOADER XR-EH, NEW CAB TIER4B	Europe	F4HFE613W*B003
621G WHEEL LOADER XR-EH, NEW CAB TIER4B MULTIP.	Europe	F4HFE613W*B003
721G WHEEL LOADER ZBAR EH, New Cab TIER 4B	Europe	F4HFE613T*B002
721G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B MULTIP.	Europe	F4HFE613T*B002
721G WHEEL LOADER XT EH, New Cab TIER 4B	Europe	F4HFE613T*B002
721G WHEEL LOADER XR EH, New Cab TIER 4B	Europe	F4HFE613T*B002
721G WHEEL LOADER XR-EH, NEW CAB TIER4B MULTIP.	Europe	F4HFE613T*B002

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.3
[10.400] Engine cooling system	10.4
[10.414] Fan and drive	10.5
[10.310] Aftercooler.....	10.6
[10.304] Engine lubrication system.....	10.7
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.105] Powershift transmission hydraulic components	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.109] Transmission cooler and lines.....	21.5
[21.700] Torque converter	21.6
[21.182] Differential.....	21.7
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2

[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.359] Main control valve	35.4
[35.357] Pilot system	35.5
[35.204] Remote control valves	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
[35.820] Hydraulic driven cooling fans	35.8
[35.355] Hydraulic hand control	35.9
[35.701] Front loader arm hydraulic system	35.10
[35.723] Front loader bucket hydraulic system	35.11
[35.734] Tool quick coupler hydraulic system	35.12
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
[41.910] Auxiliary steering	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$