

**AXIAL-FLOW® 5130
AXIAL-FLOW® 6130
AXIAL-FLOW® 7130**
Combine

PIN YDG009296 and above

SERVICE MANUAL

Part number 47506838

English

April 2013

Copyright © 2013 CNH America LLC. All Rights Reserved.





SERVICE MANUAL



AXIAL-FLOW 5130 [YDG009296 -]

AXIAL-FLOW 6130 [YDG009296 -]

AXIAL-FLOW 7130 [YDG009296 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.254] Intake and exhaust manifolds and muffler	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.418] Rotary screen	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.145] Gearbox internal components.....	21.2
[21.182] Differential.....	21.3
Front axle system	25
[25.310] Final drives	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.124] Final drive hub, steering knuckles, and shafts	27.2
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.202] Hydrostatic transmission	29.2
[29.204] Reservoir, cooler, and lines	29.3
[29.218] Pump and motor components.....	29.4

Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.220] Auxiliary hydraulic pump and lines	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.322] Regulated/Low pressure system	35.6
[35.359] Main control valve	35.7
[35.410] Header or attachment height system	35.8
[35.440] Grain tank unload system	35.9
[35.536] Crop processor system	35.10
[35.760] Header reverser drive	35.11
[35.796] Chaff spreader control	35.12
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump	41.4
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.300] Cab pressurizing system	50.1
[50.200] Air conditioning	50.2
[50.100] Heating	50.3
[50.104] Ventilation	50.4

Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.031] Parking brake electrical system.....	55.7
[55.036] Hydraulic system control	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.201] Engine starting system.....	55.11
[55.202] Cold start aid	55.12
[55.301] Alternator.....	55.13
[55.302] Battery.....	55.14
[55.405] External lighting switches and relays	55.15
[55.408] Warning indicators, alarms, and instruments	55.16
[55.421] Feeding control system	55.17
[55.423] Cleaning control system.....	55.18
[55.426] Harvest material flow control system.....	55.19
[55.518] Wiper and washer system.....	55.20
[55.520] Cab harvesting controls	55.21
[55.610] Ground speed control	55.22
[55.628] Threshing electrical control	55.23
[55.640] Electronic modules	55.24
[55.661] Cab header controls.....	55.25
[55.662] Header height control	55.26
[55.834] Sieve electric control	55.27
[55.836] Rotary separator control	55.28

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$