



SERVICE MANUAL
CRAWLER EXCAVATOR
CX130B
TIER 3

84139197B NA
Replaces 84139197A NA

Issued 01May 08
Revised 01Nov 08

CRAWLER EXCAVATOR CX130B SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27691NA
General specifications and special torque setting	1002	SC130B1002-1NA
2 ENGINE		
Removal and installation of the engine.....	2000	SM130B2000-0EN
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler.....	2001	SM130B2001-0EN
Removal and installation of the turbo charger	2004	SM130B2004-0EN
Removal and installation of EGR cooler and EGR valve	2005	SM130B2005-0EN
Removal and installation of the engine hood.....	2006	SM130B2006-0EN
Engine specifications.....	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Removal and installation of the fuel tank.....	3001	SM130B3001-0EN
Removal and installation of the supply pump and common rail	3004	SM130B3004-0EN
Removal and installation of the injectors	3005	SM130B3005-0EN
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Electrical and engine functions and service support	4001	SC130B4001-0NA
Removal and installation of the starter motor	4004	SM130B4004-0EN
Removal and installation of the alternator	4005	SM130B4005-0EN
Electrical equipment and electrical circuit diagrams.....	4020	SC210B4020-1NA
Engine error code (DTC)	4021	SM130B4021-0EN
Main body error code (DTC).....	4022	SM130B4022-0EN
Troubleshooting, 4JJ1 engine.....	4023	SM130B4023-0EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	SM130B5001-0EN
Rollers	5003	SM130B5003-0EN
Take-up roller.....	5005	SM130B5005-0EN
6 DRIVE TRAIN		
Removal and installation of the drive motor and final drive transmission.....	6001	SM130B6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM130B6002-0EN
Removal and installation of the swing motor and swing reduction gear	6003	SM130B6003-0EN
Disassembly and assembly of the swing reduction gear	6004	SM130B6004-0EN
7 UNDERCARRIAGE HYDRAULICS		

* Consult the Engine Service Manual

8 UPPERSTRUCTURE HYDRAULICS

Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000	SM160B8000-ONA
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	SC130B8001-ONA
Removal and installation of the hydraulic reservoir	8002	SM130B8002-OEN
Removal and installation of the main hydraulic pump.....	8003	SM130B8003-OEN
Removal and installation of the main hydraulic control valve.....	8004	SM130B8004-OEN
Removal and installation of the attachment cylinders.....	8005	SM130B8005-OEN
Removal and installation of the hydraulic swivel.....	8006	SM130B8006-OEN
Removal and installation of the pilot blocs.....	8007	SM130B8007-OEN
Disassembly and assembly of the main hydraulic pump	8010	SM130B8010-OEN
Disassembly and assembly of the main hydraulic control valve	8011	SM130B8011-OEN
Disassembly and assembly of the attachment cylinders	8012	SM130B8012-OEN
Disassembly and assembly of the hand control levers	8013	SM130B8013-OEN
Disassembly and assembly of the foot control levers	8014	SM130B8014-OEN
Disassembly and assembly of the cushion valve.....	8016	SM130B8016-OEN
Removal and installation of the safety valve	8017	SM130B8017-OEN
Disassembly and assembly of the swing motor	8019	SM130B8019-OEN
Hydraulic functions	8020	SC130B8020-ONA
Hydraulic component functions.....	8030	SC130B8030-ONA

9 UPPERSTRUCTURE

Removal and installation of the counterweight	9002	SM130B9002-OEN
Removal and installation of the boom, dipper and bucket	9003	SM130B9003-OEN
Removal and installation of the seat.....	9004	SM130B9004-OEN
Removal and installation of the cab and cab equipment	9005	SM130B9005-OEN
Air conditioner functions and troubleshooting.....	9006	SC210B9006-1NA
Air conditioning unit	9007	SM130B9007-OEN
Air conditioning components.....	9009	SM130B9009-OEN
Large size hydraulic schematics	Pocket	87725726A
Large size electrical schematics	Pocket	87594014B

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section

1001

SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$