

# CX700 Crawler Excavators

## Table of Contents

| DIVISION/SECTION   | SECTION N° | REFERENCE N° |
|--|------------|--------------|
| <b>1 GENERAL INFORMATION</b>   |            |              |
| Safety, general information and standard torque data .....   | 1001       | 7-27691EN    |
| General specifications and special torque setting.....   | 1002       | 9-94060EN    |
| <b>2 ENGINE</b>  |            |              |
| Radiator and engine removal and installation .....   | 2001       | 9-94480EN    |
| Engine specifications .....  | *          |              |
| Disassembly and assembly of the engine.....  | *          |              |
| <b>3 FUEL SYSTEM</b>   |            |              |
| Fuel tank, removal and installation.....   | 3001       | 9-94470EN    |
| Fuel engine system.....  | *          |              |
| <b>4 ELECTRICAL SYSTEM</b>   |            |              |
| Electrical system, electrical and electronic troubleshooting.....  | 4001       | 9-94070EN    |
| Inspection and maintenance of batteries and connecting a booster battery....   | 4002       | 9-36830EN    |
| Computer and engine controller, removal and installation .....   | 4003       | 9-94510EN    |
| <b>5 UNDERCARRIAGE</b>   |            |              |
| Removal and installation of tracks .....   | 5001       | 9-36860EN    |
| Rollers.....   | 5003       | 9-94340EN    |
| Sprocket.....  | 5004       | 9-36890EN    |
| Idler wheel and tension shock absorber .....   | 5005       | 9-94350EN    |
| <b>6 DRIVE TRAIN</b>   |            |              |
| Travel-motor reduction gear assembly, removal and installation .....   | 6001       | 9-94440EN    |
| Travel hydraulic motor, disassembly and assembly.....  | 6002       | 9-94620EN    |
| Swing reduction gear, removal and installation .....   | 6003       | 9-94450EN    |
| Swing reduction gear, disassembly and assembly.....  | 6004       | 9-42630EN    |
| Travel reduction gear, disassembly and assembly .....  | 6005       | 9-94610EN    |
| <b>7 UNDERCARRIAGE HYDRAULICS</b>  |            |              |
| <b>8 UPPERSTRUCTURE HYDRAULICS</b>   |            |              |
| Depressurising and decontaminating the hydraulic system, use of the<br>vacuum pump and bleeding the components ..... | 8000       | 9-94430EN    |
| Specifications, troubleshooting, checks and hydraulic pressure settings.....   | 8001       | 9-94080EN    |
| Hydraulic reservoir removal and installation .....   | 8002       | 9-94490EN    |
| Main hydraulic pump and pilot pumps, removal and installation .....  | 8003       | 9-94540EN    |
| Main hydraulic control valve, removal and installation .....   | 8004       | 9-94500EN    |
| Attachment cylinders, removal and installation .....   | 8005       | 9-94810EN    |
| Hydraulic swivel, removal and installation.....  | 8006       | 9-94600EN    |
| Pilot blocs, removal and installation .....  | 8007       | 9-94520EN    |
| Swing motor, removal and installation.....   | 8008       | 9-94420EN    |
| Main hydraulic pump, disassembly and assembly .....  | 8010       | 9-94590EN    |
| Main hydraulic control valve, disassembly and assembly .....   | 8011       | 9-94780EN    |
| Attachment cylinders, disassembly and assembly .....   | 8012       | 9-94580EN    |
| Hand control levers, disassembly and assembly .....  | 8013       | 9-94630EN    |
| Foot control levers, disassembly and assembly.....   | 8014       | 9-40991EN    |
| Eight-solenoid valves, disassembly and assembly .....  | 8015       | 9-42521EN    |
| Caution valve, disassembly and assembly.....   | 8016       | 9-94530EN    |
| Safety valve.....  | 8017       | 9-94690EN    |
| Hydraulic swivel, disassembly and assembly.....  | 8018       | 9-94410EN    |
| Swing motor, disassembly and assembly .....  | 8019       | 9-42530EN    |

| DIVISION/SECTION   | SECTION N° | REFERENCE N° |
|--|------------|--------------|
| Hydraulic functions.....   | 8020       | 9-94090EN    |
| Fan motor, removal and installation .....                              | 8022       | 9-94660EN    |
| Fan motor, disassembly and assembly .....                              | 8023       | 9-94670EN    |
| Fan pump, removal, disassembly, assembly and installation .....        | 8024       | 9-94680EN    |
| Hydraulic component functions.....                                     | 8030       | 9-94130EN    |
| <b>9 UPPERSTRUCTURE</b>  |            |              |
| Upperstructure, turntable and counterweight.....                       | 9002       | 9-94560EN    |
| Boom, dipper and bucket .....  | 9003       | 9-94570EN    |
| Seat and seat belt .....   | 9004       | 9-40960EN    |
| Cab and cab equipment.....   | 9005       | 9-94650EN    |
| Air conditioning troubleshooting.....                                  | 9006       | ██████████   |
| Air conditioning unit disassembly and assembly.....                    | 9007       | 9-94640EN    |
| Air conditioning servicing .....                                       | 9008       | ██████████   |
| Air conditioning components.....                                       | 9009       | ██████████   |
| Removal and installation attachment, counterweight and side fram ..... | 9010       | 9-94140EN    |
| Large size hydraulic schematic .....                                   | Pocket     | 9-93940EN    |
| Large size electrical schematic.....                                   | Pocket     | 9-93930EN    |

\* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

# Section

# 1001

## SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

## TABLE OF CONTENTS

|   |   |
|---|---|
| GENERAL INFORMATION .....                         | 3 |
| SAFETY .....                                      | 4 |
| STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS..... | 6 |



**WARNING :** *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

## GENERAL INFORMATION

### Cleaning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

### Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

### Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. DO NOT DRY BEARINGS WITH COMPRESSED AIR.

### Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

### Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

### Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

### Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

### Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

### Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$