

FARMALL® 55C
FARMALL® 65C
FARMALL® 75C
Tractor

SERVICE MANUAL

Part number 84419878A

English

October 2011



INTRODUCTORY NOTES

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *The pages of future updates will be identified by the same print number followed by an additional digit: standard manual first edition 84419878A - 1st update 84419878A1 - 2nd update 84419878A2 - etc. The pages of the update can replace or supplement the pages of the standard manual; the necessary information for the procedure to add or replace the pages is given on the title page of the update. The publication will be completed with an appropriate index. If it is necessary to issue a new updated manual (2nd edition) it will have document number 84419878B, this indicates that the manual is composed of the standard version 84419878A completed with all the updates: 1st update 84419878A1 - 2nd update 84419878A2 - etc.*
- *The information contained in this manual was current on the date printed on each section. As CASE IH constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries. In the event of conflicting information, consult the CASE IH Sales and Service Departments.*

IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by CASE IH service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer. In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

No part of the text or illustrations may be copied



PRINTED IN FRANCE

© CNH GLOBAL N.V.

Print no. **84419878A** - 06 - 2011

CONTENTS

	Page	Date		Page	Date
00 - GENERAL GUIDELINES					
General instructions	1-2	06-11			
Safety regulations	3-4-5	06-11			
Tractor refuelling	6	06-11			
10 - ENGINE					
CHAPTER 1					
Summary	1	06-11			
General specifications	2-3	06-11			
Engine removal-installation	4-5-6-7-8-9-10	06-11			
Removal-Installation fuel tank	11-12	06-11			
Coolant radiator removal-installation	13-14-15	06-11			
Accelerator control cable adjustment	16	06-11			
18 - CLUTCH					
Main Data	1	06-11			
Torque Specifications	2	06-11			
Tools	2	06-11			
Sections	3	06-11			
Troubleshooting	4	06-11			
Removal-Installation - clutch	5	06-11			
Clutch Overhaul	6-7-8-9	06-11			
Checks and measurements - clutch	10-11	06-11			
Adjustments - clutch disengagement levers	11	06-11			
Adjustments - clutch pedal	12	06-11			
Sectional view of PTO clutch servo control	13	06-11			
Description and operation of PTO servo control	14-15	06-11			
PTO servo control adjustment	16	06-11			
PTO engaged switch adjustment	17	06-11			
21 - GEAR TRANSMISSION					
Chapter 1 - Mechanical transmission					
Main Data	1-2	06-11			
Torque Specifications	2-3	06-11			
Tools	4	06-11			
Sections	5-6-7	06-11			
Description and operation	8	06-11			
Troubleshooting	8-9	06-11			
Removal-Installation - rear transmission - gearbox casing	10-11-12-13	06-11			
Disassembly-Assembly - transmission-gearbox casing	17-18	06-11			
Disassembly-Assembly - clutch casing	19-20-21	06-11			
Sealing compound application diagram	22	06-11			
Transmission oil cooler removal-installation	23	06-11			
CHAPTER 3 - Power Shuttle transmission					
Main Data	1-2	06-11			
Torque Specifications	3	06-11			
Tools	4	06-11			
Sections	5-6-7	06-11			
Description and operation .	8	06-11			
Troubleshooting	8	06-11			
Disassembly-Assembly - clutch casing	9-10-11	06-11			
Main clutch adjustments . .	12	06-11			
23 - DRIVE LINES					
Main Data	1	06-11			
Torque Specifications	2	06-11			
Sections	3-4	06-11			
Description and operation .	5	06-11			
Troubleshooting	6	06-11			
Drive shafts and guard. Disassembly - Assembly . . .	7	06-11			

	Page	Date		Page	Date
Removal-Installation - drive gear casing	8	06-11	Adjustments - bevel drive	14-15-16	06-11
25 - FRONT AXLE MECHANICAL TRANSMISSION			Removal - Installation side gear casing	17-18-19-20	06-11
CHAPTER 1 - Front mechanical transmission			Disassembly-Assembly - drive wheel shaft	21-22	06-11
Main Data	1-2	06-11	31 - POWER TAKE-OFF		
Torque Specifications	3-4	06-11	CHAPTER 1 - Mechanical power take-off		
Tools	5	06-11	Main Data	1-2	06-11
Sections	6	06-11	Torque Specifications	3-4	06-11
Removal-Installation - front axle	8-9-10	06-11	Sections	5-6	06-11
Front axle. Disassembly - Assembly	11-12-13-14-15-16-17-18	06-11	Description and operation .	7-8	06-11
Replacing steering knuckle pins and bearings	19	06-11	Troubleshooting	8	06-11
Adjustments - steering knuckle bearings	20-21	06-11	33 - BRAKES		
Adjustments - bevel drive	22-23-24-25-26-27-28	06-11	Main Data	1-2	06-11
Overhaul - front differential	29	06-11	Torque Specifications	2	06-11
LIM-SLIP self-locking differential	30-31	06-11	Sections	3	06-11
Checking leading wheel alignment	32	06-11	Description and operation .	4	06-11
Disassembly-Assembly - front epicyclic final drive ..	33-34	06-11	Troubleshooting	5-6	06-11
27 - REAR MECHANICAL TRANSMISSION			Removal-Installation - service brake	7	06-11
Main Data	1-2	06-11	Removal-Installation - service brake pump	8-9	06-11
Torque Specifications	3-4	06-11	Adjustments - service brake pedals travel	10	06-11
Tools	5	06-11	Service brake circuit air bleeding	11-12	06-11
Sections	6-7	06-11	35 - HYDRAULIC SYSTEMS		
Description and operation .	8	06-11	CHAPTER 1 - Rear mechanical hydraulic lift		
Troubleshooting	8	06-11	Main Data	2	06-11
Disassembly-Assembly - transmission-gearbox casing	9-10-11-12	06-11	Torque Specifications	2-3	06-11
Adjustments - differential lock engagement sleeve position	13	06-11	Tools	3	06-11
			Sections	4	06-11
			Troubleshooting	5	06-11
			Description and operation .	6-7-8-9-10-11	06-11
			Lift internal controls. Disassembly - Assembly	12-13-14-15	06-11

	Page	Date		Page	Date
Draft reading unit Disassembly - Assembly	16-17	06-11	Bucket control cylinder removal-installation	15	06-11
Lift arms shaft. Disassembly - Assembly	18-19	06-11	Replacement of pins	16	06-11
Removal-Installation - lift control valve	20	06-11			
Adjusting the lift	21-22-23	06-11			
CHAPTER 2 - Open centre system auxiliary control valves			41 - STEERING		
Main Data	2	06-11	CHAPTER 1 - Steering		
Tools	2	06-11	Main Data	2	06-11
Torque Specifications	2	06-11	Torque Specifications	2	06-11
Sections	3-4	06-11	Tools	3	06-11
Description and operation .	5-6-7-8	06-11	Description and operation .	4-5-6	06-11
Auxiliary control valves. Disassembly - Assembly ...	9-10-11	06-11	View of hydrostatic steering control valve components .	7	06-11
CHAPTER 3 - Trailer brakes auxiliary control valves			Troubleshooting	8-9	06-11
Sections	1	06-11	Replacement - hydrostatic steering wheel	10	06-11
Description and operation .	1-2-3-4-5-6-7	06-11	Removal-Installation - hydrostatic steering control valve	11-12	06-11
Troubleshooting	8-9-10	06-11	Disassembly-Assembly - hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	06-11
CHAPTER 8 - Front Loader			Hydrostatic steering control valve bench testing	29-30	06-11
Main Data	1	06-11	Pressure relief valve testing	31	06-11
Sections	2	06-11	Steering control cylinder. Removal - Installation	32-33	06-11
Torque Specifications	3	06-11	Steering control cylinder. Disassembly-Assembly ..	34-35	06-11
Troubleshooting	4-5	06-11			
Parking the front loader ...	6	06-11	50 - CAB HVAC SYSTEM		
Front loader arm connection bracket Removal-Installation	7	06-11	Safety regulations	2	06-11
Replacement of control struts (mod. MSL)	8	06-11	Main Data	3	06-11
Replacement of triangular articulation levers (mod. MSL)	9	06-11	Tools	4	06-11
Bucket support device removal-installation	10	06-11	Operating principles	5	06-11
Position indicator disassembly-assembly	11	06-11	Conditioning system components	6-7-8-9-10	06-11
Bushing replacement	12-13	06-11	Cab controls	11-12-13	06-11
Loader cylinder removal-installation	14	06-11	Testing operation and cooling	14-15	06-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$