
FARMALL 85U, FARMALL 95U, FARMALL 105U REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	4
SECTION 21 - TRANSMISSIONS	5
SECTION 23 - DRIVE LINES	10
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	11
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	12
SECTION 31 - POWER TAKE-OFF	14
SECTION 33 - BRAKING SYSTEM	16
SECTION 35 - HYDRAULIC SYSTEMS	18
SECTION 41 - STEERING	27
SECTION 44 - AXLES AND WHEELS	28
SECTION 50 - CAB AIR CONDITIONING SYSTEM	29
SECTION 55 - ELECTRICAL SYSTEM	31
SECTION 90 - BODYWORK AND DRIVING POSITION	53

The following pages are the collation of the contents pages from each section and chapter of the Farmall 85U, Farmall 95U, Farmall 105U Repair manual. Complete Repair part # 87758608.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the Farmall 85U, Farmall 95U, Farmall 105U Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87758609

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87758609

Chapter 1 - Engine

CONTENT

Section	Description	Page
	Specifications	3
	Fuel System Data	6
	Torques	7
	Special Tools	10
	Sectional Views	11
	Troubleshooting	12
	Overhaul	16
	Engine	16
	Removal	16
	Installation	36

SECTION 10 - ENGINE

BOOK 1 - 87758609

Chapter 1 - Engine (Continued)

CONTENT

Section	Description	Page
	Crankshaft Front Seal	38
	Removal	38
	Installation	40
	Crankshaft Rear Seal	41
	Removal	41
	Installation	42
	Valve Tappet and Rocker Arm Clearance	43
	Adjustment	43
	Assembly	46
	Engine Injector	46
	Removal	46
	Installation	48
	Bosch Injection Pump	49
	Removal	49
	Installation	53
	Injection Pump Timing	54
	Disassembly	55
	Assembly	56
	Fuel Circuit Air Bleeding	60
	Coolant Pump	60
	Removal	60
	Installation	61
	Thermostat Valve	62
	Removal	62
	Installation	63
	Radiator	64
	Removal	64
	Installation	71
	Coolant Pump and Generator Drive Belts	72
	Adjusting Tension	72

SECTION 18 - CLUTCH

BOOK 1 - 87758609

Chapter 1 - Clutch

CONTENT

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	3
	Sectional Views	4
	Longitudinal Section of 12" LUK Clutch	4
	Electrohydraulic Power Take-off	4
	Longitudinal Section of 12"/12" LUK Clutch	4
	Mechanical Power Take-off	4
	Longitudinal Section Through Flexible Coupling	5
	Power Shuttle Unit	5
	Troubleshooting	6
	Overhaul	7
	Checks, Measurements and Repairs - 12"/12" Dual Clutch	7
	Minimum Permissible Dimensions After Refacing of Parts Subject to Wear in the 12"/12" Dual Clutch	7
	Main Transmission Clutch Release	8
	Adjustment	8
	Clutch	10
	Removal	10
	Installation	11
	Dual Clutch 12"/12"	12
	Disassembly	12
	Assembly	16
	Coplanarity Adjustment of Dual Clutch Release Levers	16
	Single Disk Clutch	17

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

Chapter 1- Shuttle

CONTENT

Section	Description	Page
	Specifications	2
	Transmission Diagrams	3
	Torques	4
	Special Tools	5
	Sectional Views	5
	Description and Operation	9
	Troubleshooting	9
	Overhaul	10
	Clutch-Reverser Casing	10
	Disassembly	10
	Installation	14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$