
JX1060C, JX1070C, JX1075C, JX1085C, JX1095C REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSIONS	12
SECTION 23 - MFD TRANSFER BOX	15
SECTION 25 - FRONT AXLE (MFD)	15
SECTION 27 - REAR MECHANICAL DRIVE	16
SECTION 31 - MECHANICAL POWER TAKE-OFF	16
SECTION 33 - BRAKING SYSTEM	17
SECTION 35 - HYDRAULIC SYSTEM	18
SECTION 41 - STEERING	20
SECTION 44 - AXLES AND WHEELS	21
SECTION 50 - CAB AIR CONDITIONING SYSTEM	21
SECTION 55 - ELECTRICAL SYSTEM	22
SECTION 90 - PLATFORM, CAB, BODYWORK	28

The following pages are the collation of the contents pages from each section and chapter of the JXC Series Repair manual. Complete Repair part # 87393635.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JXC Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87393636

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Lubricants and Fluids	25

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 1 - Engine (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	10
	Tightening Torques	12
	Sectional Views	13
	Engine Troubleshooting	15
	Overhaul	19
10 001 10	Engine	19
	Removal	19
	Installation	20
10 001 30	Compression Test	21
10 001 54	Disassembly	22
	Assembly	32

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 1 - Engine (Three-Cylinder) (Continued)

CONTENTS

Section	Description	Page
	Checks, Dimensions and Repairs	41
	Cylinder Block	41
	Crankshaft	43
	Main Bearings	45
	Flywheel	46
	Connecting Rods	47
	Pistons	48
	Valves	51
	Tappets	51
	Camshaft	52
	Valve Timing	53
	Cylinder Head	54
	Valve Seats	55
10 101 53	Valve Guides	56
10 101 60	Injector Sleeves	59
10 102 70	Crankshaft Front Oil Seal	61
10 106 12	Valve/Rocker Arm	63
10 254 44	Exhaust Pipe	65
	Removal	65
	Installation	65

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 2 - Cooling System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermometer	5
	Thermostat	5
	Overhaul	6
10 402 11	Coolant Pump	6
	Removal	6
	Installation	7
10 402 28	Disassembly	8
	Assembly	8
10 414 10	Drive Belt Tension Adjustment	9
10 402 30	Cooling System Thermostat	10
	Removal	10
	Installation	11
10 406 10	Radiator	12
	Removal	12
	Installation	15

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 3 - Lubrication System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional View	4
	Description and Operation	5
	Oil Filter	5
	Low Oil Indicator	5
	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 4 - Fuel System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Models	6
	All Models	8
	Overhaul	9
10 216 10	Fuel Tank	9
	Removal	9
	Installation	10
10 218 30	Fuel Injectors	11
	Removal	11
	Installation	12
10 246 14	Injection Pump	13
	Removal	13
	Lock Timing the Injection Pump On a Workbench	19
	Installation	24
	Check Fuel Injection Pump Timing with Pump Installed on Tractor	25

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$