
JX1075N - JX1095N REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - TRANSMISSIONS	9
SECTION 23 - MFD TRANSFER BOX AND AUTO MFD	10
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	14
SECTION 31 - MECHANICAL POWER TAKE-OFF	15
SECTION 33 - BRAKES	16
SECTION 35 - HYDRAULIC SYSTEM	17
SECTION 41 - STEERING	19
SECTION 44 - FRONT AXLE - 2WD	20
SECTION 50 - CAB CLIMATE CONTROL	21
SECTION 55 - ELECTRICAL SYSTEM	23
SECTION 90 - CAB, PLATFORM, AND BODYWORK	29

The following pages are the collation of the contents pages from each section and chapter of the JX1075N - JX1095N Tractor Repair manual. Complete Repair part # 87352289.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JX1075N - JX1095N Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87352290

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Engine Type	3
	Timing System	4
	Valve Timing Gears	4
	Crankcase and Cylinder Block	5
	Crankshaft and Bearings	6
	Connecting Rod	7
	Piston	8
	Tappet	8
	Rocker Arm and Valve	9
	Rotating Counterweight Dynamic Balancer	9
	Cylinder Head	10

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Tightening Torques	11
	Special Tools	12
	Description and Operation	14
	Sectional Views	14
	Troubleshooting	16
	Overhaul	20
	Engine	20
10 001 10	Removal	20
	Installation	26
10 001 30	Compression Test	27
10 001 54	Disassembly	28
	Assembly	44
	Crank, Main Bearings and Thrust Rings	44
	Rear Cover with Seal and Engine Flywheel	46
	Synchronizing the Timing Gears	47
	Bosch Injection Pump	48
	Cylinder Head	48
	Valve and Rocker Arm	49
	Fuel Injectors	50
	Cylinder Block	51
	Inspection	51
	Crankshaft and Main Bearings	53
	Crankshaft Inspection	53
	Main Bearing Inspection	55
	Main Bearing Cap Bolt Inspection	55
10 102 70	Crankshaft Front Oil Seal	56
	Removal	56
	Installation	57
	Engine Flywheel	58
	Refacing	58
	Flywheel Bolts	58
	Inspection	58

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Connecting Rods	59
	Inspection	59
	Pistons with Rings, Pins, Connecting Rods, Big End Caps and Bearings	60
	Inspection	60
	Assembly	61
	Installation	62
	Valves, Tappets and Camshaft	64
	Valves, Grinding	64
	Dimensions (mm) of Valves and Valve Guides	64
	Valve Timing Check	65
	Tappets Inspection	65
	Camshaft Inspection	66
	Cylinder Head	67
	Inspection	67
	Valve Seats, Grinding	68
10 101 53	Valve Guides, Replacement	69
	Rotating Counterweight Dynamic Balancer	72
	Assembly	73
	Installation	73
10 254 44	Exhaust Pipe	74
	Removal	74
	Installation	74

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 2 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Description and Operation	4
	Sectional Views	4
	Overhaul	6
	Thermostat	6
	Flushing the System (Models without Cabs)	6
	Flushing the System (Models with Cabs)	7
	Coolant Thermometer	8
	Coolant Pump Drive Belt	8
	Adjustment	8
10 402 11	Coolant Pump	9
	Removal	9
	Installation	10
10 402 28	Disassembly	10
	Assembly	11
10 402 30	Thermostat Valve	12
	Removal	12
	Installation	12
10 406 10	Radiator	13
	Removal	13
	Installation	14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$