
JX95 STRADDLE MOUNT REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	6
SECTION 21 - FRONT TRANSMISSION	7
SECTION 23 - MFD TRANSFER BOX	9
SECTION 25 - MFD AXLE	9
SECTION 27 - REAR TRANSMISSION	11
SECTION 31 - POWER TAKE-OFF	12
SECTION 33 - BRAKES	13
SECTION 35 - HYDRAULIC SYSTEMS	14
SECTION 41 - STEERING	16
SECTION 44 - FRONT AXLE AND WHEELS (2WD)	17
SECTION 55 - ELECTRICAL SYSTEM	17
SECTION 90 - BODYWORK	21

The following pages are the collation of the contents pages from each section and chapter of the JX95 Straddle Mount Repair manual. Complete Repair part # 87519319.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JX95 Straddle Mount Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87519320

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	17
	Ecology and the Environment	20
	Minimum Hardware Tightening Torques	21
	Federal Emissions Warranty	23
	California Emission Control Warranty Statement	24
	Lubricants and Fluids	26

SECTION 10 - ENGINE

BOOK 1 - 87519320

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Special Tools	11
	Tightening Torques	14
	Sectional Views	15
	Engine Troubleshooting	18
	Overhaul	22
	Engine	22
	Removal	22
	Installation	33
10 001 30	Compression Test	35
	Disassembly	36

SECTION 10 - ENGINE

BOOK 1 - 87519320

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Assembly	50
	Seal Installation	54
	Checks, Dimensions and Repairs	59
	Cylinder Block	59
	Crankshaft	61
	Main Bearings	63
	Flywheel	64
	Connecting Rods	65
	Pistons	66
	Valves	69
	Tappets	69
	Camshaft	70
	Valve Timing	71
	Cylinder Head	72
	Valve Seats	73
10 101 53	Valve Guides	74
10 101 60	Injector Sleeves	77
	Removal	77
	Crankshaft Front Oil Seal	79
	Removal	79
	Installation	84
	Valve Clearance	85
	Adjustment	85

SECTION 10 - ENGINE

BOOK 1 - 87519320

Chapter 2 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermostat	5
	Overhaul	6
	Water Pump	6
	Removal	6
10 402 28	Disassembly	9
	Assembly	9
	Installation	10
	Cooling System Thermostat	11
	Removal	11
	Testing	14
	Installation	14
	Radiator	15
	Removal	15
	Installation	18
10 414 10	Drive Belt Tension Adjustment	19

SECTION 10 - ENGINE

BOOK 1 - 87519320

Chapter 3 - Lubrication System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Oil Filter	5
	Low Oil Indicator	5
	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87519320

Chapter 4 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Description and Operation	5
	Fuel Injection Pump (Bosch)	5
	Overhaul	8
10 218 30	Fuel Injectors	8
	Removal	8
	Installation	10
10 246 14	Injection Pump	11
	Lock-time the Injection Pump on the Tractor	11
	Removing the Injection Pump from the Tractor	14
	Lock Timing the Injection Pump on a Workbench	18
	Installing the Injection Pump on the Tractor	23
	Check Fuel Injection Pump Timing with Pump Installed on Tractor	24

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$