

**MAXXUM 110 EP / MAXXUM 110 Multicontroller EP / MAXXUM CVT 110 /
MAXXUM 115 EP / MAXXUM 115 Multicontroller EP /
MAXXUM 120 EP / MAXXUM 120 Multicontroller EP / MAXXUM CVT 120 /
MAXXUM 125 EP / MAXXUM 125 Multicontroller EP /
MAXXUM 130 EP / MAXXUM 130 Multicontroller EP / MAXXUM CVT 130 /
MAXXUM 140 EP / MAXXUM 140 Multicontroller EP
Tier 4A
Tractor**

SERVICE MANUAL

Part number 47665854

1st edition English

March 2014

Replaces part number 47461571

CASE II
AGRICULTURE



SERVICE MANUAL

**MAXXUM 110 EP , MAXXUM 110 Multicontroller EP , MAXXUM 115 EP
 , MAXXUM 115 Multicontroller EP , MAXXUM 120 EP , MAXXUM 120
 Multicontroller EP , MAXXUM 125 EP , MAXXUM 125 Multicontroller EP ,
 MAXXUM 130 EP , MAXXUM 130 Multicontroller EP , MAXXUM 140 EP ,
 MAXXUM 140 Multicontroller EP , MAXXUM CVT 110 , MAXXUM CVT 120 ,
 MAXXUM CVT 130**

Link Product / Engine

Product	Market Product	Engine
MAXXUM CVT 110	North America	F4DFE413C*A
MAXXUM CVT 120	North America	F4DFE413B*A
MAXXUM CVT 130	North America	F4DFE413A*A
MAXXUM 110 EP	North America	F4DFE413E*A
MAXXUM 110 Multicontroller EP	North America	F4DFE413C*A
MAXXUM 115 EP	North America	F4DFE613F*A
MAXXUM 115 Multicontroller EP	North America	F4DFE613F*A
MAXXUM 120 EP	North America	F4DFE413D*A
MAXXUM 120 Multicontroller EP	North America	F4DFE413B*A
MAXXUM 125 EP	North America	F4DFE613E*A
MAXXUM 125 Multicontroller EP	North America	F4DFE613E*A
MAXXUM 130 EP	North America	F4DFE413C*A
MAXXUM 130 Multicontroller EP	North America	F4DFE413A*A
MAXXUM 140 EP	North America	F4DFE6132*A
MAXXUM 140 Multicontroller EP	North America	F4DFE6132*A

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines	10.4
[10.250] Turbocharger and lines.....	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.154] Power shuttle transmission internal components	21.3
[21.111] Semi-Powershift transmission	21.4
[21.133] Semi-Powershift transmission external controls	21.5
[21.103] Semi-Powershift transmission lubrication system.....	21.6
[21.152] Semi-Powershift transmission internal components	21.7
[21.504] Continuously Variable Transmission (CVT)	21.8
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.9
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.10
[21.507] Continuously Variable Transmission (CVT) internal components	21.11
[21.160] Creeper	21.12

[21.166] Overdrive	21.13
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
[31.142] Front Power Take-Off (PTO) control	31.4
[31.146] Front Power Take-Off (PTO)	31.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.204] Front axle brake	33.3
[33.220] Trailer brake hydraulic control.....	33.4
[33.224] Trailer brake pneumatic control	33.5
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$