



## MX Magnum - Service Manual Complete Table of Contents

| <b>Description</b>   | <b>Book Number</b> | <b>Section Number</b> | <b>Publication Number</b> |
|--|--------------------|-----------------------|---------------------------|
| Standard Torque Specifications   | 1                  | 1000                  | 6-14200                   |
| Safety, General Information/Maintenance Schedule                                   | 1                  | 1001                  | 6-14200                   |
| General Specifications and Special Torques   | 1                  | 1002                  | 6-14200                   |
| Engine Removal and Installation  | 1                  | 2002                  | 6-14200                   |
| Fuel Tank Removal and Installation   | 1                  | 3001                  | 6-14200                   |
| Electrical System (Prior to P.I.N. JAZ129933)<br>How it Works and Troubleshooting  | 2                  | 4001                  | 6-14210                   |
| Electrical System (P.I.N. JAZ129933 and After)<br>How it Works and Troubleshooting | 2A                 | 4001                  | 6-12741                   |
| Steering Column and Steering Hand Pump   | 3                  | 5001                  | 6-14221                   |
| Powershift Transmission System<br>How it Works and Troubleshooting                 | 3                  | 6000                  | 6-14221                   |
| Transmission Input Shaft and Drive Plate   | 3                  | 6001                  | 6-14221                   |
| Input Drop Box   | 3                  | 6002                  | 6-14221                   |
| Engine Frame and Input Drop Box Split  | 3                  | 6003                  | 6-14221                   |
| Speed to Range Transmission Split  | 3                  | 6005                  | 6-14221                   |
| Speed Transmission   | 3                  | 6006                  | 6-14221                   |
| Range Transmission to Rear Frame Split   | 3                  | 6007                  | 6-14221                   |
| Range Transmission   | 3                  | 6008                  | 6-14221                   |
| Transmission Control Valves and Inching Valve                                      | 3                  | 6009                  | 6-14221                   |
| Rear Frame   | 4                  | 6011                  | 6-14231                   |
| Hydraulic Pump Drive   | 4                  | 6012                  | 6-14231                   |
| Mechanical Front Drive MFD Control System<br>How it Works                          | 4                  | 6013                  | 6-14231                   |
| Differential Lock Control System<br>How it Works                                   | 4                  | 6014                  | 6-14231                   |
| MFD Clutch And Output Shaft Removal<br>Without Tractor Split                       | 4                  | 6015                  | 6-14231                   |
| MFD Drive Shaft  | 4                  | 6016                  | 6-14231                   |
| Limited Slip MFD Differential  | 4                  | 6017                  | 6-14231                   |

| <b>Description</b>   | <b>Book Number</b> | <b>Section Number</b> | <b>Publication Number</b> |
|--|--------------------|-----------------------|---------------------------|
| Locking MFD Differential   | 4                  | 6018                  | 6-14231                   |
| Rear Axle and Planetaries  | 4                  | 6019                  | 6-14231                   |
| Power Take Off Control System How it Works                                   | 4                  | 6020                  | 6-14231                   |
| MFD Planetary Hub, Steering Knuckle, and Axle Drive Shaft                    | 4                  | 6022                  | 6-14231                   |
| Suspension MFD Axle  | 4                  | 6023                  | 6-14231                   |
| Suspended MFD Axle System<br>How It Works and Troubleshooting                | 4                  | 6024                  | 6-14231                   |
| Brake Valve  | 4                  | 7001                  | 6-14231                   |
| Brake Cylinders  | 4                  | 7002                  | 6-14231                   |
| Park Brake   | 4                  | 7004                  | 6-14231                   |
| Trailer Brake System - How It Works  | 4                  | 7005                  | 6-14231                   |
| PTO Assembly - Single and Dual Speeds  | 4A                 | 6021                  | 7-86731                   |
| PTO Clutch Assembly<br>Single and Reversible Single Speeds                   | 4A                 | 6025                  | 6-17540                   |
| How to Read Symbols in a Hydraulic Schematic                                 | 5                  | 8000                  | 6-14241                   |
| Hydraulic System<br>How it Works with Troubleshooting                        | 5                  | 8001                  | 6-14241                   |
| PTO and Differential Lock Valve  | 5                  | 8002                  | 6-14241                   |
| Remote Valve and Coupler Service   | 5                  | 8003                  | 6-14241                   |
| Remote Hydraulic System<br>How it Works and Troubleshooting                  | 5                  | 8004                  | 6-14241                   |
| Priority and Regulator Valve   | 5                  | 8005                  | 6-14241                   |
| Charge Pump  | 5                  | 8006                  | 6-14241                   |
| PFC Piston Pump and Hydraulic Filter   | 5                  | 8007                  | 6-14241                   |
| Hitch System - How it Works  | 5                  | 8008                  | 6-14241                   |
| Hitch Control Valve  | 5                  | 8009                  | 6-14241                   |
| Pedal & Pedal Switch Adjustments   | 5                  | 9001                  | 6-14241                   |
| Cab Raise/Removal and Installation   | 5                  | 9005                  | 6-14241                   |
| Tilt And Fixed Hoods, A/C Condenser, Radiator, And<br>Air-To-Air Aftercooler | 5                  | 9008                  | 6-14241                   |



| <b>Description</b>   | <b>Book Number</b> | <b>Section Number</b> | <b>Publication Number</b> |
|--|--------------------|-----------------------|---------------------------|
| Air Conditioning Troubleshooting   | 5                  | 9010                  | 6-14241                   |
| Air Conditioner System Service   | 5                  | 9020                  | 6-14241                   |
| Viscous Fan Drive Test   | 5                  | 9030                  | 6-14241                   |
| Standard Instrumentation<br>Programming and Fault Codes                      | 6                  | 10001                 | 6-14250                   |
| Hitch Controller<br>Calibration and Fault Codes                              | 6                  | 10002                 | 6-14250                   |
| Transmission Controller<br>(With Suspended Axle) Calibration and Fault Codes | 6                  | 10003                 | 6-14250                   |
| Armrest Controller<br>Calibration and Fault Codes                            | 7                  | 10004                 | 6-14260                   |
| Remote Hydraulics Controller<br>Calibration and Fault Codes                  | 7                  | 10005                 | 6-14260                   |
| PTO Controller Configuration and Fault Codes                                 | 7                  | 10006                 | 6-14260                   |
| Performance Monitor Controller Fault Codes                                   | 7                  | 10008                 | 6-14260                   |
| Instrument Cluster (ICU2)<br>Programming and Fault Codes                     | 8                  | 10009                 | 6-17550                   |



**Service Information Packaged with 6-12722**

Electrical Schematic (Prior to P.I.N. JAZ129933) . . . . . 6-12750  
Electrical Schematic (P.I.N. JAZ129933 and After) . . . . . 6-17260  
Hydraulic Schematic . . . . . 6-12830  
Loctite Product Chart . . . . . 8-98902  
A/C Temperature Poster . . . . . 6-13060

**Service Information Not Packaged with 6-12723 But Required for Engine Repair**

Electronic 8.3L Engine for MX255 and MX285 Manual Numbers 7-88622 and 7-88631  
Mechanical 8.3L Engine for MX210 and MX230 Manual Number 7-65440



# **Section 1000**

## **Standard Torque Specification**

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$