
MXM120, MXM130, MXM140, MXM155, MXM175, MXM190 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	11
SECTION 21 - TRANSMISSION SYSTEMS	12
SECTION 23 - DRIVE LINES	21
SECTION 25 - FRONT AXLE	23
SECTION 27 - MECHANICAL REAR WHEEL DRIVE	26
SECTION 31 - POWER TAKE-OFF	30
SECTION 33 - BRAKES	33
SECTION 35 - HYDRAULIC SYSTEM	37
SECTION 41 - STEERING	56
SECTION 44 - FRONT AXLE AND WHEELS	57
SECTION 50 - AUXILIARY UNITS	58
SECTION 55 - ELECTRICAL SYSTEM	60
SECTION 90 - CAB	108

The following pages are the collation of the contents pages from each section and chapter of the MXM Series Repair manual. Complete Repair part # 87613647.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the MXM Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87613648

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Important Notice	3
	Shimming	3
	Rotating Shaft Seals	3
	O Rings	3
	Sealers	3
	Bearings	3
	Spring Pins	3
	Precautionary Notice	4
	Equipment Notice	4
	Spare Parts Notice	4
	General Notices	4
	Health and Safety	5
	Health and Safety Precautions	5
	Precautionary Statements	14
	Safety	15
	The Tractor	15
	Driving the Tractor	15
	Operating the Tractor	15
	Operating the PTO	16
	Servicing the Tractor	16
	Diesel Fuel	17
	ROPS	17
	Ecology and the Environment	18
	Precautions	18
	Minimum Hardware Tightening Torques	19
	Federal Emissions Warranty	21
	California Emission Control Warranty Statement	22
	Lubricants and Coolants	24
	Sulphur in Fuel	24
	Biodegradable Transmission, Drive Axle, Hub, and Hydraulic System Oil	24

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 1 - Separating and Removing The Engine

CONTENTS

Section	Description	Page
	Tightening Torques	2
	Special Tools	3
	Separating and Removing the Engine	4
	Front Axle and Support	4
	Separating Front Axle and Support from Engine	4
	Installation	12
	Engine and Front Support	14
	Separating Engine and Front Support from Transmission	14
	Installation	20
	Engine	21
	Removal	21
	Installation	24

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Cylinder Block	6
	Cylinder Head	6
	Exhaust Valves	7
	Intake Valves	7
	Valve Springs	7
	Camshaft Lobe Lift	7
	Installed Valve Recession	7
	Valve Inserts	7
	Valve Seats	8
	Valve Timing	8
	Camshaft Idler Gear	8
	Camshaft Gear	8
	Rocker Arm Shaft	8
	Rocker Arm	8
	Tappets	8
	Camshaft	8
	Connecting Rods	9
	Piston Pin	9
	Pistons	9
	Piston Rings	9
	Crankshaft	10
	Crankshaft Drive Gear	10
	Main Bearing	10
	Crankpin Bearings	10
	Crankshaft Re-grinding	11
	Flywheel	11
	Oil Pump	11
	Oil Pressure	11
	Oil Filter Support	12
	Engine Oils and Change Periods	12

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine (Continued)

CONTENTS

Section	Description	Page
	Engine Oil Capacities	12
	Grease and Sealants	12
	Thermostat	12
	Radiator Cap	12
	Water Pump	12
	Fan Belt	12
	Cooling System Capacities	12
	Cooling Fluid	12
	Tightening Torques	13
	Description	13
	Special Tools	15
	Troubleshooting	16
	Description of Operation	20
	General	20
	Cylinder Block Assembly	20
	Cylinder Head Assembly	21
	Camshaft Assembly	21
	Crankshaft Assembly	21
	Connecting Rods	22
	Pistons	22
	Manifolds	22
	Timing Gears	22
	Lubrication System	23
	Crankcase Breather	26
	Overhaul - Cylinder Head	27
	Introduction	27
	Operations or Repairs That Can Be Performed With the Engine Still in the Vehicle	27
	Timing Check	28
	Cylinder Head, Valves, and Related Parts	31
	Cylinder Head Removal	31
	Cylinder Head Disassembly	34

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$