

Magnum™ 180
Magnum™ 200
Magnum™ 220
Magnum™ 240
Continuously Variable Transmission (CVT)
Tractor

PIN ZERH08100 and above

SERVICE MANUAL

Part number 47748092

1st edition English
September 2014

CASE II
AGRICULTURE



SERVICE MANUAL

Magnum™ 180 696110752 CVT TIER 4B [ZERH08100 -]
Magnum™ 200 696110762 CVT TIER 4B [ZERH08100 -]
Magnum™ 220 696110772 CVT TIER 4B [ZERH08100 -]
Magnum™ 240 696110782 CVT TIER 4B [ZERH08100 -]

Link Product / Engine

Product	Market Product	Engine
Magnum™ 180 696110752 CVT TIER 4B [ZERH08100 -]	North America	F4HFE613K*B002
Magnum™ 180 696110752 CVT TIER 4B [ZERH08100 -]	Australia New Zealand	F4HFE613K*B002
Magnum™ 200 696110762 CVT TIER 4B [ZERH08100 -]	North America	F4HFE613J*B005
Magnum™ 200 696110762 CVT TIER 4B [ZERH08100 -]	Australia New Zealand	F4HFE613J*B005
Magnum™ 220 696110772 CVT TIER 4B [ZERH08100 -]	North America	F4HFE613H*B003
Magnum™ 220 696110772 CVT TIER 4B [ZERH08100 -]	Australia New Zealand	F4HFE613H*B003
Magnum™ 240 696110782 CVT TIER 4B [ZERH08100 -]	Australia New Zealand	F4HFE613B*B006
Magnum™ 240 696110782 CVT TIER 4B [ZERH08100 -]	North America	F4HFE613B*B006

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.310] Aftercooler.....	10.8
[10.304] Engine lubrication system.....	10.9
Power coupling	19
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper	19.2
Transmission	21
[21.200] Dropbox	21.1
[21.504] Continuously Variable Transmission (CVT)	21.2
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.3
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.4
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2

[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.102] Pump control valves	35.2
[35.105] Charge pump	35.3
[35.106] Variable displacement pump	35.4
[35.114] Three-point hitch control valve	35.5
[35.116] Three-point hitch cylinder	35.6
[35.204] Remote control valves	35.7
[35.300] Reservoir, cooler, and filters	35.8
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components	41.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$