

**Magnum™ 180**  
**Magnum™ 200**  
**Magnum™ 220**  
**Powershift Transmission (PST)**  
**Tractor**

*PIN ZERH08100 and above*

**SERVICE MANUAL**

**Part number 47748093**

1<sup>st</sup> edition English  
September 2014

**CASE II**  
AGRICULTURE



## **SERVICE MANUAL**

**Magnum™ 180 696110052 PST TIER 4B [ZERH08100 - ]**  
**Magnum™ 200 696110062 PST TIER 4B [ZERH08100 - ]**  
**Magnum™ 220 696110072 PST TIER 4B [ZERH08100 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Magnum™ 180 696110052 PST TIER 4B [ZERH08100 - ]	North America	F4HFE613K*B002
Magnum™ 180 696110052 PST TIER 4B [ZERH08100 - ]	Australia New Zealand	F4HFE613K*B002
Magnum™ 200 696110062 PST TIER 4B [ZERH08100 - ]	Australia New Zealand	F4HFE613J*B005
Magnum™ 200 696110062 PST TIER 4B [ZERH08100 - ]	North America	F4HFE613J*B005
Magnum™ 220 696110072 PST TIER 4B [ZERH08100 - ]	North America	F4HFE613H*B003
Magnum™ 220 696110072 PST TIER 4B [ZERH08100 - ]	Australia New Zealand	F4HFE613H*B003

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.310] Aftercooler.....	10.8
[10.304] Engine lubrication system.....	10.9
<b>Power coupling</b> .....	<b>19</b>
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper .....	19.2
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.160] Creeper .....	21.4
[21.166] Overdrive.....	21.5
[21.200] Dropbox .....	21.6
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1

[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.106] Variable displacement pump .....	35.5
[35.114] Three-point hitch control valve .....	35.6
[35.116] Three-point hitch cylinder .....	35.7
[35.204] Remote control valves .....	35.8
[35.300] Reservoir, cooler, and filters.....	35.9
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Steering.....</b>	<b>41</b>

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$