

SV212D
SV216D
Tier 4B (final)
Vibratory Roller

SV212D - DDDS212DNHWTB3010 and above
SV216D - DDDS216DNHWTC3001 and above

SERVICE MANUAL

Part number 51429076

1st edition English

April 2018





SERVICE MANUAL

**SV212D
SV216D**

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.400] Engine cooling system	10.2
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
[29.202] Hydrostatic transmission	29.2
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.100] Main lift system.....	35.3
[35.741] Dozer blade cylinders	35.4
[35.995] Compaction/vibration hydraulic system	35.5
Frames and ballasting	39
[39.100] Frame	39.1
[39.500] Vibratory roller.....	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump.....	41.3
[41.216] Cylinders	41.4
Wheels	44
[44.520] Rear wheels.....	44.1
[44.160] Compaction drums	44.2

Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.302] Battery	55.5
[55.011] Fuel tank system	55.6
[55.512] Cab controls	55.7
[55.036] Hydraulic system control	55.8
[55.518] Wiper and washer system	55.9
[55.408] Warning indicators, alarms, and instruments	55.10
[55.DTC] FAULT CODES	55.11
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.114] Operator protections	90.2
[90.100] Engine hood and panels	90.3
[90.105] Machine shields and guards	90.4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$