

2015 1299 Panigale S Workshop Manual

- SBK.01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Hazardous Products - Warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)

- SBK.02 - Information about the model
- Identification data
 - [Identification data](#)

- SBK.03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/alternator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/Piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Dimensions
 - [Dimensions](#)
 - [Dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Torque settings
 - [Engine torque settings](#)
 - [Frame torque settings](#)
- Service tools
 - [Appropriate diagnosis tools](#)
 - [Specific tools for the frame](#)
 - [Specific tools for the engine](#)

- SBK.04 - Maintenance operations
- Vehicle pre-delivery
 - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
- Maintenance operations
 - [Adjusting the steering damper](#)
 - [Adjusting vehicle setup](#)

[Adjusting the rear shock absorber](#)

- [Adjusting the front fork](#)
- [Adjusting the position of the gear change and rear brake pedals](#)
- [Adjusting the clutch lever and front brake lever](#)
- [Checking the rear brake pad wear and changing the brake pads](#)
- [Checking the front brake pad wear and changing the brake pads](#)
- [Adjusting the chain tension](#)
- [Adjusting the steering head bearing play](#)
- [Filling the clutch circuit](#)
- [Draining the clutch hydraulic circuit](#)
- [Changing the clutch fluid](#)
- [Changing the fluid in the rear brake system](#)
- [Changing the fluid in the front brake system](#)
- [Changing the coolant](#)
- [Checking the coolant level](#)
- [Changing and cleaning the air filters](#)
- [Spark plugs replacement](#)
- [Checking valve clearance](#)
- [Changing the engine oil and filter cartridge](#)
- [Check engine oil level](#)

- SBK.05 - Fairings

- Rear-view mirrors

- [Refitting the rear-view mirrors](#)
- [Removal of the rear-view mirrors](#)

- Headlight fairing

- [Refitting the headlight fairing](#)
- [Removing the headlight fairing](#)

- Fairing panels

- [Refitting the side fairings](#)
- [Removal of the side fairings](#)

- Seat - seat cowling and side panels

- [Refitting the seat release mechanism](#)
- [Removal of the seat release mechanism](#)
- [Refitting the side panels](#)
- [Removal of the side panels](#)
- [Refitting the rider seat](#)
- [Removal of the rider seat](#)
- [Refitting the pillion seat](#)
- [Removal of the pillion seat](#)

- Front and rear mudguard

- [Refitting the rear mudguard](#)
- [Removing the rear mudguard](#)
- [Refitting the front mudguard](#)
- [Removing the front mudguard](#)

- SBK.06 - Electric system and engine control system

- Wiring diagram

- [Wirings not branched](#)
- [Branch 9](#)
- [Branch 8](#)
- [Branch 7](#)
- [Branch 6](#)
- [Branch 5](#)
- [Branch 4](#)
- [Branch 3](#)
- [Branch 2](#)
- [Branch 1](#)

- [Routing of wiring on frame](#)
- Battery charging system
 - [Rectifier-regulator](#)
 - [Alternator](#)
 - [Battery](#)
 - [Topping up the electrolyte](#)
- Lights and indicating devices
 - [Renewal of the headlight](#)
- Instruments
 - [Vehicle release through PIN CODE](#)
 - [Duplicate keys](#)
 - [Operation](#)
 - [Keys](#)
 - [The Immobilizer system](#)
 - [Light control](#)
 - [Display background colour](#)
 - [Tire Set-Up](#)
 - [Setting the unit of measurement](#)
 - [LAP](#)
 - [Setting the display background](#)
 - [Setting the date](#)
 - [Clock setup](#)
 - [Changing the PIN CODE](#)
 - [Pin Code](#)
 - [DDA](#)
 - [Battery voltage](#)
 - [Engine rpm digital indication \(RPM\)](#)
 - [Auxiliary button function setting](#)
 - [Customising Riding Modes: Restore default settings](#)
 - [Riding style customization: DWC level setting](#)
 - [Customising Riding Modes: EBC level setting](#)
 - [Customising Riding Modes: Engine setting](#)
 - [Customising Riding Modes: DTC level setting](#)
 - [Customising Riding Modes: DQS enable/disable](#)
 - [Customising Riding Modes: Display setting](#)
 - [Riding mode customisation: electronic suspension adjustment](#)
 - [Riding mode customisation: ABS adjustment](#)
 - [Customising Riding Modes](#)
 - [Setting MENU](#)
 - [Side stand status display](#)
 - [Displayed error description](#)
 - [Error indication](#)
 - [Warnings/Alarms \(Warning\)](#)
 - [OIL SERVICE or DESMO SERVICE warning](#)
 - [Zero OIL SERVICE warning](#)
 - [Service warning \(SERVICE\)](#)
 - [CLOCK](#)
 - [Auxiliary functions](#)
 - [MENU 2: Air temperature](#)
 - [MENU 2: Trip time](#)
 - [MENU 2: Average speed](#)
 - [MENU 2: Average fuel consumption](#)
 - [MENU 2: Instantaneous fuel consumption](#)
 - [MENU 2: Coolant temperature](#)
 - [MENU 2 functions](#)
 - [Menu 1: LEAN ANGLE](#)
 - [Menu 1: Lap time \(LAP time\)](#)
 - [Menu 1: Partial fuel reserve counter \(TRIP FUEL\)](#)

- [Menu 1: Trip meter 2 \(TRIP 2\)](#)
 - [Menu 1: Trip meter 1 \(TRIP 1\)](#)
 - [Menu 1: Odometer \(TOT\)](#)
 - [Menu 1 functions](#)
 - [DTC - DWT - EBC function level quick change](#)
 - [ABS](#)
 - [DWC](#)
 - [EBC](#)
 - [DTC](#)
 - [DQS](#)
 - [Riding Mode](#)
 - [Main functions](#)
 - [How to set/display parameters](#)
 - [Function push-buttons](#)
 - [Technological Dictionary](#)
 - [Acronyms and abbreviations used in the Manual](#)
 - [Instrument panel \(DASHBOARD\)](#)
- SBK.07 - Chassis
 - Front wheel
 - [Refitting the front wheel](#)
 - [Removing the front wheel](#)
 - Rear wheel
 - [Refitting the rear wheel](#)
 - [Refitting the rear wheel](#)
 - [Removing of the rear wheel](#)
 - Front brake control
 - [Refitting the front brake system](#)
 - [Refitting the brake discs](#)
 - [Overhauling the front brake components](#)
 - [Removing the brake discs](#)
 - [Removing the front brake system](#)
 - [Refitting the front brake master cylinder](#)
 - [Removing the front brake master cylinder](#)
 - [Removing the front brake master cylinder](#)
 - Rear brake
 - [Refitting the rear brake calliper](#)
 - [Removing the rear brake calliper](#)
 - [Refitting the rear brake control](#)
 - [Removing the rear brake control](#)
 - ABS system information
 - [Disabling the ABS](#)
 - [ABS operating information](#)
 - [Operating principle](#)
 - ABS system components
 - [Wiring/hose routing](#)
 - [Refitting the ABS control unit](#)
 - [Removing the ABS control unit](#)
 - [Changing the rear phonic wheel sensor](#)
 - [Changing the front phonic wheel sensor](#)
 - ABS components maintenance
 - [Bleeding of the ABS hydraulic system](#)
 - [Adjusting of the AIR-GAP phonic wheel sensor](#)
 - Handlebar unit: throttle twistgrip
 - [Refitting the throttle twistgrip](#)
 - [Removal of the throttle twistgrip](#)
 - [Refitting the handlebar](#)
 - [Removing the handlebar](#)

- Handlebar unit: hydraulic clutch control
 - [Refitting the clutch transmission unit](#)
 - [Removal of the clutch transmission unit](#)
- Steering damper
 - [Refitting the steering damper](#)
 - [Removal of the steering damper](#)
- Gearchange mechanism
 - [Refitting the gearchange mechanism](#)
 - [Removing the gearchange mechanism](#)
- Fork - steering head: front fork
 - [Refitting the front forks](#)
 - [Removal of the front forks](#)
- Rear shock absorber assembly
 - [Refitting the shock absorber support](#)
 - [Removal of the shock absorber support](#)
 - [Refitting the rear suspension](#)
 - [Overhauling the rear shock absorber](#)
 - [Removal of the rear shock absorber](#)
 - [Rear suspension system](#)
- Swingarm
 - [Refitting the rear swinging arm](#)
 - [Overhauling the rear swinging arm](#)
 - [Removing the swinging arm](#)
 - [Refitting the rear wheel eccentric hub and rear wheel shaft](#)
 - [Removing the rear wheel eccentric hub and the rear wheel shaft](#)
- Final drive
 - [Lubricating the chain](#)
 - [Washing the chain](#)
 - [Refitting the rear sprocket](#)
 - [Replacing of the rear sprocket](#)
 - [Refitting the front sprocket](#)
 - [Removing of the front sprocket](#)
 - [Inspecting the final drive](#)
- Footrest brackets
 - [Reassembling the front footrest brackets](#)
 - [Removing the front footrest brackets](#)
 - [Refitting the front footrests](#)
 - [Removal of the front footrests](#)
- Frame inspection
 - [Reassembling the frame and the lateral footrests](#)
 - [Removing the frame and the lateral footrests](#)
 - [Reassembly of the tool tray](#)
 - [Removal of the tool tray](#)
 - [Reassembly of structural components and the frame](#)
 - [Disassembly of structural components and the frame](#)
- Tail light - number plate holder
 - [Refitting the tail light](#)
 - [Removal of the tail light](#)
 - [Refitting the tail light](#)
 - [Removal of the tail light](#)
 - [Refitting the number plate holder](#)
 - [Removing the number plate holder](#)
- SBK.08 - Fuel/Exhaust System
- Fuel tank
 - [Replacing the tank flange and fuel sensor.](#)
 - [Refitting the fuel tank](#)
 - [Refitting the filler cap](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$