

**DUCATI**



# SUPERBIKE 848 MY 2008



Home



Main



0A - General  
0B - Information about the model  
0C - Technical data  
0D - Use and maintenance  
0E - Fairings  
0F - Controls - Devices  
0G - Wheels - Suspension - Brakes  
0H - Frame  
0L - Fuel/Exhaust System  
0M - Fuel injection - ignition system  
0N - Engine  
0P - Electrical system  
0GENERAL SUMMARY

0A - General

[1 - How to use this manual](#) 3

[Layout of the manual](#) 4

[2 - Symbols - Abbreviations - References](#) 5

[Product specifications](#) 6

[3 - Hazardous Products - Warnings](#) 8

[General safety rules](#) 8

[General maintenance indications](#) 10

0B - Information about the model

[1 - Identification data](#) 3

[Identification data for the Superbike 848 3](#)

## 0C - Technical data

### [1.1 - Technical specifications 3](#)

[General 3](#)

[Colours 4](#)

[Transmission 4](#)

[Timing system/valves 4](#)

[Crankshaft 5](#)

[Cylinder/Piston 5](#)

[Gearbox 6](#)

[Cooling system 6](#)

[Front wheel 6](#)

[Front suspension 6](#)

[Rear wheel 6](#)

[Rear suspension 7](#)

[Hydraulic brakes 7](#)

[Charging system/alternator 7](#)

[Injection - ignition system 8](#)

[Fuel system 8](#)

[Lights/instrument panel 8](#)

### [1.2 - Dimensions 9](#)

## [2 - Fuel, lubricants and other fluids 10](#)

## [3 - Torque settings 11](#)

[Frame torque settings 11](#)

[Engine torque settings 16](#)

## [4 - Service tools 19](#)

[Specific tools for the engine 19](#)

[Specific tools for the frame 25](#)

## 0D - Use and maintenance

### [1 - Preliminary checks](#) 3

[Running-in precautions](#) 3

[Pre-ride checks](#) 4

### [2 - Starting - Engine warmup](#) 5

[Starting the engine](#) 5

### [3 - Routine maintenance table](#) 6

[Programmed maintenance plan: operations to be carried out by the dealer](#) 6

[Programmed maintenance plan: operations to be carried out by the client](#) 8

### [4 - Maintenance operations](#) 9

[Checking the engine oil level](#) 9

[Changing the engine oil and filter cartridge](#) 10

[Checking valve clearances](#) 13

[Adjusting the valve clearances](#) 14

[Checking the coolant level](#) 15

[Changing the coolant](#) 16

[Changing and cleaning the air filters](#) 17

[Changing the brake fluid](#) 19

[Draining the brake circuit](#) 22

[Filling the brake system with fluid](#) 24

[Changing the clutch fluid](#) 27

[Draining the clutch hydraulic circuit](#) 28

[Filling the clutch circuit](#) 30

[Adjusting the steering head bearings](#) 32

[Adjusting the chain tension](#) 33

[Checking brake pad wear and changing brake pads](#) 35

[Adjusting the throttle cable](#) 39

[Adjusting the clutch lever and front brake lever](#) 41

[Adjusting the position of the gearchange and rear brake pedals](#) 42

[Adjusting the front fork](#) 43

[Adjusting the rear shock absorber](#) 44

### [5 - Diagnostic instruments](#) 46

- [Description of the Ducati Diagnostic System instrument 47](#)
- [Tester power supply 49](#)
- [DDS tester 52](#)
- [Checking and adjusting timing belt tension 53](#)
- [Resetting the throttle position sensor \(TPS\) 57](#)
- [Adjusting the idle speed 61](#)
- [Checking the engine oil pressure 66](#)
- [Cylinder compression test 71](#)
- [Fuel pressure test 74](#)
- [Immobilizer override procedure 77](#)
- [Guided diagnosis 81](#)
- [Testing the battery charging system 84](#)
- [Deactivating the “service” indication on the instrument panel 87](#)
- [Icons table 90](#)

## OE - Fairings

### [1 - Headlight shell - rear-view mirrors 3](#)

- [Removal of the rear-view mirrors 4](#)
- [Refitting the rear-view mirrors 5](#)
- [Removal of the air scoop covers 6](#)
- [Refitting the air scoop covers 8](#)
- [Removal of the headlight shell 11](#)
- [Refitting the headlight shell 13](#)

### [2 - Fairing panels 16](#)

- [Removal of the side fairings 17](#)
- [Removal of the front shield 20](#)
- [Refitting the front shield 20](#)
- [Refitting the side fairings 21](#)

### [3 - Seat – seat cowling and side panels 24](#)

- [Removal of the seats 25](#)
- [Removal of the side panels and seat cowling 26](#)
- [Refitting the side panels and seat cowling 30](#)
- [Refitting the seats 34](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$