

2015 DUCATI Hypermotard SP Service Manual

- HYM.01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Hazardous Products - Warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)

- HYM.02 - Information about the model
- Model identification data
 - [Identification data](#)

- HYM.03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/Piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Dimensions
 - [Dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Tightening torque values
 - [Engine tightening torque values](#)
 - [Frame tightening torque values](#)
- Service tools
 - [Special diagnosis equipment](#)
 - [Special tools for the frame](#)
 - [Specific tools for the engine](#)

- HYM.04 - Maintenance operations
- Vehicle pre-delivery
 - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
- Maintenance operations
 - [Adjusting the rear shock absorber](#)
 - [Adjusting the front fork](#)
 - [Adjusting the position of the gear change and rear brake pedals](#)

- [Adjusting the clutch lever and front brake lever](#)
 - [Checking the rear brake pad wear and changing the brake pads](#)
 - [Checking the front brake pad wear and changing the brake pads](#)
 - [Adjusting the chain tension](#)
 - [Adjusting the steering head bearing play](#)
 - [Adjusting the clutch control cable](#)
 - [Changing the fluid in the rear brake system](#)
 - [Changing the fluid in the front brake system](#)
 - [Changing the coolant](#)
 - [Checking the coolant level](#)
 - [Changing and cleaning the air filters](#)
 - [Spark plugs replacement](#)
 - [Changing the timing belts](#)
 - [Checking valve clearance](#)
 - [Changing the engine oil and filter cartridge](#)
 - [Check engine oil level](#)
- HYM.05 - Fairings
- Rear-view mirrors
 - [Refitting the rear-view mirrors](#)
 - [Removing the rear-view mirrors](#)
- Headlight fairing
 - [Refitting the headlight fairing](#)
 - [Removing the headlight fairing](#)
- Fairings
 - [Refitting the fairings](#)
 - [Removing the fairings](#)
- Seat - side panels
 - [Refitting the rear side panels](#)
 - [Removing the rear side panels](#)
 - [Refitting the seat](#)
 - [Removing the seat](#)
- Front and rear mudguard
 - [Refitting the rear mudguard](#)
 - [Removing the rear mudguard](#)
 - [Refitting the front mudguard](#)
 - [Removing the front mudguard](#)
- HYM.06 - Electric system and engine management
- Wiring diagram
 - [Table Z](#)
 - [Table Y](#)
 - [Table X](#)
 - [Table W](#)
 - [Table V](#)
 - [Table U](#)
 - [Table T](#)
 - [Table S](#)
 - [Table R](#)
 - [Table Q](#)
 - [Table P](#)
 - [Table O](#)
 - [Table N](#)
 - [Table M](#)
 - [Table L](#)
 - [Table K](#)
 - [Table J](#)
 - [Table I](#)

- [Table H](#)
- [Table G](#)
- [Table F](#)
- [Table E](#)
- [Table D](#)
- [Table C](#)
- [Table B](#)
- [Table A](#)
- [Routing of wiring on frame](#)
- [Key to fuse box](#)
- [Wiring diagram colour codes](#)
- [Key to wiring diagram](#)
- Battery charging system
 - [Rectifier-regulator](#)
 - [Generator](#)
 - [Battery](#)
 - [Topping up the electrolyte](#)
 - [Recharging the battery](#)
 - [Checking the battery charging system](#)
- Electric starting
 - [Solenoid starter](#)
 - [Starter motor](#)
 - [Electric starting system](#)
- Lights
 - [Headlight aim](#)
 - [Changing bulbs](#)
- Instruments
 - [Other functions](#)
 - [Setting the Unit of Measurement \(UNITS\)](#)
 - [Light control](#)
 - [Operation](#)
 - [PIN CODE entering function for overriding purposes](#)
 - [Keys](#)
 - [Immobilizer code \(PIN CODE\)](#)
 - [Engine rpm digital indication \(RPM\)](#)
 - [Battery voltage function \(BATTERY\)](#)
 - [Clock setting function \(CLOCK\)](#)
 - [Lap time function \(LAP\): stored LAP display](#)
 - [LAP time function: LAP recording](#)
 - [LAP time function: LAP enabling/disabling](#)
 - [Instrument panel backlighting regulation function \(B.LIGHT\)](#)
 - [ALL DEFAULT \(Restoring the default parameters of all Riding Modes\)](#)
 - [ENGINE set-up](#)
 - [ABS set-up](#)
 - [DTC set-up](#)
 - [Riding Mode customisation \(R.MODE\)](#)
 - [Error displaying \(ERRORS\)](#)
 - [Riding Mode SET-UP function \(riding mode change\)](#)
 - [Enabled / disabled LAP function indication](#)
 - [Active / not active ERRORS indication](#)
 - [SERVICE function - Maintenance interventions](#)
 - [SET UP - Riding Style set indication](#)
 - [Menu 2 functions: Clock](#)
 - [Menu 2 functions: Air temperature \(AIR\)](#)
 - [Menu 2 functions: Coolant temperature](#)
 - [Menu 2 functions](#)
 - [Menu 1 functions: Trip time indicator \(TIME TRIP\)](#)
 - [Menu 1 functions: Average speed indicator \(SPEED AVG\)](#)

- [Menu 1 functions: Instantaneous fuel consumption indicator \(CONS.\)](#)
 - [Menu 1 functions: Average fuel consumption indicator \(CONS. AVG\)](#)
 - [Menu 1 functions: Partial fuel reserve counter \(TRIP FUEL\)](#)
 - [Menu 1 functions: Trip meter \(TRIP 2\)](#)
 - [Menu 1 functions: Trip meter \(TRIP 1\)](#)
 - [Menu 1 functions: Odometer \(TOT\)](#)
 - [Menu 1 functions](#)
 - [Engine rpm indicator \(RPM\)](#)
 - [Vehicle speed indicator](#)
 - [LCD - How to set/display parameters](#)
 - [LCD unit functions](#)
 - [Function push-buttons](#)
 - [Technological Dictionary](#)
 - [Display settings and functions](#)
- HYM.07 - Chassis
 - Front wheel
 - [Refitting the front wheel](#)
 - [Overhauling the front wheel](#)
 - [Removing the front wheel](#)
 - Rear wheel
 - [Refitting the rear wheel](#)
 - [Overhauling the rear wheel](#)
 - [Removing the rear wheel](#)
 - Front brake control
 - [Refitting the front brake system](#)
 - [Refitting the brake discs](#)
 - [Overhauling the front brake components](#)
 - [Removing the brake discs](#)
 - [Removing the front brake system](#)
 - [Maintenance operations](#)
 - [Refitting the front brake master cylinder](#)
 - [Removing the front brake master cylinder](#)
 - Rear brake
 - [Refitting the rear brake calliper](#)
 - [Removing the rear brake disc](#)
 - [Removing the rear brake calliper](#)
 - [Refitting the rear brake control](#)
 - [Disassembling the rear brake control](#)
 - [Removing the rear brake control](#)
 - ABS information
 - [Disabling the ABS](#)
 - [ABS operating information](#)
 - [Operating principle](#)
 - ABS components
 - [Wiring/hose routing](#)
 - [Refitting the ABS control unit](#)
 - [Removing the ABS control unit](#)
 - [Changing the rear phonic wheel sensor](#)
 - [Changing the front phonic wheel sensor](#)
 - ABS component maintenance
 - [Bleeding the ABS hydraulic system](#)
 - [Adjusting the phonic wheel sensor AIR-GAP](#)
 - Handlebar unit: hand guard - throttle control
 - [Refitting the throttle twistgrip](#)
 - [Removing the throttle twistgrip](#)
 - [Refitting the handlebar](#)
 - [Removing the handlebar](#)

- [Refitting the hand guards](#)
 - [Removing the hand guards](#)
- Handlebar unit: clutch control
 - [Refitting the clutch unit](#)
 - [Disassembling the clutch unit](#)
- Handlebar unit: ignition switch
 - [Refitting the ignition switch](#)
 - [Removing the ignition switch](#)
- Gearchange mechanism
 - [Refitting the gearchange mechanism](#)
 - [Disassembling the gearchange control](#)
 - [Removing the gearchange mechanism](#)
- Fork - steering head: front fork
 - [Refitting the front forks](#)
 - [Overhauling the front forks](#)
 - [Removal of the front forks](#)
- Fork - steering head: steering
 - [Refitting the steering tube components](#)
 - [Removing the steering head components](#)
 - [Steering angle adjustment](#)
 - [Adjusting the steering head bearing clearance](#)
- Rear shock absorber unit
 - [Refitting the rear suspension](#)
 - [Overhauling the rear shock absorber](#)
 - [Removing the rear shock absorber](#)
 - [Rear suspension system](#)
- Swinging arm
 - [Refitting the rear swinging arm](#)
 - [Overhauling the rear swinging arm](#)
 - [Inspecting the swinging arm shaft](#)
 - [Removing the swinging arm](#)
 - [Refitting the rear wheel eccentric hub and rear wheel shaft](#)
 - [Removing the rear wheel eccentric hub and the rear wheel shaft](#)
- Final drive
 - [Lubricating the chain](#)
 - [Washing the chain](#)
 - [Refitting the rear sprocket](#)
 - [Replacing the rear sprocket](#)
 - [Refitting the front sprocket](#)
 - [Removing the front sprocket](#)
 - [Inspecting the final drive](#)
- Footpeg brackets
 - [Refitting the footpegs](#)
 - [Removing the footpegs](#)
- Stands
 - [Refitting the side stand](#)
 - [Removing the side stand](#)
- Frame inspection
 - [Refitting the rear frame](#)
 - [Reassembling structural components and frame](#)
 - [Checking the frame](#)
 - [Removing the rear frame](#)
 - [Disassembling structural components and frame](#)
- Tail light - number plate holder
 - [Refitting the tail light](#)
 - [Removing the tail light](#)
 - [Refitting the number plate holder](#)
 - [Removing the number plate holder](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$