

# 2016 ducati Multistrada 1200 Enduro (E4) Service Manual

- MTS(E4).01 - General
- Symbols - Abbreviations - References
  - [Product specifications](#)
- Dangerous products - warnings
  - [General maintenance instructions](#)
  - [General safety rules](#)
- MTS(E4).02 - Model-specific information
- Model identification
  - [Identification data](#)
- MTS(E4).03 - Technical data
- Technical specifications
  - [Lights/instrument panel](#)
  - [Injection system](#)
  - [Fuel system](#)
  - [Injection-ignition system](#)
  - [Charging system/generator](#)
  - [Hydraulic brakes](#)
  - [Rear suspension](#)
  - [Rear wheel](#)
  - [Front suspension](#)
  - [Front wheel](#)
  - [Cooling system](#)
  - [Gearbox](#)
  - [Cylinder/piston](#)
  - [Crankshaft](#)
  - [Timing system/valves](#)
  - [Transmission](#)
  - [Colours](#)
  - [General](#)
- Overall dimensions
  - [Dimensions](#)
- Fuel, lubricants and other fluids
  - [Fuel, lubricants and other fluids](#)
- Tightening torque settings
  - [Engine tightening torque values](#)
  - [Frame tightening torque values](#)
- Service tools
  - [Diagnosis special tools](#)
  - [Frame special tools](#)
  - [Engine special tools](#)
- MTS(E4).04 - Maintenance operations
- Vehicle pre-delivery
  - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
  - [Operations to be carried out by the customer](#)
  - [Operations to be carried out by the dealer](#)
- Maintenance operations
  - [Filling the clutch hydraulic circuit](#)

### [Draining the clutch hydraulic circuit](#)

- [Changing the clutch fluid](#)
  - [Adjusting the rear shock absorber](#)
  - [Front fork adjustment](#)
  - [Adjusting the position of the gearchange pedal and rear brake pedal](#)
  - [Adjusting the front brake control lever](#)
  - [Checking rear brake pad wear and replacing brake pads](#)
  - [Checking front brake pad wear and replacing brake pads](#)
  - [Adjusting the chain tension](#)
  - [Adjusting the steering head bearing play](#)
  - [Changing the fluid in the rear brake system](#)
  - [Changing the fluid in the front brake system](#)
  - [Changing the coolant](#)
  - [Check coolant level](#)
  - [Changing and cleaning the air filters](#)
  - [Changing the spark plugs](#)
  - [Change timing belts](#)
  - [Checking valve clearance](#)
  - [Changing the engine oil and filter cartridge](#)
  - [Check engine oil level](#)
- MTS(E4).05 - Fairings
  - Panel - headlight fairing
    - [Refitting the headlight fairing](#)
    - [Removing the headlight fairing](#)
    - [Refitting the panel](#)
    - [Removing the panel](#)
  - Fairings
    - [Refitting the tank fairings](#)
    - [Removing the tank fairings](#)
    - [Refitting the front half-fairing](#)
    - [Removing the front half-fairing](#)
  - Seat - tail guard and side body panels
    - [Refitting the seat](#)
    - [Refitting side body panel and tail guard](#)
    - [Removing the side body panels and the tail guard](#)
    - [Removing the seat](#)
  - Front mudguard - Belly pan
    - [Refitting the belly pan](#)
    - [Removing the belly pan](#)
    - [Refitting the front mudguard](#)
    - [Removing the front mudguard](#)
  - Rear mudguard - Splash guard
    - [Refitting the rear mudguard](#)
    - [Removing the rear mudguard](#)
- MTS(E4).06 - Electric system and engine management
  - Wiring diagram
    - [Branch 10](#)
    - [Branch 9](#)
    - [Branch 8](#)
    - [Branch 7](#)
    - [Branch 6](#)
    - [Branch 5](#)
    - [Branch 4](#)
    - [Branch 3](#)
    - [Branch 2](#)
    - [Branch 1](#)

- [Routing of wiring on frame](#)
- [Key to wiring diagram](#)
- [Technological Dictionary](#)
- [Acronyms and abbreviations used in the manual](#)
- Charge system - Battery
  - [Rectifier-regulator](#)
  - [Alternator / Generator](#)
  - [Refitting the battery](#)
  - [Removing the battery](#)
  - [Topping up the electrolyte](#)
  - [Recharging the battery](#)
  - [Checking the battery charging system](#)
- Electric starter
  - [Solenoid starter](#)
  - [Starter motor](#)
  - [Electric starting system](#)
- Lighting
  - [Replacing the tail light bulbs](#)
  - [Tail light](#)
  - [Aligning the headlight](#)
  - [Replacing the headlight bulbs](#)
  - [Headlight](#)
- Handlebar controls: controls
  - [Right-hand switch](#)
  - [Left-hand switch](#)
- Safety and protection sensors: controls
  - [Horn](#)
  - [Checking the fuses](#)
  - [Side stand switch](#)
  - [Air temperature sensor](#)
  - [Engine temperature sensor](#)
  - [Clutch switch](#)
  - [Oil pressure sensor](#)
  - [Gear/neutral sensor](#)
  - [Rear stop switch](#)
  - [Front stop switch](#)
- Electrical components: checks
  - [Exhaust valve motor](#)
  - [Solenoid valves](#)
  - [Coils](#)
- Electronic components: checks
  - [Accelerometers](#)
  - [Bluetooth](#)
  - [Inertial Measurement Unit \(IMU\)](#)
  - [Knock Sensor](#)
  - [Accelerator Position System \(APS\)](#)
  - [Lambda sensors](#)
  - [Ducati Cornering Lights \(DCL\)](#)
  - [Local Interconnect Network \(LIN\)](#)
  - [VIN line](#)
  - [Anti-lock Braking System \(ABS\)](#)
  - [CAN line](#)
  - [Ducati Wheelie Control \(DWC\)](#)
  - [Ducati Traction Control \(DTC\)](#)
  - [Rpm sensor \(pick-up\)](#)
  - [Throttle Position System \(TPS\)](#)
  - [Electronic Throttle Valve \(ETV\)](#)
  - [Black Box System \(BBS\)](#)

- [Map sensor](#)
- [Engine control unit \(ECU\)](#)
- Instrumentation: Dashboard
  - [Restoring motorcycle operation via the PIN CODE](#)
  - [Key duplication](#)
  - [Error warnings](#)
  - [Warnings/Alarms](#)
  - [Main functions](#)
  - [Parameter setting/displaying](#)
  - [Function buttons](#)
  - [Instrument panel](#)
- MTS(E4).07 - Chassis
- Front wheel
  - [Refitting the front wheel](#)
  - [Overhauling the front wheel](#)
  - [Removing the front wheel](#)
- Rear wheel
  - [Refitting the rear wheel](#)
  - [Overhauling the rear wheel](#)
  - [Removing the rear wheel](#)
- Front brake control
  - [Refitting the front brake system](#)
  - [Refitting the brake discs](#)
  - [Overhauling the front brake components](#)
  - [Removing the brake discs](#)
  - [Removing the front brake system](#)
  - [Maintenance operations](#)
  - [Refitting the front brake master cylinder](#)
  - [Removing the front brake master cylinder](#)
- Rear brake
  - [Refitting the rear brake calliper](#)
  - [Refitting the rear brake disc](#)
  - [Removing the rear brake disc](#)
  - [Removing the rear brake calliper](#)
  - [Refitting the rear brake control](#)
  - [Disassembling the rear brake control](#)
  - [Removing the rear brake control](#)
- ABS system information
  - [ABS system deactivation](#)
  - [ABS system operation information](#)
  - [Operating principle](#)
- ABS system components
  - [Routing wiring harnesses/hoses](#)
  - [Refitting the ABS control unit](#)
  - [Removing the ABS control unit](#)
  - [Changing the rear phonic wheel sensor](#)
  - [Changing the front phonic wheel sensor](#)
- ABS component maintenance
  - [Bleeding of the ABS hydraulic system](#)
  - [Adjusting the AIR-GAP of phonic wheel sensor](#)
- Handlebar unit: hand guard - rear.view mirrors - throttle control
  - [Refitting the handlebar](#)
  - [Removing the handlebar](#)
  - [Reassembling the hand guards](#)
  - [Removing the hand guards](#)
  - [Refitting the rear-view mirrors](#)
  - [Removing the rear-view mirrors](#)

- Handlebar assembly: Throttle twistgrip
  - [Refitting the throttle control](#)
  - [Removing the throttle control](#)
- Handlebar assembly: Hydraulic clutch control
  - [Refitting the clutch slave cylinder](#)
  - [Removing the clutch slave cylinder](#)
  - [Refitting the clutch master cylinder assembly](#)
  - [Removing the clutch master cylinder assembly](#)
- Handlebar assembly: Hands free
  - [Refitting the Hands Free](#)
  - [Removing Hands Free](#)
- Steering damper
  - [Refitting the steering damper](#)
  - [Removing the steering damper](#)
- Gear selector control
  - [Refitting the gear change control](#)
  - [Disassembling the gear change control](#)
  - [Removing the gear change control](#)
- Fork - steering head: Front fork
  - [Refitting the front fork](#)
  - [Overhauling the front fork](#)
  - [Removing the front fork](#)
- Fork - steering head: Steering assembly
  - [Refitting the steering tube components](#)
  - [Removing the steering tube components](#)
  - [Steering angle adjustment](#)
  - [Adjusting the steering head bearing clearance](#)
- Rear shock absorber assembly
  - [Refitting the rear suspension](#)
  - [Overhauling the rear shock absorber](#)
  - [Removing the rear shock absorber](#)
  - [Rear suspension system](#)
- Swinging arm
  - [Refitting the rear swinging arm](#)
  - [Overhauling the rear swinging arm](#)
  - [Inspecting the swinging arm shaft](#)
  - [Removing the swinging arm](#)
- Final drive
  - [Lubricating the chain](#)
  - [Washing the chain](#)
  - [Refitting the rear sprocket](#)
  - [Replacing the rear sprocket](#)
  - [Refitting the front sprocket](#)
  - [Removing the front sprocket](#)
  - [Inspection of the final drive](#)
- Footrest support
  - [Refitting the footpegs](#)
  - [Removing the footpegs](#)
- Stands
  - [Refitting the centre stand](#)
  - [Removing the centre stand](#)
  - [Refitting the side stand](#)
  - [Removing the side stand](#)
- Inspecting the frame
  - [Refitting the light assembly](#)
  - [Refitting the side plates](#)
  - [Refitting the structural parts and frame](#)
  - [Removing the side panels](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$