

DUCATI Multistrada 1200 S Pikes Peak 2014 Repair Manual

- MTS.01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Hazardous Products - Warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)

- MTS.02 - Information about the model
- Model identification data
 - [Identification data](#)

- MTS.03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/Piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Dimensions
 - [Dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Tightening torque values
 - [Engine tightening torque values](#)
 - [Frame tightening torque values](#)

- MTS.04 - Maintenance operations
- Vehicle pre-delivery
 - [Assembly - packaging](#)
 - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
- Maintenance operations
 - [Adjusting vehicle setup](#)
 - [Adjusting the rear shock absorber](#)
 - [Adjusting the front fork](#)
 - [Adjusting the position of the gear change and rear brake pedals](#)
 - [Adjusting the clutch lever and front brake lever](#)
 - [Checking the rear brake pad wear and changing the brake pads](#)
 - [Checking the front brake pad wear and changing the brake pads](#)
 - [Adjusting the chain tension](#)
 - [Adjusting the steering head bearing play](#)
 - [Adjusting the clutch control cable](#)

- Filling the clutch circuit
 - Draining the clutch hydraulic circuit
 - Changing the clutch fluid
 - Changing the fluid in the rear brake system
 - Changing the fluid in the front brake system
 - Changing the coolant
 - Checking the coolant level
 - Changing and cleaning the air filters
 - Spark plugs replacement
 - Changing the timing belts
 - Checking valve clearance
 - Changing the engine oil and filter cartridge
 - Check engine oil level
- Accessories
 - Assembling the filler plug lock
 - Removing the filler plug lock
 - Pannier bottom and low lid kit
 - Cover kit
 - Elastic elements kit
 - Side panniers kit
 - Side panniers kit
- MTS.05 - Fairings
- Panel - headlight fairing
 - Refitting the headlight fairing
 - Removing the headlight fairing
 - Refitting the panel
 - Removing the panel
- Fairings
 - Refitting the fuel tank fairings
 - Refitting the front half-fairing
 - Removing the front half-fairing
 - Removing the front half-fairing
- Seat - tail guard and fairings
 - Side Body Panel and Tail Guard Reassembly
 - Side Body Panel and Tail Guard Removal
 - Refitting the seat
 - Removing the seat
- Front mudguard - undersump
 - Refitting the undersump
 - Removing the undersump
 - Front semi-mudguard kit
 - Refitting the front mudguard
 - Removing the front mudguard
- Rear mudguard - splashguard
 - Refitting the splash guard
 - Removing the splash guard
 - Long rear mudguard kit
 - Refitting the rear mudguard
 - Removing the rear mudguard
- MTS.06 - Electric system and engine management
- Wiring diagram
 - Table T
 - Table S
 - Table R
 - Table P
 - Table O
 - Table N
 - Table M

- Table L
 - o Table K
 - o Table J
 - o Table I
 - o Table H
 - o Table G
 - o Table F
 - o Table E
 - o Table D
 - o Table C
 - o Table B
 - o Table A
 - o Routing of wiring on frame
 - o Key to fuse box
 - o Wiring diagram colour codes
 - o Key to wiring diagram
- Battery charging system
 - o Rectifier-regulator
 - o Generator
 - o Battery
 - o Topping up the electrolyte
 - o Recharging the battery
 - o Checking the battery charging system
- Electric starting
 - o Solenoid starter
 - o Starter motor
 - o Electric starting system
- Lights
 - o Headlight aim
- MTS.07 - Chassis
- Front wheel
 - o Refitting the front wheel
 - o Overhauling the front wheel
 - o Removing the front wheel
- Rear wheel
 - o Refitting the rear wheel
 - o Overhauling the rear wheel
 - o Removing the rear wheel
- Front brake control
 - o Refitting the front brake system
 - o Refitting the brake discs
 - o Overhauling the front brake components
 - o Removing the brake discs
 - o Removing the front brake system
 - o Maintenance operations
 - o Refitting the front brake master cylinder
 - o Removing the front brake master cylinder
- Rear brake
 - o Refitting the rear brake calliper
 - o Removing the rear brake disc
 - o Removing the rear brake calliper
 - o Refitting the rear brake control
 - o Disassembling the rear brake control
 - o Removing the rear brake control
- ABS information
 - o Disabling the ABS
 - o ABS operating information
 - o Operating principle
- ABS components

- Wiring/hose routing
 - Refitting the ABS control unit
 - Removing the ABS control unit
 - Changing the rear phonic wheel sensor
 - Changing the front phonic wheel sensor
- ABS component maintenance
 - Bleeding the ABS hydraulic system
 - Adjusting the phonic wheel sensor AIR-GAP
- Handlebar unit: hand guard - rear.view mirrors - throttle control
 - Refitting the handlebar
 - Removing the handlebar
 - Refitting the hand guards
 - Removing the hand guards
 - Refitting the rear-view mirrors
 - Removing the rear-view mirrors
- Adjusting the throttle cable
 - Refitting the throttle twistgrip
 - Removing the throttle twistgrip
- Handlebar unit: Hydraulic clutch control
 - Refitting the clutch transmission unit
 - Removal of the clutch transmission unit
 - Refitting the clutch master cylinder assembly
 - Removal of the clutch master cylinder assembly
- Handlebar unit: Hands free
 - Refitting the Hands Free
 - Removing the Hands Free
- Gearchange mechanism
 - Refitting the gearchange mechanism
 - Disassembling the gearchange control
 - Removing the gearchange mechanism
- Fork - Steering head: front fork
 - Refitting the front forks
 - Overhauling the front forks
 - Removal of the front forks
- Fork - steering head: steering
 - Refitting the steering tube components
 - Removing the steering head components
 - Steering angle adjustment
 - Adjusting the steering head bearing clearance
- Rear shock absorber unit
 - Refitting the rear suspension
 - Overhauling the rear shock absorber
 - Removing the rear shock absorber
 - Rear suspension system
- Swinging arm
 - Refitting the rear swinging arm
 - Overhauling the rear swinging arm
 - Inspecting the swinging arm shaft
 - Removing the swinging arm
 - Refitting the rear wheel eccentric hub and rear wheel shaft
 - Removing the rear wheel eccentric hub and the rear wheel shaft
- Final drive
 - Lubricating the chain
 - Washing the chain
 - Refitting the rear sprocket
 - Replacing the rear sprocket
 - Refitting the front sprocket
 - Removing the front sprocket
 - Inspecting the final drive
- Footpeg brackets

- Refitting the footpegs
 - Removing the footpegs
- Stands
 - Refitting the side stand
 - Removing the side stand
- Frame inspection
 - Refitting the side plates
 - Removing the side plates
 - Refitting the rear subframe
 - Removal of the rear subframe
 - Refitting the headlight assembly
 - Removing of the headlight assembly
 - Reassembling structural components and frame
 - Checking the frame
 - Disassembling structural components and frame
- Tail light - number plate holder
 - Refitting the number plate holder
 - Removing the number plate holder
- Electrical component tray
 - Refitting the electrical component tray
 - Removing the electrical component tray

- MTS.08 - Fuel system / Exhaust system
- Fuel tank
 - Refitting the fuel tank flange
 - Removing the tank flange
 - Refitting the filler cap
 - Removing the filler cap
 - Refitting the fuel tank
- Airbox \blacklozenge V Throttle Body
 - Refitting airbox and throttle body
 - Removing the airbox and throttle body
- Air intake
 - Refitting the secondary air system
 - Removing the secondary air system
 - Refitting the air filters
 - Removing the air filters
- Exhaust system
 - Refitting the exhaust system
 - Removing the exhaust system
 - Refitting the silencer
 - Removing the silencer
- Canister filter
 - Refitting the Canister filter
 - Removing the Canister filter
 - Canister filter system

- MTS.09 - Engine
- Removing \blacklozenge Vrefitting the engine assembly
 - Refitting the engine
 - Removing the engine
- Lubrication system: oil pump
 - Refitting the oil pump
 - Reassembling the oil pump
 - Disassembling the oil pump
 - Removing the oil pump
- Lubrication system: oil cooler
 - Refitting the lubrication system
 - Oil cooler inspection
 - Removing the lubrication system

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$