


## 2013 Ducati Superbike Panigale S Tricolore 1199 Workshop Manual

- SBK.01 - General
  - Symbols - Abbreviations - References
    - [Product specifications](#)
  - Hazardous Products - Warnings
    - [General safety rules](#)
    - [General maintenance indications](#)
- SBK.02 - Information about the model
  - Identification data
    - [Identification data](#)
- SBK.03 - Technical data
  - Technical specifications
    - [General](#)
    - [Colours](#)
    - [Transmission](#)
    - [Timing system/valves](#)
    - [Crankshaft](#)
    - [Cylinder/Piston](#)
    - [Gearbox](#)
    - [Cooling system](#)
    - [Front wheel](#)
    - [Front suspension](#)
    - [Rear wheel](#)
    - [Rear suspension](#)
    - [Hydraulic brakes](#)
    - [Charging system/alternator](#)
    - [Injection-ignition system](#)
    - [Fuel system](#)
    - [Injection system](#)
    - [Lights/instrument panel](#)
  - Dimensions
    - [Dimensions](#)
  - Fuel, lubricants and other fluids
    - [Fuel, lubricants and other fluids](#)
  - Torque settings
    - [Frame torque settings](#)
- SBK.04 - Maintenance operations
  - Vehicle pre-delivery
    - [Vehicle pre-delivery](#)
  - Scheduled maintenance chart
    - [Operations to be carried out by the dealer](#)
    - [Operations to be carried out by the customer](#)
  - Maintenance operations
    - [Check engine oil level](#)
    - [Changing the engine oil and filter cartridge](#)
    - [Checking valve clearances](#)
    - [Spark plugs replacement](#)
    - [Changing and cleaning the air filters](#)
    - [Checking the coolant level](#)
    - [Changing the coolant](#)
    - [Changing the fluid in the front brake circuit](#)
    - [Changing the rear brake circuit fluid](#)
    - [Changing the clutch fluid](#)
    - [Draining the clutch hydraulic circuit](#)
    - [Filling the clutch circuit](#)
    - [Adjusting the chain tension](#)
    - [Checking front brake pad wear](#)
    - [Checking rear brake pad wear](#)
    - [Adjusting the clutch lever and front brake lever](#)
    - [Adjusting the position of the gear change and rear brake pedals](#)
    - [Adjusting the front fork](#)
    - [Adjusting the rear shock absorber](#)
    - [Adjusting the rear ride height](#)

- SBK.05 - Fairings
  - Rear-view mirrors
    - [Removal of the rear-view mirrors](#)
    - [Refitting the rear-view mirrors](#)
  - Headlight fairing
    - [Removal of the headlight shell](#)
    - [Refitting the headlight shell](#)
  - Fairing panels
    - [Removal of the side fairings](#)
    - [Refitting the side fairings](#)
  - Seat - seat cowling and side panels
    - [Removal of the pillion seat](#)
    - [Refitting the pillion seat](#)
    - [Removal of the rider seat](#)
    - [Refitting the rider seat](#)
    - [Removal of the side panels](#)
    - [Refitting the side panels](#)
    - [Removal of the seat release mechanism](#)
    - [Refitting the seat release mechanism](#)
  - Front and rear mudguard
    - [Removal of the front mudguard](#)
    - [Refitting the front mudguard](#)
    - [Removing the rear mudguard](#)
    - [Refitting the rear mudguard](#)
- SBK.06 - Electric system and engine control system
  - Wiring diagram
    - [Key to wiring diagram](#)
    - [Routing of wiring on frame](#)
    - [Table A](#)
    - [Table B](#)
    - [Table C](#)
    - [Table D](#)
    - [Table E](#)
    - [Table F](#)
    - [Table G](#)
    - [Table H](#)
    - [Table I](#)
    - [Table J](#)
    - [Table K](#)
    - [Table L](#)
    - [Table M](#)
    - [Table N](#)
    - [Table O](#)
    - [Table P](#)
    - [Table Q](#)
    - [Table R](#)
    - [Table S](#)
    - [Table T](#)
    - [Table U](#)
    - [Table V](#)
  - Battery charging system
    - [Checking the battery charging system](#)
    - [Recharging the battery](#)
    - [Topping up the electrolyte](#)
    - [Battery](#)
  - Lights and indicating devices
    - [Renewal of the headlight](#)
  - Instruments
    - [Instrument panel](#)
    - [Acronyms and abbreviations used in the Manual](#)
    - [Technological Dictionary](#)
    - [Function push-buttons](#)
    - [How to set/display parameters](#)
    - [Main functions](#)

- [Riding Mode](#)
- [DTC](#)
- [EBC](#)
- [DOS](#)
- [Menu 1 functions](#)
- [Menu 1: Odometer \(TOT\)](#)
- [Menu 1: Trip meter 1 \(TRIP 1\)](#)
- [Menu 1: Trip meter 2 \(TRIP 2\)](#)
- [Menu 1: Partial fuel reserve counter \(TRIP FUEL\)](#)
- [Menu 1: Lap time \(LAP time\)](#)
- [Menu 1: Lap time \(LAP time\)](#)
- [MENU 2 functions](#)
- [MENU 2: Coolant temperature](#)
- [MENU 2: Instantaneous fuel consumption](#)
- [MENU 2: Average fuel consumption](#)
- [MENU 2: Average speed](#)
- [MENU 2: Trip time](#)
- [MENU 2: Air temperature](#)
- [Auxiliary functions](#)
- [Auxiliary functions](#)
- [CLOCK](#)
- [Service warning \(SERVICE\)](#)
- [Zero OIL SERVICE warning](#)
- [OIL SERVICE or DESMO SERVICE warning](#)
- [Warnings/Alarms \(Warning\)](#)
- [Error indication](#)
- [Side stand status display](#)
- [Setting MENU](#)
- [Battery voltage](#)
- [DDA](#)
- [Pin Code](#)
- [Changing the PIN CODE](#)
- [Clock setup](#)
- [Setting the date](#)
- [Setting the display background](#)
- [Setting the unit of measurement](#)
- [Other functions](#)
- [Display background colour](#)
- [The Immobilizer system](#)
- [Keys](#)
- [Operation](#)
- [Duplicate keys](#)
- [Vehicle release through PIN CODE](#)
- [ABS](#)
- SBK.07 - Chassis
  - Front wheel
    - [Removal of the front wheel](#)
    - [Overhauling the front wheel](#)
    - [Refitting the front wheel](#)
  - Rear wheel
    - [Removing of the rear wheel](#)
    - [Overhauling the rear wheel](#)
    - [Refitting the rear wheel](#)
  - Front brake control
    - [Removal of the front brake master cylinder](#)
    - [Refitting the front brake master cylinder](#)
    - [Removal of the front brake system](#)
    - [Removal of the brake discs](#)
    - [Overhauling the front brake components](#)
    - [Refitting the brake disks](#)
    - [Refitting the front brake system](#)
  - Rear brake
    - [Removing of the rear brake control](#)
    - [Refitting the rear brake control](#)

- [Removal of the rear brake calliper](#)
    - [Refitting the rear brake calliper](#)
  - ABS system components
    - [Removing of the ABS control unit](#)
    - [Refitting the ABS control unit](#)
    - [Flexible wiring/hoses positioning](#)
  - Handlebar unit: throttle twistgrip
    - [Removal of the throttle twistgrip](#)
    - [Refitting the throttle twistgrip](#)
  - Handlebar unit: hydraulic clutch control
    - [Removal of the clutch transmission unit](#)
    - [Refitting the clutch transmission unit](#)
  - Steering damper
    - [Removal of the steering damper](#)
    - [Refitting the steering damper](#)
  - Gearchange mechanism
    - [Removal of the gearchange control](#)
    - [Refitting the gearchange mechanism](#)
  - Fork - steering head: front fork
    - [Removal of the front forks](#)
    - [Overhauling the front forks](#)
    - [Refitting the front forks](#)
  - Rear shock absorber assembly
    - [Removal of the rear shock absorber](#)
    - [Refitting the rear suspension](#)
    - [Removal of the shock absorber support](#)
    - [Refitting the shock absorber support](#)
  - Swingarm
    - [Removal of the rear wheel eccentric hub and rear wheel shaft](#)
    - [Refitting the rear wheel eccentric hub and rear wheel shaft](#)
    - [Removal of the swingarm](#)
    - [Overhauling the rear swingarm](#)
    - [Refitting the swingarm](#)
  - Final drive
    - [Inspecting the final drive](#)
    - [Removing of the front sprocket](#)
    - [Refitting the front sprocket](#)
    - [Replacing of the rear sprocket](#)
    - [Refitting the rear sprocket](#)
    - [Washing the chain](#)
    - [Lubricating the chain](#)
  - Footrest brackets
    - [Removal of the front footrests](#)
    - [Refitting the front footrests](#)
    - [Removing the front footrest brackets](#)
    - [Reassembling the front footrest brackets](#)
  - Stands
    - [Removing of the side stand](#)
    - [Refitting the side stand](#)
  - Frame inspection
    - [Disassembly of structural components and the frame](#)
    - [Removal of the tool tray](#)
    - [Removing the frame and the lateral footrests](#)
    - [Checking the frame](#)
    - [Reassembly of structural components and the frame](#)
    - [Reassembling the frame and the lateral footrests](#)
    - [Reassembly of the tool tray](#)
  - Tail light - number plate holder
    - [Removal of the licence plate holder](#)
    - [Refitting the number plate holder](#)
    - [Removal of the tail light](#)
    - [Refitting the tail light](#)
- SBK.08 - Fuel/Exhaust System
  - Fuel tank

- [Removal of the fuel tank](#)
    - [Removal of the fuel tank filler cap](#)
    - [Refitting the filler cap](#)
    - [Replacing the tank flange and fuel sensor.](#)
    - [Refitting the fuel tank](#)
  - Airbox  Throttle Body
    - [Removal the airbox and throttle body](#)
    - [Refitting the airbox and throttle body](#)
  - Air intake
    - [Removal of the air filters](#)
    - [Refitting the air filters](#)
  - Exhaust system
    - [Removing the silencer](#)
    - [Removal of the exhaust system](#)
    - [Refitting the exhaust system](#)
    - [Refitting the silencer](#)
  - Evaporative emissions canister
    - [Evaporative emissions canister system](#)
    - [Removal of the evaporative emissions canister](#)
    - [Refitting the evaporative emissions canister](#)
- SBK.09 - Engine
  - Cooling system: radiator
    - [Removal of the radiator](#)
    - [Renewal of the cooling fan](#)
    - [Refitting of the radiator](#)
    - [Removal of the cooling system hoses and unions](#)
    - [Refitting of the cooling system hoses and unions](#)
  - Removal of the engine assembly from the vehicle - Refitting of the engine assembly to the vehicle
    - [Removal of the engine](#)
    - [Refitting of the engine](#)
  - Flywheel - alternator
    - [Removal of the generator cover](#)
    - [Disassembly of the generator cover](#)
    - [Removal of the flywheel/alternator assembly](#)
    - [Overhaul of the flywheel/alternator assembly](#)
    - [Fitting of the flywheel-alternator assembly](#)
    - [Fitting of the alternator-side crankcase cover](#)
  - Clutch assembly: clutch
    - [Description of the clutch assembly](#)
    - [Removal of the clutch](#)
    - [Checks and overhaul of the components](#)
    - [Refitting of the clutch](#)
  - Clutch assembly: clutch cover
    - [Removal of the clutch cover](#)
    - [Disassembly of the clutch cover](#)
    - [Reassembly of the clutch-side crankcase cover](#)
    - [Refitting of the clutch cover](#)
  - Cooling system: water pump
    - [Removal of the water pump](#)
    - [Refitting of the water pump](#)
  - Lubrication system: oil delivery pump
    - [Removal of the oil delivery pump](#)
    - [Disassembly of the oil delivery pump](#)
    - [Reassembly of the oil delivery pump](#)
    - [Refitting of the oil delivery pump](#)
  - Lubrication system: oil heat exchanger
    - [Removal of the oil heat exchanger](#)
    - [Refitting of the oil heat exchanger](#)
  - Gearbox assembly: gearchange mechanism
    - [Removal of the gear selector lever](#)
    - [Refitting of the gear selector lever](#)
  - Cylinder head assemblies: checks and adjustments
    - [Check of the engine timing](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$