

2016 - 2017 DUCATI xDIAVEL S Workshop Manual

- D(E4).01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Dangerous products - warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)

- D(E4).02 - Model-specific information
- Model identification
 - [Identification data](#)

- D(E4).03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Dimensions
 - [Dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Tightening torque settings
 - [Engine tightening torque values](#)
 - [Frame tightening torque values](#)
- Service tools
 - [Diagnosis special tools](#)
 - [Frame special tools](#)
 - [Engine special tools](#)

- D(E4).04 - Maintenance operations
- Vehicle pre-delivery
 - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
- Maintenance operations
 - [Replacing the drive belt](#)
 - [Checking the tightening of the rear brake disc screws and of the phonic wheel \(with rear wheel shaft removal\)](#)
 - [Adjusting the rear shock absorber](#)

- Adjusting the front fork
 - [Adjusting the position of the gearchange pedal and rear brake pedal](#)
 - [Adjusting the clutch lever and front brake lever](#)
 - [Checking rear brake pad wear and replacing brake pads](#)
 - [Checking front brake pad wear and replacing brake pads](#)
 - [Adjusting the drive belt](#)
 - [Adjusting the steering head bearing play](#)
 - [Filling the clutch hydraulic circuit](#)
 - [Draining the clutch hydraulic circuit](#)
 - [Changing the clutch fluid](#)
 - [Changing the fluid in the rear brake system](#)
 - [Changing the fluid in the front brake system](#)
 - [Change coolant](#)
 - [Checking coolant level](#)
 - [Changing and cleaning the air filters](#)
 - [Change spark plugs](#)
 - [Change timing belts](#)
 - [Checking valve clearance](#)
 - [Changing the engine oil and filter cartridge](#)
 - [Check engine oil level](#)
- D(E4).05 - Fairings
- Rear-view mirrors
 - [Refitting the rear-view mirrors](#)
 - [Removing the rear-view mirrors](#)
- Seat
 - [Refitting the seat](#)
 - [Removing the seat](#)
- Front and rear mudguard
 - [Refitting the rear mudguard](#)
 - [Removing the rear mudguard](#)
 - [Refitting the front mudguard](#)
 - [Removing the front mudguard](#)
- Lug
 - [Reassembling the belly fairing](#)
 - [Removing the belly fairing](#)
- Electric component support
 - [Refitting the electrical component support](#)
 - [Removing the electric component support](#)
- D(E4).06 - Electric system and engine management
- Wiring diagram
 - [Branch 10](#)
 - [Branch 9](#)
 - [Branch 8](#)
 - [Branch 7](#)
 - [Branch 6](#)
 - [Branch 5](#)
 - [Branch 4](#)
 - [Branch 3](#)
 - [Branch 2](#)
 - [Branch 1](#)
 - [Routing of wiring on frame](#)
 - [Key to wiring diagram](#)
- Charge system - Battery
 - [Rectifier-regulator](#)
 - [Generator](#)
 - [Battery](#)

- [Topping up the electrolyte](#)
- [Recharging the battery](#)
- [Checking the battery charging system](#)
- Electric starter
 - [Solenoid starter](#)
 - [Starter motor](#)
 - [Electric starting system](#)
- Lighting
 - [Replacing the tail light bulbs](#)
 - [Tail light](#)
 - [Aligning the headlight](#)
 - [Replacing the headlight bulbs](#)
 - [Headlight](#)
- Handlebar controls: controls
 - [Right-hand switch](#)
 - [Left-hand switch](#)
- Safety and protection sensors: controls
 - [Horn](#)
 - [Checking the fuses](#)
 - [Side stand switch](#)
 - [Air temperature sensor](#)
 - [Engine temperature sensor](#)
 - [Clutch switch](#)
 - [Oil pressure sensor](#)
 - [Gear/neutral sensor](#)
 - [Rear stop switch](#)
 - [Front stop switch](#)
- Electrical components: checks
 - [Exhaust valve motor](#)
 - [Solenoid valves](#)
 - [Coils](#)
- Electronic components: checks
 - [Bluetooth](#)
 - [Inertial Measurement Unit \(IMU\)](#)
 - [Knock Sensor](#)
 - [Accelerator Position System \(APS\)](#)
 - [Lambda sensors](#)
 - [Local Interconnect Network \(LIN\)](#)
 - [Anti-lock Braking System \(ABS\)](#)
 - [CAN line](#)
 - [Ducati Traction Control \(DTC\)](#)
 - [Rpm sensor \(pick-up\)](#)
 - [Throttle Position System \(TPS\)](#)
 - [Electronic Throttle Valve \(ETV\)](#)
 - [Black Box System \(BBS\)](#)
 - [Map sensor](#)
 - [Engine control unit \(ECU\)](#)
- Instrumentation: Dashboard
 - [Key duplication](#)
 - [Main functions](#)
 - [Restoring motorcycle operation via the PIN CODE](#)
 - [Displayed errors description](#)
 - [Error warnings](#)
 - [Warnings/Alarms \(WARNING\)](#)
 - [Function buttons](#)
 - [Parameter setting/displaying](#)
 - [Instrument panel](#)

- D(E4).07 - Chassis
- Front wheel
 - [Refitting the front wheel](#)
 - [Overhauling the front wheel](#)
 - [Removing the front wheel](#)
- Rear wheel
 - [Refitting the rear wheel](#)
 - [Overhauling the rear wheel](#)
 - [Removing the rear wheel](#)
- Front brake control
 - [Refitting the front brake system](#)
 - [Refitting the brake discs](#)
 - [Overhauling the front brake components](#)
 - [Removing the brake discs](#)
 - [Removing the front brake system](#)
 - [Maintenance operations](#)
 - [Refitting the front brake master cylinder](#)
 - [Removing the front brake master cylinder](#)
- Rear brake
 - [Refitting the rear brake disc](#)
 - [Refitting the rear brake calliper](#)
 - [Removing the rear brake disc](#)
 - [Removing the rear brake calliper](#)
 - [Refitting the rear brake control](#)
 - [Disassembling the rear brake control](#)
 - [Removing the rear brake control](#)
- ABS system information
 - [ABS system deactivation](#)
 - [ABS system operation information](#)
 - [Operating principle](#)
- ABS system components
 - [Routing wiring harnesses/hoses](#)
 - [Refitting the ABS control unit](#)
 - [Removing the ABS control unit](#)
 - [Changing the rear phonic wheel sensor](#)
 - [Changing the front phonic wheel sensor](#)
- ABS component maintenance
 - [Bleeding of the ABS hydraulic system](#)
 - [Adjusting the AIR-GAP of phonic wheel sensor](#)
- Handlebar assembly: throttle control
 - [Refitting the throttle control](#)
 - [Removing the throttle control](#)
 - [Refitting the handlebar](#)
 - [Removing the handlebar](#)
- Handlebar assembly: hydraulic clutch control
 - [Refitting the clutch slave cylinder](#)
 - [Removing the clutch slave cylinder](#)
 - [Refitting the clutch master cylinder assembly](#)
 - [Removing the clutch master cylinder assembly](#)
- Handlebar assembly: clutch control
 - [Refitting the clutch assembly](#)
 - [Removing the clutch assembly](#)
- Handlebar assembly: Hands free
 - [Refitting the Hands Free](#)
 - [Removing Hands Free](#)
- Gear selector control
 - [Refitting the gear change control](#)
 - [Removing the gear change control](#)

- Fork - steering head: front fork
 - [Refitting the front fork](#)
 - [Overhauling the front fork](#)
 - [Removing the front fork](#)
- Fork - steering head: steering assembly
 - [Refitting the steering tube components](#)
 - [Removing the steering tube components](#)
 - [Steering angle adjustment](#)
 - [Adjusting the steering head bearing clearance](#)
- Rear shock absorber assembly
 - [Refitting the rear shock absorber](#)
 - [Overhauling the rear shock absorber](#)
 - [Removing the rear shock absorber](#)
 - [Rear suspension system](#)
- Swinging arm
 - [Refitting the rear swinging arm](#)
 - [Overhauling the rear swinging arm](#)
 - [Inspecting the swinging arm shaft](#)
 - [Removing the swinging arm](#)
 - [Refitting the rear wheel eccentric hub and rear wheel shaft](#)
 - [Removing the rear wheel eccentric hub and the rear wheel shaft](#)
- Final drive
 - [Refitting the drive belt](#)
 - [Removing the drive belt](#)
 - [Refitting rear pulley](#)
 - [Removing rear pulley](#)
 - [Refitting front pulley](#)
 - [Removing front pulley](#)
 - [Inspection of the final drive](#)
- Footrest support
 - [Refitting the rear footpegs](#)
 - [Removing the rear footpegs](#)
 - [Refitting the front footpeg holder plates](#)
 - [Removing the front footpeg holder plates](#)
 - [Refitting the front footpegs](#)
 - [Removing the front footpegs](#)
- Stands
 - [Refitting the side stand](#)
 - [Removing the side stand](#)
- Inspecting the frame
 - [Refitting the rear subframe](#)
 - [Refitting the structural parts and frame](#)
 - [Checking the frame](#)
 - [Removing the rear subframe](#)
 - [Removing structural components and frame](#)
- Tail light - Number plate holder
 - [Refitting the number plate holder](#)
 - [Removing the number plate holder](#)
- D(E4).08 - Fuel/Exhaust system
- Fuel tank
 - [Refitting the fuel tank](#)
 - [Refitting the fuel tank flange](#)
 - [Removing the fuel tank flange](#)
 - [Refitting the tank filler plug](#)
 - [Removing the tank filler plug](#)
 - [Removing the fuel tank](#)
- Airbox “ throttle body

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$