
BOOMER 3040, 3045, 3050 CVT SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	4
SECTION 21 - TRANSMISSION	11
SECTION 25 - FWD FRONT AXLE	15
SECTION 27 - DIFFERENTIAL AND REAR AXLE	18
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	19
SECTION 33 - BRAKES	22
SECTION 35 - HYDRAULIC SYSTEM	23
SECTION 41 - STEERING	27
SECTION 50 - CLIMATE CONTROL	30
SECTION 55 - ELECTRICAL	34
SECTION 90 - PLATFORM	47

The following pages are the collation of the contents pages from each section and chapter of the Boomer 3040, 3045, 3050 CVT Service manual. Complete Service part # 84126849.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the Boomer 3040, 3045, 3050 CVT Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84126850

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Precautionary Statements	4
	Personal Safety	4
	Machine Safety	4
	Information	4
	Technical Information	5
	Hardware	5
	General	5
	Plating	5
	Nut Tightening	5
	Locknuts	5
	Jam Nuts	5
	Thread Lubrication	5
	Safety	6
	Precautionary Statements	6
	The Tractor	6
	Servicing the Tractor	6
	Operating the Tractor	7
	Driving the Tractor	7
	Operating the PTO	8
	Diesel Fuel	8
	Safety Decals	9
	Instruction Decals	11
	General Information	14
	Universal Symbols	16
	Specifications	17
	Engine	17
	Capacities	17
	Air Conditioning System	17
	Cooling System	18
	Electrical System	18

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84126850

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Fuel System	18
	Brakes	19
	Steering	19
	Power Take-off	19
	Hydraulic Lift System	19
	Transmission	20
	Transmission Speeds - kph (mph)	20
	Cast Iron Weights	21
	Drawbars	21
	3 Point Hitch	21
	Tires	22
	Wheel Bolt Torques	22
	General Dimensions	23
	Special Tools	30
	Tire Ballast and Pressures	32
	Liquid Ballast (Optional)	32
	Tire Pressure	32
	Rear Tire Liquid	32

SECTION 10 - ENGINE

BOOK 1 - 84126850

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	General	6
	Cylinder Block	6
	Cylinder Head	7
	Piston	7
	Piston Pin	8
	Piston Ring	8
	Connecting Rod	9
	Crankshaft	9
	Camshaft	11
	Valves	11
	Push Rods	12
	Rocker Arm	12
	Lubrication System	13
	Cooling System	13
	Torque Specification	14
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Separating the Tractor at the Engine - Front Transmission Box	24
	Removal	24
	Separating the Tractor at the Engine/Frame	27
	Installation	29
	Attaching the Front Transmission Box to the Engine	33
	Overhaul - Engine	37
	Fuel Injector and Glow Plug	37
	Removal	37
	Oil Pressure Switch	37

SECTION 10 - ENGINE

BOOK 1 - 84126850

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Temperature Sending Switch and Alternator	37
	Removal	37
	Fan, Water Pump, and External Oil Tube	38
	Removal	38
	Air Inlet Manifold	38
	Removal	38
	Rocker Arm Shaft and Support Bracket	39
	Removal	39
	Cylinder Head	39
	Removal	39
	Valve Tappet	39
	Removal	39
	Fuel Shutoff Solenoid	40
	Removal	40
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	40
	Timing Gear Cover Removal	40
	Timing Gears and Camshaft	42
	Removal	42
	Oil Sump	43
	Removal	43
	Oil Suction Pipe and Strainer	43
	Removal	43
	Balancer Assembly	44
	Removal	44
	Connecting Rods, Bearings, and Pistons, Rings	44
	Removal	44
	Flywheel	45
	Removal	45
	Backplate and Oil Seal	45
	Removal	45
	Crankshaft and Main Bearings	45
	Removal	45

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$