

---

# HW305, HW305S, HW325 REPAIR MANUAL COMPLETE CONTENTS

|   |    |
|---|----|
| SECTION 00 - GENERAL INFORMATION .....      | 2  |
| SECTION 10 - ENGINE .....                   | 3  |
| SECTION 25 - FRONT MECHANICAL DRIVE .....   | 11 |
| SECTION 29 - HYDROSTATIC TRANSMISSION ..... | 12 |
| SECTION 33 - BRAKES AND CONTROLS .....      | 16 |
| SECTION 35 - HYDRAULIC SYSTEMS .....        | 17 |
| SECTION 44 - REAR AXLE .....                | 22 |
| SECTION 50 - CLIMATE CONTROL .....          | 24 |
| SECTION 55 - ELECTRICAL SYSTEMS .....       | 30 |
| SECTION 58 - HEADER ATTACHMENTS .....       | 51 |
| SECTION 88 - OPTIONAL EQUIPMENT .....       | 56 |
| SECTION 90 - PLATFORM, CAB AND DECALS ..... | 60 |

The following pages are the collation of the contents pages from each section and chapter of the HW305, HW305S and HW325 Repair manual. Complete Repair part # 87576230.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the HW305, HW305S and HW325 Self-Propelled Windrowers.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87576231

## Chapter 1 - General Information

### CONTENTS

| <b>Section</b> | <b>Description</b>  | <b>Page</b> |
|----------------|---|-------------|
| 00 000         | Precautionary Statements .....  | 2           |
|                | Safety .....  | 3           |
|                | General Safety Information .....  | 5           |
|                | Protecting the Electronic/Electrical Systems During Charging or Welding ..... | 7           |
|                | Introduction .....  | 8           |
|                | About Improvements .....  | 8           |
|                | Product Identification Numbers (PIN) .....                                    | 9           |
|                | Engine PIN Number .....   | 9           |
|                | Company Policy .....  | 10          |
|                | Parts and Accessories .....   | 10          |
|                | Lubrication .....   | 10          |
|                | Recommended Lubricants and Coolants .....                                     | 11          |
|                | Sealants .....  | 12          |
|                | Minimum Hardware Tightening Torques .....                                     | 13          |
|                | Installation of Adjustable Fittings in Straight Thread O ring Bosses .....    | 15          |
|                | Standard Torque Data for Hydraulic Tubes and Fittings .....                   | 15          |
|                | Pipe Thread Fitting Torque .....  | 16          |
|                | Installation of ORFS (O ring Flat Faced) Fittings .....                       | 16          |
|                | Specifications .....  | 17          |

---

# SECTION 10 - ENGINE

BOOK 1 - 87576231

## Chapter 1 - Engine

### CONTENTS

| <b>Section</b> | <b>Description</b>                 | <b>Page</b> |
|----------------|------------------------------------|-------------|
|                | Engine Overhaul Introduction ..... | 5           |
|                | Description of Operation .....     | 6           |
|                | Specifications .....               | 6           |
|                | Special Tools .....                | 14          |
|                | Torques .....                      | 16          |
|                | Overhaul .....                     | 18          |
|                | Engine .....                       | 18          |
|                | Removal .....                      | 18          |
|                | Turbocharger .....                 | 24          |
|                | Removal .....                      | 24          |
|                | Fuel System .....                  | 24          |
|                | Removal .....                      | 24          |
|                | Thermostat .....                   | 29          |
|                | Removal .....                      | 29          |
|                | Oil Cooler .....                   | 29          |
|                | Removal .....                      | 29          |
|                | Water Pump .....                   | 30          |
|                | Removal .....                      | 30          |
|                | Cylinder Head .....                | 30          |
|                | Removal .....                      | 30          |
|                | Front Housing .....                | 31          |
|                | Removal .....                      | 31          |
|                | Oil Pump .....                     | 32          |
|                | Removal .....                      | 32          |
|                | Rear Housing .....                 | 33          |
|                | Removal .....                      | 33          |
|                | Oil Pan .....                      | 34          |
|                | Removal .....                      | 34          |
|                | Timing Gears .....                 | 34          |
|                | Removal .....                      | 34          |
|                | Pistons .....                      | 35          |
|                | Removal .....                      | 35          |

---

# SECTION 10 - ENGINE

BOOK 1 - 87576231

## Chapter 1 - Engine (Continued)

### CONTENTS

| Section | Description                                 | Page |
|---------|---|------|
|         | Main Bearings .....                         | 35   |
|         | Removal .....                               | 35   |
|         | Crankshaft .....                            | 35   |
|         | Removal .....                               | 35   |
|         | Oil Nozzles .....                           | 36   |
|         | Removal .....                               | 36   |
|         | Camshaft .....                              | 36   |
|         | Removal .....                               | 36   |
|         | Tappets .....                               | 38   |
|         | Removal .....                               | 38   |
|         | Block .....                                 | 38   |
|         | Inspection .....                            | 38   |
|         | Crankshaft .....                            | 40   |
|         | Inspection .....                            | 40   |
|         | Oil Pump Gear .....                         | 42   |
|         | Inspection, Removal, and Installation ..... | 42   |
|         | Crankshaft .....                            | 42   |
|         | Installation for Inspection .....           | 42   |
|         | Camshaft .....                              | 44   |
|         | Inspection .....                            | 44   |
|         | Camshaft Bushings .....                     | 45   |
|         | Inspection and Installation .....           | 45   |
|         | Tappets .....                               | 46   |
|         | Inspection .....                            | 46   |
|         | Piston .....                                | 46   |
|         | Disassembly .....                           | 46   |
|         | Inspection .....                            | 47   |
|         | Piston .....                                | 47   |
|         | Assembly .....                              | 47   |
|         | Connecting Rod .....                        | 50   |
|         | Inspection .....                            | 50   |

---

# SECTION 10 - ENGINE

BOOK 1 - 87576231

## Chapter 1 - Engine (Continued)

### CONTENTS

| Section | Description                      | Page |
|---------|----------------------------------|------|
|         | Bushings .....                   | 50   |
|         | Inspection .....                 | 50   |
|         | Rod Markings .....               | 51   |
|         | Connecting Rods .....            | 51   |
|         | Inspection .....                 | 51   |
|         | Piston and Connecting Rod .....  | 53   |
|         | Assembly .....                   | 53   |
|         | Piston Rings .....               | 54   |
|         | Installation .....               | 54   |
|         | Piston and Rod Assembly .....    | 54   |
|         | Installation for Clearance ..... | 54   |
|         | Rod Bearing .....                | 55   |
|         | Clearance .....                  | 55   |
|         | Piston .....                     | 57   |
|         | Height Measurement .....         | 57   |
|         | Cylinder Head .....              | 57   |
|         | Valve .....                      | 57   |
|         | Removal .....                    | 57   |
|         | Valve Seals .....                | 58   |
|         | Removal .....                    | 58   |
|         | Inspection/Installation .....    | 58   |
|         | Cylinder Head .....              | 58   |
|         | Inspection .....                 | 58   |
|         | Valves .....                     | 59   |
|         | Specifications .....             | 59   |
|         | Inspection .....                 | 60   |
|         | Valve Stem Play .....            | 60   |
|         | Valve Guides .....               | 60   |
|         | Inspection .....                 | 60   |
|         | Valve Seats .....                | 60   |
|         | Inspection .....                 | 61   |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$