

# **NEW HOLLAND**

**LM 1340 TURBO**  
**LM 1343 TURBO**  
**LM 1345 TURBO**  
**LM 1443 TURBO**  
**LM 1445 TURBO**  
**LM 1745 TURBO**

Workshop  
Manual

Workshop Manual

Print No. 87682524  
English - Printed in Italy

**LM 1340 TURBO**  
**LM 1343 TURBO**  
**LM 1345 TURBO**  
**LM 1443 TURBO**  
**LM 1445 TURBO**  
**LM 1745 TURBO**

 **NEW HOLLAND**

# LM1340 TURBO

# LM1343 TURBO

# LM1345 TURBO

# LM1443 TURBO

# LM1445 TURBO

# LM1745 TURBO

## TELEHANDLERS

### Workshop Manual

Print N. 87682524 (V - 2007)



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:

**WARNING** - Cautions directed to avoid improper repair interventions involving potential consequences for the operator's safety.

**DANGER** - These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

#### IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual **must be performed exclusively by the Service Organization of the Manufacturer**, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

Neither the Factory nor any Organizations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandized by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

## AVOID ACCIDENTS

Most accidents and injuries occurring in industry, on the farm, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands serious injuries each year.

This rule is: Never attempt to clean, lubricate or adjust a machine while it is in motion.



### WARNING

**On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.**

**If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.**

## MODEL CODES

The complete range of telescopic handlers (Telehandler) described in this manual is identified in the text by reference to the maximum extension of the telescopic arm.

The vehicles listed below may not be available in all countries or markets, therefore for the latest information consult your authorised dealer.

Model	LM1340	LM1343	LM1345	LM1443	LM1445	LM1745
<b>Stabilisers</b>	no	small	large	small	large	large
<b>Engine</b>	88 kW (120 CV - 118 HP) Turbo Aftercooler					
<b>Max. lifting height (m)</b>	12.300	12.450	12.450	13.550	13.550	16.600
<b>Max. capacity (kg) at 500 mm from fork stop</b>	4000	4300	4500	4300	4500	4500
<b>Capacity at max. height (kg)</b>	2600	3600	4000	3000	3600	2500
<b>Extension at max. height (m)</b>	1.200	0.500	0.000	0.500	0.300	1.000
<b>Max. longitudinal extension (m)</b>	8.650			9.330		12.540
<b>Capacity at max. extension (kg)</b>	700	1700	1800	1400	1500	450
<b>Weight (kg)</b>	10480			10780		11760
<b>Length (m)</b>	5.850			6.070		6.135

# Workshop Manual

## LM1340 TURBO - LM1343 TURBO - LM1345 TURBO

## LM1443 TURBO - LM1445 TURBO

## LM1745 TURBO

## TELESCOPIC HANDLERS

---

### GENERAL LIST OF CONTENTS

#### SECTION 00 - GENERAL

Description	Page
General instructions .....	1
Safety rules .....	3
Product identification .....	6
Environmental considerations .....	9
Maintenance techniques .....	10

#### SECTION 10 - ENGINE

Description	Page
Main specifications of engine .....	3
General engine specification .....	4
Generalities engine F4GE9484J*J600 .....	6
Removal and installation of the motor and the radiator .....	11
Troubleshooting .....	23
Tightening torques .....	36

## SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Powershift Gearbox 4x4 .....	2
Driving with the powershift gearbox .....	2
Gearbox assembly .....	5
Idler gear case assembly .....	7
Gearbox operation .....	8
Transmission and Hydraulic oil circuit diagrams .....	15
Modulation valve operation .....	31
Torque converter and heat exchanger hydraulic oil circuit .....	34
Troubleshooting guide .....	35
Troubleshooting procedures .....	35
Pressure testing clutch and high pressure circuit .....	38
Pressure testing torque converter and cooler circuit .....	39
Check points .....	40
Assembly instructions .....	42
Overhaul .....	45
Special tools .....	104

## SECTION 25 - FRONT AXLE

Description	Page
Specifications .....	1
Description .....	2
Operation .....	3
Troubleshooting .....	4
Wheel toe-in check .....	5
Component overhaul .....	5
Front axle removal procedure .....	6
Front axle overhaul .....	7
Axle drive pinion bearing adjustment .....	52
How to install and adjust the axle drive pinion .....	54
Front drive shaft .....	57

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$