

---

# T1530 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	12
SECTION 25 - FWD FRONT AXLE .....	14
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	15
SECTION 29 - HYDROSTATIC TRANSMISSION .....	16
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS .....	20
SECTION 33 - BRAKES .....	23
SECTION 35 - HYDRAULIC SYSTEM .....	23
SECTION 41 - STEERING .....	27
SECTION 44 - WHEELS AND TIRES .....	29
SECTION 55 - ELECTRICAL SYSTEM .....	30
SECTION 90 - PLATFORM .....	38

The following pages are the collation of the contents pages from each section and chapter of the T1530 Service manual. Complete Service part # 84227369.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the T1530 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84227370

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Introduction .....	2
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety and Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	9
	International Symbols .....	13
	Specifications .....	14
	General Dimensions .....	19
	Minimum Hardware Tightening Torques .....	22
	Metric Bolt Torque Specifications .....	23
	Lubricants .....	24
	Recommended Lubricants and Coolants .....	24
	Adjustments .....	25
	Rear Tire Liquid .....	25

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	17
	Description of Operation - Engine .....	18
	Troubleshooting .....	19
	Cylinder Head and Valve Train Components .....	23
	Separating the Tractor at the Clutch Housing/Engine .....	24
	Removal .....	24
	Attaching the Tractor at the Clutch Housing/Engine .....	34
	Installation .....	34
	Overhaul - Engine .....	44
	Engine .....	44
	Fuel Injector and Glow Plug .....	44
	Removal .....	44
	Oil Pressure Switch .....	44
	Temperature Sending Switch and Alternator .....	44
	Removal .....	44
	Fan, Water Pump, and External Oil Tube .....	45
	Removal .....	45
	Air Inlet Manifold .....	45
	Removal .....	45
	Rocker Arm Shaft and Support Bracket .....	46
	Removal .....	46
	Cylinder Head .....	46
	Removal .....	46
	Valve Tappet .....	46
	Removal .....	46
	Fuel Shutoff Solenoid .....	47
	Removal .....	47

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft .....	47
	Timing Gear Cover Removal .....	47
	Timing Gears and Camshaft .....	49
	Removal .....	49
	Oil Sump .....	50
	Removal .....	50
	Oil Suction Pipe and Strainer .....	50
	Removal .....	50
	Balancer Assembly .....	51
	Removal .....	51
	Connecting Rods, Bearings, and Pistons, Rings .....	51
	Removal .....	51
	Flywheel .....	52
	Removal .....	52
	Backplate and Oil Seal .....	52
	Removal .....	52
	Crankshaft and Main Bearings .....	52
	Removal .....	52
	Cylinder Head .....	53
	Disassembly .....	53
	Inspection and Repair .....	53
	Valve Seats .....	54
	Valves .....	55
	Valve Guides .....	56
	Valve Springs .....	57
	Rocker Arms .....	57
	Push Rods .....	58
	Cylinder Head .....	58
	Assembly .....	58
	Cylinder Block .....	59

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Pistons .....	59
	Disassembly and Inspection .....	59
	Piston Rings .....	62
	Connecting Rods .....	62
	Pin to Bushing Clearance .....	63
	Connecting Rod Bearing .....	64
	Clearance Check .....	64
	Pistons, Rings, and Connecting Rod .....	65
	Assembly .....	65
	Crankshaft - Main Bearing and Thrust Washer .....	66
	Removal and Inspection .....	66
	Crankshaft .....	67
	Bearing (Bushing) .....	68
	Replacement .....	68
	Main Bearing .....	69
	Assembly .....	69
	Port Block .....	70
	Removal .....	70
	Installation .....	70
	Timing Gear .....	71
	Camshaft .....	71
	Disassembly .....	71
	Inspection .....	71
	Assembly .....	72
	Flywheel .....	72
	Timing Gear Housing .....	73
	Front Oil Seal and Steering Pump Seal .....	73
	Replacement .....	73
	Crankshaft and Bearing Holder .....	74
	Installation .....	74

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$