

# SERVICE MANUAL

**T1560 / T1570**  
Compact Tractors

Print No. 84205613A



**SECTION 00 - GENERAL INFORMATION****Chapter 1 - General Information****CONTENTS**

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	2
	International Symbols .....	4
	Specifications .....	5
	General Dimensions .....	10
	Minimum Hardware Tightening Torques .....	12
	Metric Bolt Torque Specifications .....	13
	Lubricants .....	14
	Adjustments .....	15

# INTRODUCTION

This repair manual provides the technical information needed to properly service the New Holland T1560 and T1570 tractor. Use this manual in conjunction with the operator's manual for complete operation, adjustment, and maintenance information.

 
On New Holland equipment, left and right are determined by standing behind the unit, looking in the direction of travel.

**PLEASE READ CAREFULLY:**

A PRODUCT IDENTIFICATION PLATE is located on the *left-hand side of the transmission housing*. The numbers on the plate are important in the event your tractor should require future service. For your convenience, have your dealer record these numbers in the appropriate spaces below.





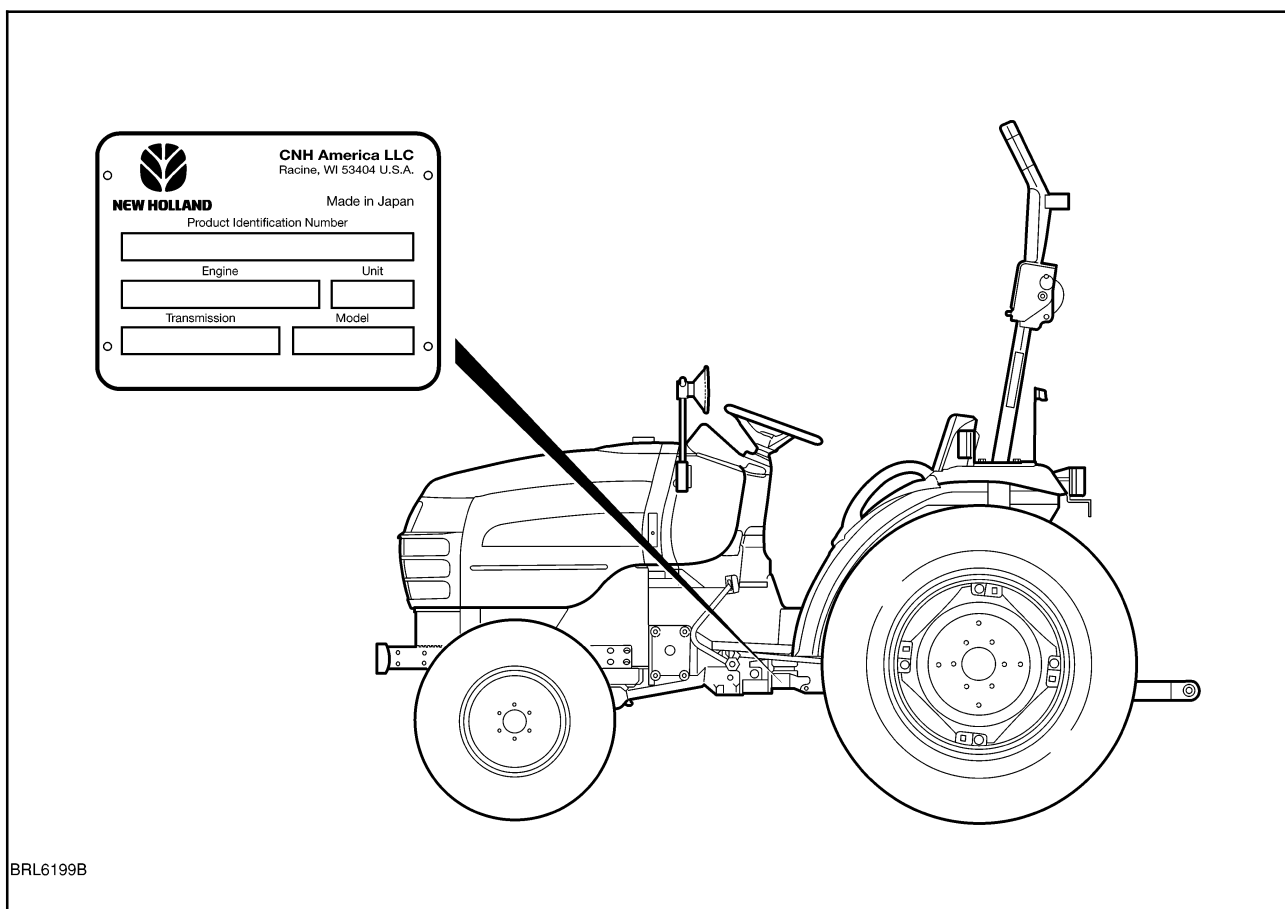 











 







 














 






 



 



 





New Holland North America, Inc. is continually striving to improve its products. We reserve the right to change prices, specification, or equipment at any time without notice.

All data given in this book is subject to production variations. Dimensions and weights are approximate only, and the illustrations do not necessarily depict tractors in standard condition. For exact information about any particular tractor, please consult your New Holland dealer.

**T1560 & T1570 ID PLATE LOCATION**

## INTERNATIONAL SYMBOLS

As a guide to the operation of your tractor, various universal symbols have been utilized on the instruments, controls, switches, and fuse box. The symbols are shown below with an indication of their meaning.

	Thermostat starting aid		Radio		P.T.O.		Position Control
	Alternator charge		Keep alive memory		Transmission in neutral		Draft Control
	Fuel level		Turn signals		Creeper gears		Accessory socket
	Automatic Fuel shut-off		Turn signals -one trailer		Slow or low setting		Implement socket
	Engine speed (rev/min x 100)		Turn signals -two trailers		Fast or high setting		%age slip
	Hours recorded		Front wind-screen wash/wipe		Ground speed		Hitch raise (rear)
	Engine oil pressure		Rear wind-screen wash/wipe		Differential lock		Hitch lower (rear)
	Engine coolant temperature		Heater temperature control		Rear axle oil temperature		Hitch height limit (rear)
	Coolant level		Heater fan		Transmission oil pressure		Hitch height limit (front)
	Tractor lights		Air conditioner		FWD engaged		Hitch disabled
	Headlamp main beam		Air filter blocked		FWD disengaged		Hydraulic and transmission filters
	Headlamp dipped beam		Parking brake		Warning!		Remote valve extend
	Work lamps		Brake fluid level		Hazard warning lights		Remote valve retract
	Stop lamps		Trailer brake		Variable control		Remote valve float
	Horn		Roof beacon		Malfunction! See Operator's Manual		Malfunction! (alternative symbol)
			Warning! Corrosive substance		Pressurised! Open carefully		

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$