

---

# T2410, T2420 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	12
SECTION 21 - TRANSMISSION .....	13
SECTION 23 - FWD DRIVELINE .....	21
SECTION 25 - FWD FRONT AXLE .....	22
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	23
SECTION 31 - POWER TAKE-OFF (PTO) .....	25
SECTION 33 - BRAKES .....	26
SECTION 35 - HYDRAULIC SYSTEM .....	27
SECTION 41 - STEERING .....	31
SECTION 44 - WHEELS AND TIRES .....	33
SECTION 50 - CLIMATE CONTROL .....	34
SECTION 55 - ELECTRICAL SYSTEM .....	38
SECTION 90 - PLATFORM .....	56

The following pages are the collation of the contents pages from each section and chapter of the T2410, T2420 Repair manual. Complete Repair part # 87725020.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T2410, T2420 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87693284

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety .....	3
	Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving The Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	10
	Decal Placement Guide .....	13
	Ecology and the Environment .....	15
	Helpful Hints .....	15
	Universal Symbols .....	16
	General Information .....	17
	Minimum Hardware Tightening Torques .....	18
	Lubrication .....	20
	General Information .....	20
	Grease Fittings .....	20
	Chains .....	20
	Lubrication and Maintenance Chart	
	New Holland T2410, T2420 — Front-wheel Drive .....	22
	Lubrication Fittings .....	23
	Diesel Fuel .....	23
	Fuel Usage Safety .....	23
	Specifications .....	24

---

## SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87693284

### Chapter 1 - General Information (Continued)

#### CONTENTS

Section	Description	Page
	General Dimensions .....	33
	Wheel Tread Settings .....	36
	Front Axle (FWD) (Not Adjustable) .....	36
	Rear Axle (FWD) .....	36
	Liquid Ballast (Optional) .....	39
	Tire Pressure .....	39
	Rear Tire Liquid .....	39
	Ballast Weights (Per Tire) .....	39

## SECTION 10 - ENGINE

BOOK 1 - 87693284

### Chapter 1 - Engine Components

#### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	11
	Special Tools .....	11
	Compression Test and Tools .....	12
	Description of Operation - General Information .....	13
	Troubleshooting .....	14
	Cylinder Head and Valve Train Components .....	18
	Cylinder Block Assembly .....	18
	Engine .....	19
	Removal .....	19
	Installation .....	20
	Overhaul .....	21
	Engine .....	21
	Alternator .....	21
	Removal .....	21

---

# SECTION 10 - ENGINE

BOOK 1 - 87693284

## Chapter 1 - Engine Components (Continued)

### CONTENTS

Section	Description	Page
	Cooling Fan and Pulley .....	21
	Removal .....	21
	Glow Plug and Connector .....	21
	Removal .....	21
	Nozzle/Holder .....	22
	Removal .....	22
	Fuel Injection Pipe .....	22
	Removal .....	22
	Injector .....	22
	Removal .....	22
	Water Pump .....	22
	Removal .....	22
	Cover/Intake Manifold/Exhaust Manifold .....	23
	Removal .....	23
	External Oil Pipe .....	23
	Removal .....	23
	Rocker Assembly .....	24
	Removal .....	24
	Cylinder Head .....	24
	Removal .....	24
	Tappets .....	24
	Removal .....	24
	Fuel Stop Solenoid .....	25
	Removal .....	25
	Timing Gear Cover .....	25
	Removal .....	25
	Timing Gears and Camshaft .....	27
	Removal .....	27
	Front End Plate .....	28
	Removal .....	28
	Oil Sump .....	28
	Removal .....	28
	Oil Suction Pipe and Strainer .....	29
	Removal .....	29

---

# SECTION 10 - ENGINE

BOOK 1 - 87693284

## Chapter 1 - Engine Components (Continued)

### CONTENTS

Section	Description	Page
	Balancer Assembly .....	29
	Removal .....	29
	Connecting Rods, Bearings and Pistons, Rings .....	30
	Removal .....	30
	Flywheel .....	30
	Removal .....	30
	Backplate and Oil Seal .....	31
	Removal .....	31
	Crankshaft and Main Bearings .....	31
	Removal .....	31
	Rocker Arm Assembly .....	32
	Disassembly .....	32
	Inspection and Repair .....	32
	Timing Gear .....	33
	Inspection .....	33
	Camshaft .....	33
	Disassembly .....	33
	Inspection .....	33
	Oil Pump .....	34
	Disassembly .....	34
	Inspection .....	34
	Assembly .....	34
	Cylinder Head .....	35
	Disassembly .....	35
	Inspection and Repair .....	35
	Valves .....	36
	Valve Guides .....	36
	Valve Seat .....	37
	Valve Springs .....	38
	Rocker Arms .....	39
	Push Rods .....	40
	Rocker Arm Shaft .....	40
	Installation .....	40
	Cylinder Block .....	41
	Inspection and Repair .....	41

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$