

# SERVICE MANUAL

**T3.50F / T3.55F / T3.65F / T3.75F**  
Tractor

Part number 47977155  
English  
February 2016





# **SERVICE MANUAL**

**T3.50F**

**T3.55F**

**T3.65F**

**T3.75F**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.106] Valve drive and gears .....	10.2
[10.101] Cylinder heads .....	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.218] Fuel injection system .....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.304] Engine lubrication system.....	10.9
Clutch .....	18
[18.110] Clutch and components .....	18.1
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.160] Creeper .....	21.3
[21.120] Gearbox .....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.101] Mechanical control .....	23.1
[23.202] Electro-hydraulic control .....	23.2
[23.314] Drive shaft.....	23.3
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.300] Rear hydrostatic transmission.....	29.1
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control.....	31.1
[31.225] Clutches.....	31.2
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes.....	33.1
[33.110] Parking brake or parking lock.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems</b> .....	<b>35</b>
[35.525] Auxiliary hydraulic valves and lines.....	35.1
[35.162] Front hitch cylinders and lines.....	35.2
[35.100] Main lift system.....	35.3
<b>Steering</b> .....	<b>41</b>
[41.101] Steering control.....	41.1
[41.216] Cylinders.....	41.2
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5

[55.013] Engine oil system .....	55.6
[55.024] Transmission control system .....	55.7
[55.512] Cab controls.....	55.8
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.110] Operator platform less cab .....	90.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$