
T4020, T4030, T4040, T4050 STANDARD REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	6
SECTION 21 - TRANSMISSIONS	7
SECTION 23 - DRIVE LINES	9
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	10
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	11
SECTION 31 - MECHANICAL POWER TAKE-OFF	12
SECTION 33 - BRAKING SYSTEM	13
SECTION 35 - HYDRAULIC SYSTEMS	14
SECTION 41 - STEERING	18
SECTION 44 - AXLES AND WHEELS	19
SECTION 55 - ELECTRICAL SYSTEM	20
SECTION 90 - PLATFORM, CAB, BODYWORK	29

The following pages are the collation of the contents pages from each section and chapter of the T4020, T4030, T4040, T4050 Standard Repair manual. Complete Repair part # 87758551.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T4020, T4030, T4040, T4050 Standard Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87758552

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Torques	12
	Special Tools	14
	Sectional Views	15
	Exhaust Gas Recirculation System (EGR)	19
	Troubleshooting	20
10 001 10	Engine	24
	Removal	24
	Installation	31
10 001 54	Disassembly	33
	Removing the Crankshaft Front Seal	35
	Removing the Crankshaft Rear Seal	38

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Assembly on the Bench	44
	Fitting the Bushings	44
	Fitting the Tappets	45
	Fitting the Camshaft	45
	Fitting the Oil Nozzles	46
	Fitting the Crankshaft	46
	Fitting the Connecting Rod-piston Assembly	49
	Fitting the Piston Connecting Rod Assemblies In the Cylinder Liners	50
	Big End Cap Assembly	51
	Fitting the Thermostat Valve	52
	Fitting the Cylinder Head	52
	Fitting the Injectors	54
	Fitting the Rocker Arm Assembly	54
	Fitting the Timing Gear	55
	Fitting the Injection Pump	57
	Fitting the Additional Counterweights	57
	Fitting the Hydraulic Pump Drive Gear	58
	Fitting the Timing Gear Casing	59
	Fitting the Crankshaft Rear Seal	59
	Fitting the Flywheel	59
	Fitting the Oil Pump	60
	Fitting the Oil Sump	61
	Fitting the Crankshaft Front Seal	61
	Fitting the Crankshaft Front Pulley	61
	Fitting the Cooling System Union	61
	Fitting the Coolant Pump	62
	Fitting the Fan-Alternator Pulley	62
	Fitting the Auxiliary Member Drive Belt	64
	Fitting the Exhaust Manifold - Turbine	64
	Fitting the Injector Feed Pipes	64
	Fitting the Fuel Pump - Feed Pipes	65

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Fitting the Pipes Between the Fuel Supply and Injection Pumps, Pre-Heating System and Tappet Cover	65
	Fitting the Starter Motor	66
	Checks, Measurements and Repairs	67
	Crankcase, Cylinder Liners	67
	Crankshaft	70
	Connecting Rods	72
	Bushings	72
	Checking Connecting Rods	73
	Checking Twisting	73
	Checking Bending	73
	Pistons	74
	Measuring the Piston Diameter	75
	Piston Pins	75
	Conditions For Correct Pin-piston Coupling	76
	Piston Rings	76
	Measuring the Clearance X of the V-ring	77
	Valves and Camshaft	78
	Decarbonizing, Checking and Grinding Valves	78
	Valve Springs	80
	Tappets	80
	Camshaft	81
	Checking Cam Lift and Pin Alignment	81
	Cylinder Head	82
	Cylinder Head Thickness	82
	Cylinder Head Hydraulic Seal Check	82
	Low Oil Pressure Indicator	83
	Functional Checks	83
	Oil Filter Replacement	83
	Cooling System	84
	Radiator - Flushing and Checks	84
	Coolant Thermometer - Check	84

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Thermostat Valve - Replacement	84
10 102 70	Crankshaft Front Seal	85
	Replacement	85
10 102 74	Crankshaft Rear Seal	87
	Removal	87
	Installation	88
10 106 12	Adjusting Valve/Rocker Arm Clearance	90
	Adjustment	90
10 218 30	Injectors	93
	Removal	93
	Installation	95
10 246 14	Bosch Injection Pump	96
	Removal	96
	Installation	97
	Timing	99
	Fuel Circuit Air Bleeding	101
10 402 10	Coolant Pump	102
	Removal	102
	Installation	103
10 402 30	Thermostatic Valve	104
	Removal	104
	Installation	105
10 406 10	Radiator	106
	Removal	106
	Installation	109
10 414 10	4-Cylinder Coolant Pump and Generator Drive Belt	110
	Tension adjustment	110

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$