

# SERVICE MANUAL

## T4030F / T4040F Tractor

Part number 47888340  
English  
July 2016





## **SERVICE MANUAL**

**T4030F With cab - Model Year 2012 [ZCJD09263 - ZDJD10118], T4030F With cab [Z8JD05996 - ZCJD10540], T4030F Without cab - Model Year 2012 [ZCJD10424 - ZDJD10174], T4030F Without cab [Z8JD07917 - ZCJD10183], T4040F With cab - Model Year 2012 [ZCJD10607 - ZDJD10900], T4040F With cab [Z8JD07561 - ZCJD10129], T4040F Without cab - Model Year 2012 [ZCJD09629 - ZDJD10408], T4040F Without cab [Z8JD05909 - ZCJD10250]**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4030F With cab [Z8JD05996 - ZCJD10540]	Latin America	F5AE9484B
T4030F Without cab [Z8JD07917 - ZCJD10183]	Latin America	F5AE9484B
T4030F With cab - Model Year 2012 [ZCJD09263 - ZDJD10118]	Latin America	F5AE9484B
T4030F Without cab - Model Year 2012 [ZCJD10424 - ZDJD10174]	Latin America	F5AE9484B
T4040F With cab [Z8JD07561 - ZCJD10129]	Latin America	F5AE9484G
T4040F Without cab [Z8JD05909 - ZCJD10250]	Latin America	F5AE9484G
T4040F With cab - Model Year 2012 [ZCJD10607 - ZDJD10900]	Latin America	F5AE9484G
T4040F Without cab - Model Year 2012 [ZCJD09629 - ZDJD10408]	Latin America	F5AE9484G

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
Clutch .....	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components .....	18.2
[18.100] Clutch mechanical release control .....	18.3
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.118] Transmission/Rear drive .....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.160] Creeper .....	21.7
[21.162] Reverser .....	21.8
[21.168] Hi-Lo unit.....	21.9
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
[23.314] Drive shaft.....	23.3
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.400] Non-powered front axle .....	25.2
[25.102] Front bevel gear set and differential .....	25.3
[25.108] Final drive hub, steering knuckles, and shafts .....	25.4

[25.310] Final drives .....	25.5
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives.....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.146] Front Power Take-Off (PTO) .....	31.2
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves .....	35.4
[35.600] High flow hydraulics .....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve .....	35.7
[35.116] Three-point hitch cylinder .....	35.8
[35.160] Front hitch controls and lines .....	35.9
[35.410] Header or attachment height system .....	35.10
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.162] Front hitch.....	37.2
<b>Steering.....</b>	<b>41</b>

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$