

# SERVICE MANUAL

**T6.120 / T6.140 / T6.150 / T6.155**

**T6.160 / T6.165 / T6.175**

**T6.140 AutoCommand / T6.150 AutoCommand**

**T6.160 AutoCommand**

Tractor

Part number 47665868

English

February 2014





## SERVICE MANUAL



**T6.120 , T6.140 AutoCommand , T6.140 , T6.150 AutoCommand , T6.150 ,  
T6.155 , T6.160 AutoCommand , T6.160 , T6.165 , T6.175**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T6.140 AutoCommand	International Region	F4DFE413C*A
T6.150 AutoCommand	International Region	F4DFE413B*A
T6.160 AutoCommand	International Region	F4DFE413A*A
T6.120	International Region	F4DFE413E*A
T6.140	International Region	F4DFE413C*A
T6.150	International Region	F4DFE413B*A
T6.155	International Region	F4DFE613F*A
T6.160	International Region	F4DFE413A*A
T6.165	International Region	F4DFE613E*A
T6.175	International Region	F4DFE6132*A

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.250] Turbocharger and lines.....	10.5
[10.254] Intake and exhaust manifolds and muffler .....	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
[10.310] Aftercooler.....	10.10
<b>Clutch</b> .....	<b>18</b>
[18.112] Slip clutch or flywheel damper .....	18.1
<b>Transmission</b> .....	<b>21</b>
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls .....	21.2
[21.154] Power shuttle transmission internal components .....	21.3
[21.111] Semi-Powershift transmission .....	21.4
[21.133] Semi-Powershift transmission external controls .....	21.5
[21.103] Semi-Powershift transmission lubrication system.....	21.6
[21.152] Semi-Powershift transmission internal components .....	21.7
[21.504] Continuously Variable Transmission (CVT) .....	21.8
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.9
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.10
[21.507] Continuously Variable Transmission (CVT) internal components .....	21.11
[21.160] Creeper .....	21.12

[21.166] Overdrive .....	21.13
<b>Four-Wheel Drive (4WD) system .....</b>	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft .....	23.2
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control .....	25.4
<b>Rear axle system .....</b>	<b>27</b>
[27.100] Powered rear axle .....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control .....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.3
[31.142] Front Power Take-Off (PTO) control .....	31.4
[31.146] Front Power Take-Off (PTO) .....	31.5
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.204] Front axle brake .....	33.3
[33.220] Trailer brake hydraulic control .....	33.4
[33.224] Trailer brake pneumatic control .....	33.5
<b>Hydraulic systems .....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$