

---

# TC35A, TC35DA, TC40A, TC40DA, TC45A, TC45DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	12
SECTION 23 - DRIVELINE .....	14
SECTION 25 - FWD FRONT AXLE .....	15
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	18
SECTION 29 - HYDROSTATIC TRANSMISSION .....	19
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS .....	22
SECTION 33 - BRAKES .....	25
SECTION 35 - HYDRAULIC SYSTEM .....	25
SECTION 41 - STEERING .....	29
SECTION 44 - 2WD FRONT AXLE .....	31
SECTION 50 - CLIMATE CONTROL .....	31
SECTION 55 - ELECTRICAL .....	35
SECTION 90 - PLATFORM .....	53

The following pages are the collation of the contents pages from each section and chapter of the TC35A - TC45DA Repair manual. Complete Repair part # 87618714.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC35A - TC45DA Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87054260

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
00 000	Introduction .....	2
	Safety .....	3
	Technical Information .....	4
	Safety Precautions .....	5
	Safety Decals - TC35A, TC40A, TC45A .....	8
	Instruction Decals - TC35A, TC40A, TC45A .....	9
	Safety Decals - TC35DA, TC40DA, TC45DA .....	12
	Instruction Decals - TC35DA, TC40DA, TC45DA .....	13
	International Symbols .....	17
	Specifications - TC35A, TC40A, TC45A .....	18
	General Dimensions - TC35A, TC40A, TC45A .....	25
	Specifications - TC35DA, TC40DA, TC45DA .....	31
	General Dimensions - TC35DA, TC40DA, TC45DA .....	37
	Minimum Hardware Tightening Torques .....	41
	Special Tools .....	43
	Lubricants .....	44
00 400	Recommended Lubricants .....	44
	Adjustments .....	45
	Tire Inflation Pressure - Adjustments .....	45
00 100	Pre-Season and Pre-Delivery Checklist .....	46

---

# SECTION 10 - ENGINE

BOOK 1 - 87054260

## Chapter 1 - Engine

### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	17
	Description of Operation .....	18
	Troubleshooting .....	19
	Cylinder Head and Valve Train Components .....	23
	Cylinder Block Assembly .....	23
	Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission .....	25
	Removal .....	25
	Separating the Tractor at the HST Housing/Engine - HST Transmission .....	29
	Removal .....	29
	Separating the Tractor at the HST Engine Frame .....	33
	Installation .....	35
	Attaching the 12x12 Transmission to the Engine .....	42
	Attaching the HST to the Engine .....	46
	Overhaul .....	54
	Engine .....	54
	Fuel Injector and Glow Plug .....	54
	Removal .....	54
	Oil Pressure Switch .....	54
	Temperature Sending Switch and Alternator .....	54
	Removal .....	54
	Fan, Water Pump and External Oil Tube .....	55
	Removal .....	55
	Air Inlet Manifold .....	55
	Removal .....	55
	Rocker Arm Shaft and Support Bracket .....	56
	Removal .....	56
10 101	Cylinder Head .....	56
	Removal .....	56
	Valve Tappet .....	57
	Removal .....	57

---

# SECTION 10 - ENGINE

BOOK 1 - 87054260

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Fuel Shutoff Solenoid . . . . .	57
	Removal . . . . .	57
10 106	Engine Timing Gear Cover, Timing Gears, and Cam Shaft . . . . .	57
	Timing Gear Cover Removal . . . . .	57
10 106	Timing Gears and Cam Shaft . . . . .	60
	Removal . . . . .	60
10 102	Oil Sump . . . . .	61
	Removal . . . . .	61
	Oil Suction Pipe and Strainer . . . . .	61
	Removal . . . . .	61
10 110	Balancer Assembly . . . . .	62
	Removal . . . . .	62
10 105	Connecting Rods, Bearings, and Pistons, Rings . . . . .	62
	Removal . . . . .	62
10 103	Flywheel . . . . .	63
	Removal . . . . .	63
10 103	Backplate and Oil Seal . . . . .	63
	Removal . . . . .	63
	Crankshaft - Main Bearings . . . . .	63
	Removal . . . . .	63
10 101	Cylinder Head . . . . .	64
	Disassembly . . . . .	64
	Inspection and Repair . . . . .	64
	Valve Seats . . . . .	65
	Valves . . . . .	66
	Valve Guides . . . . .	67
	Valve Springs . . . . .	68
	Rocker Arms . . . . .	68
	Push Rods . . . . .	69
	Cylinder Head . . . . .	69
	Assembly . . . . .	69
	Cylinder Block . . . . .	70

---

# SECTION 10 - ENGINE

BOOK 1 - 87054260

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Pistons .....	70
	Disassembly and Inspection .....	70
	Piston Rings .....	73
	Connecting Rods .....	73
	Connecting Rod Bearing .....	75
	Clearance Check .....	75
	Pistons, Rings, and Connecting Rod .....	76
	Assembly .....	76
10 103	Crankshaft - Main Bearing and Thrust Washer .....	77
	Removal and Inspection .....	77
	Crankshaft .....	78
	Bearing (Bushing) .....	79
	Replacement .....	79
	Main Bearing .....	80
	Assembly .....	80
	Port Block .....	81
	Removal .....	81
	Installation .....	81
10 106	Timing Gear .....	82
	Camshaft .....	82
	Disassembly .....	82
	Inspection .....	82
	Assembly .....	83
10 103	Flywheel .....	83
10 102	Timing Gear Housing .....	84
10 102	Front Oil Seal and Steering Pump Seal .....	84
	Replacement .....	84
10 103	Crankshaft and Bearing Holder .....	85
	Installation .....	85
	Rear Oil Seal and Backplate .....	85
	Installation .....	85
	Flywheel .....	86
	Installation .....	86

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$