

SERVICE MANUAL

TD4040F Tractor

Part number 84574577
1st edition English
December 2011



NEW HOLLAND

Service Manual - TD4040F Tractor

CONTENTS

GENERAL

SECTION 00

General Instructions and Health and Safety

Chapter 1

Section	Description	Page
00 000	General instructions	1
	Notes for spare parts	2
	Notes for equipment	2
	Safety rules	3
	Consumables	6

ENGINE

SECTION 10

Engine System

Chapter 1

Section	Description	Page
	Tools	2
	Engine Troubleshooting	5
10 001 10	Engine R.I.	9

CLUTCH

SECTION 18

Clutches

Chapter 1

Section	Description	Page
18 000	General specifications	1
	Torque settings	2
	Tools	2
	Section views	3
	Troubleshooting	4
18 110 10	Clutch - Removal-Installation	5
18 110 30	Dual disk clutch 11"/11" Test bench overhaul	18
18 100 40	Clutch adjustments	25

GEARBOX

SECTION 21

Mechanical Transmission (12x12)

Chapter 1

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3&5
	Description and operation	8
	Fault diagnosis	8
21 110	Removal - Refitting	see sect 27

Reverser

Chapter 2

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3
	Description and operation	5
	Fault diagnosis	5
21 110	Removal-Refitting	6

Reverser and Creeper

Chapter 3

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	4
	Description and operation	6
	Fault diagnosis	6
21 110	Removal-Refitting	7

DRIVE LINES

SECTION 23

Drive Lines

Chapter 1

Section	Description	Page
23 000	Main specification	1
	Torque settings and Tools	3
	Cross-Sectional views	4
	Troubleshooting	9
	Transmission shafts and guard (Disassembly - Assembly)	10
23 101 26	Drive gear housing (Removal - Installation)	11
23 101 40	Drive gear housing removed (Disassembly - Assembly)	13

FRONT AXLE MECHANICAL TRANSMISSION

SECTION 25

Front Axle Mechanical Transmission

Chapter 1

Section	Description	Page
25 000	Main data	1
	Tightening torques	3
	Tools	5
	Cross-sectional views	6
	Description and operation	8
25 100 30	Complete front axle. Removal - Installation	9
25 100 38	Front axle. Removal - Installation	14
25 108 46-47	Steering knuckle bearing pins. Replacement	21
	Stub axle adjustment	22
	Wheel hub bearing adjustment	24
	Bevel drive adjustment	25
25 102 24	Front axle differential. Overhaul	32
25 100 27	Front axle differential with LIM-SLIP. Overhaul	33
44 511 80	Leading drive wheels toe-in check	35

REAR AXLE AND TRANSMISSION

SECTION 27

Rear Axle And Transmission

Chapter 1

Section	Description	Page
27 000	Main data	1
	Tightening torques	3
	Cross-sectional views	4
	Special tools	5
	Cross-sectional views	7
	Description and operation and troubleshooting	9
21.118.10 - 12	Transmission-gearbox casing Removal-Installation	10
21.118.85	Transmission-gearbox casing - Overhaul	28
	Gearbox driven shaft end float adjustment	36
	Differential lock engagement sleeve adjustment	37
	Determining the bevel pinion positioning adjustment ring	38
	Adjusting the taper roller bearings for the bevel pinion shaft	40
	Adjusting the bearings and checking the backlash	41
	Differential pinion and side gear backlash adjustment	45

POWER TAKE-OFF

SECTION 31

Mechanical Power Take - Off

Chapter 1

Section	Description	Page
31 000	Main specification	1
	Tools	3
	Torque settings	4
	Sectional drawings	5
	Description and operation	7
	Troubleshooting	11
	Removal - Refitting	12
31 101	Bench overhaul	15

BRAKING SYSTEM

SECTION 33

Braking System

Chapter 1

Section	Description	Page
33 000	Main data	1
	Tightening torques	2
	Cross-sectional views	2
	Description & Operation	7
	Tools - Troubleshooting	8
33.202.60	Service brake removal and refitting	9
33.202.50	Removal-Refitting of brake pumps	15
33.202.40	Bleeding air from the braking system	22
33.120.08	Adjusting service brake pedals travel	23
33.110.08	Parking brake travel adjustment	23

HYDRAULIC SYSTEM

SECTION 35

Rear Mechanical Hydraulic Lift

Chapter 1

Section	Description	Page
35 000	Main specification	1
	Tightening torques	4
	Tools	5
	Cross-sectional views	6
	Description & Operation	8
	Hydraulic circuit	8
	Description and operation of lift phases	9
	Fault diagnosis	12
35 110.30	Hydraulic lift - disassembly reassembly	14
35.110.40-42-46	Hydraulic lift - bench overhaul	18
	Adjusting the lift	23
35.110.08	Linkage adjustment	29
35.110.30	Pressure relief valve - disassembly reassembly	31
35.110.32	Pressure relief valve - setting	31
35.110.14	Lift control valve - disassembly assembly and overhaul on bench	33
35.0101.10	Lift pump	38

Open Center System Auxiliary Control Valves

Chapter 2

Section	Description	Page
35 000	Main data - Tools	1
	Auxiliary control valves - sectional views	2
	Description and operation	3
	Fault diagnosis	see chapter 1
35 204 46	Auxiliary control valves - Assembly-Disassembly	7
	Spool binding test	15
	Spool leakage test	16
	Adjustment of the automatic detent release pressure	17

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$