

SERVICE MANUAL

TD5010 / TD5020 / TD5030
TD5040 / TD5050
Tractors

Print No. 84176561B





NEW HOLLAND



TD5010 - TD5020 - TD5030 - TD5040 - TD5050 MODEL TRACTORS SERVICE MANUAL

SECTIONS	
GENERAL	00
ENGINE	10
CLUTCH	18
GEARBOX	21
TRANSMISSION OF MOTION	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
AUXILIARY EQUIPMENT	50
ELECTRICAL SYSTEM	55
CAB	90

S E R V I C E

INTRODUCTION

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *Pages updated in the future will be identified by the same document number followed by an additional digit: first standard manual edition 84176561A - 1st update 84176561A1 - 2nd update 84176561A2 - etc. Updated pages can replace or supplement the pages of the standard manual; the necessary information for the procedure by which to add or replace the pages is given on the frontispiece of the update. An appropriately updated index will complete the publication. If it is necessary to issue a new updated manual (2nd edition) this will have the document number 84176561B, which indicates that the manual is composed of the standard version 87749051A complete with all the updates: 1st update 84176561A1 - 2nd update 84176561A2 - etc.*
- *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries.
In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

IMPORTANT WARNINGS

- ◇ *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians in strict accordance with the instructions given and using any specific tools necessary.*
- ◇ *Anyone who performs the operations described herein without strictly following the instructions is personally responsible for resulting injury or damage to property.*
- ◇ *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY
OF NEW HOLLAND



No part of the text or illustrations
may be reproduced

PRINTED IN TURKEY

NEW HOLLAND
SERVICE - Technical Publications & Special Tools
Part no. **84176561** - 03 - 2008

NEW HOLLAND

Repair Manual - TD Series Tractors

CONTENTS

GENERAL

SECTION 00

General Instructions and Health and Safety

Chapter 1

Section	Description	Page
00 000	General instructions	1
	Notes for spare parts	2
	Notes for equipment	2
	Safety rules	3
	Consumables	6

ENGINE

SECTION 10

Engine System (F5C)

Chapter 1

Section	Description	Page
	Tools	2
	Engine Troubleshooting	3
10 001 10	Engine R.I.	7

Engine System (NEF)

Chapter 1

Section	Description	Page
	General specifications	2
	Data	5
	Tightening torques	11
	Tools	2
	Engine views	14
	Lubrication diagram	15
	Cooling system diagram	16
	Fault diagnosis	3
10 001 10	Engine R.I.	7
10 001 53	Engine D.A. Checks, measurements and repairs	37
10 102 70	Crankshaft front seal - Replacement	89
10 102 74	Crankshaft rear seal - Replacement	92
10 106 12	Valve tappet and rocker arm clearance - Adjustment	95
10 218 30	Engine injector R.I.	98
10 246 14	Bosch injection pump R.I. Timing. Air bleed	100

10 402 10	Coolant pump R.I.	108
10 402 30	Thermostat valve R.I.	110
10 406 10	Radiator R.I.	112
10 414 10	Coolant pump and generator drive belts. Tension adjustment	116

CLUTCH

SECTION 18

Clutches

Chapter 1

Section	Description	Page
18 000	General specifications	1
	Tightening torques	4
	Tools	5
	Cross-sectional views	6
	Clutch Troubleshooting	8
18 110 10	Removal - Installation	9
	Overhaul	18
	Minimum permissible dimensions after refacing	22
	Adjustments	23
18 100 40	Adjustment of the main and PTO clutch control linkage	25

GEARBOX

SECTION 21

Mechanical Transmission (12x4)

Chapter 1

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3&5
	Description and operation	8
	Fault diagnosis	8
21 110	Removal - Refitting	see sect 27

Reverser (12x12)

Chapter 2

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3
	Description and operation	5
	Fault diagnosis	5
21 110	Removal-Refitting	6

Reverser and Creeper (20x12)

Chapter 3

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	4
	Description and operation	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$