
TD80D, TD95D REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - FRONT TRANSMISSION	8
SECTION 23 - FWD TRANSFER BOX	10
SECTION 25 - MFD AXLE	11
SECTION 27 - REAR TRANSMISSION	12
SECTION 31 - POWER TAKE-OFF	13
SECTION 33 - BRAKES	14
SECTION 35 - HYDRAULIC SYSTEMS	15
SECTION 41 - STEERING	18
SECTION 44 - FRONT AXLE AND WHEELS (2WD)	19
SECTION 55 - ELECTRICAL SYSTEM	19
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS	25

The following pages are the collation of the contents pages from each section and chapter of the TD80D, TD95D Tractor Repair manual. Complete Repair part # 87658938.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TD80D, TD95D Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87658939

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87658939

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	10
	Tightening Torques	14
	Angular Torque Data	14
	Sectional Views	15
	Troubleshooting	17
	Overhaul	21
10 001 10	Engine	21
	Removal	21
10 001 54	Installation	32
	Disassembly	34
	Assembly	49

SECTION 10 - ENGINE

BOOK 1 - 87658939

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Rotating Counterweight Dynamic Balancer	49
	Compression Test	59
	Checks, Dimensions, and Repairs	60
	Cylinder Block	60
	Crankshaft, Main Bearings, and Flywheel	62
	Connecting Rods	66
	Pistons	67
	Valves	70
	Tappets	70
	Camshaft	71
	Valve Timing Check	72
	Cylinder Head	73
10 102 70	Rotating Counterweight Dynamic Balancer	74
	Valve Guides	75
	Valve Seats in Cylinder Head	78
	Crankshaft Front Oil Seal	79
	Valve Clearance	85

SECTION 10 - ENGINE

BOOK 1 - 87658939

Chapter 2 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermometer	5
	Thermostat	5
	Thermostatic Switch	5
	Overhaul	6
10 406 10	Water Pump	6
	Removal	6
	Disassembly	9
	Assembly	9
	Installation	10
10 402 30	Cooling System Thermostat	10
	Removal	10
	Installation	13
10 402 28	Radiator	14
	Removal	14
	Installation	17

SECTION 10 - ENGINE

BOOK 1 - 87658939

Chapter 3 - Lubrication System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Oil Filter	5
	Low Oil Indicator	5
10 001 10	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87658939

Chapter 4 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Tightening Torques	5
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Models	6
	All Models	8
	Overhaul	10
10 218 30	Fuel Injectors	10
	Removal	10
	Installation	11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$