
TN60A, TN70A, TN75A, TN85A, TN95A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	9
SECTION 21 - TRANSMISSIONS	11
SECTION 23 - FWD TRANSFER BOX	14
SECTION 25 - FRONT AXLE MECHANICAL FWD	14
SECTION 27 - REAR MECHANICAL TRANSMISSION	15
SECTION 31 - MECHANICAL POWER TAKE-OFF	15
SECTION 33 - BRAKING SYSTEM	16
SECTION 35 - HYDRAULIC SYSTEM	17
SECTION 41 - STEERING	19
SECTION 44 - AXLES AND WHEELS	20
SECTION 55 - ELECTRICAL SYSTEM	21
SECTION 90 - PLATFORM, CAB, BODYWORK	26

The following pages are the collation of the contents pages from each section and chapter of the TNA Series Repair manual. Complete Repair part # 87393899.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNA Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87393900

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	Lubricants and Fluids	25

SECTION 10 - ENGINE

BOOK 1 - 87393900

Chapter 1 - Engine (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	11
	Tightening Torques	12
	Sectional Views	14
	Engine Troubleshooting	16
	Overhaul	20
10 001 10	Engine	20
	Removal	20
	Installation	21
10 001 30	Compression Test	22
10 001 54	Disassembly	23
	Assembly	33

SECTION 10 - ENGINE

BOOK 1 - 87393900

Chapter 1 - Engine (Three-Cylinder) (Continued)

CONTENTS

Section	Description	Page
	Checks, Dimensions and Repairs	42
	Cylinder Block	42
	Crankshaft	44
	Main Bearings	46
	Flywheel	47
	Connecting Rods	48
	Pistons	49
	Valves	52
	Tappets	52
	Camshaft	53
	Valve Timing	54
	Cylinder Head	55
	Valve Seats	56
10 101 53	Valve Guides	57
10 101 60	Injector Sleeves	60
10 102 70	Crankshaft Front Oil Seal	62
10 106 12	Valve/Rocker Arm	64
10 254 44	Exhaust Pipe	66
	Removal	66
	Installation	66

SECTION 10 - ENGINE

BOOK 1 - 87393900

Chapter 2 - Cooling System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermometer	6
	Thermostat	6
	Thermostatic Switch	6
	Overhaul	7
10 402 11	Coolant Pump	7
	Removal	7
	Installation	8
10 402 28	Disassembly	9
	Assembly	9
10 414 10	Drive Belt Tension Adjustment	10
10 402 30	Cooling System Thermostat	11
	Removal	11
	Installation	12
10 406 10	Radiator	13
	Removal	13
	Installation	16

SECTION 10 - ENGINE

BOOK 1 - 87393900

Chapter 3 - Lubrication System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Oil Filter	5
	Low Oil Indicator	5
	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87393900

Chapter 4 - Fuel System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Models	6
	All Models	8
	Overhaul	9
10 216 10	Fuel Tank	9
	Removal	9
	Installation	10
10 218 30	Fuel Injectors	11
	Removal	11
	Installation	12
10 246 14	Injection Pump	13
	Removal	13
	Lock Timing the Injection Pump On a Workbench (If Needed)	19
	Installation	24
	Check Fuel Injection Pump Timing With Pump Installed On the Tractor	25

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$