

---

# TN75FA, TN85FA, TN95FA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	6
SECTION 21 - TRANSMISSIONS .....	7
SECTION 23 - FWD TRANSFER BOX AND AUTO FWD .....	10
SECTION 25 - FRONT AXLE (FWD) .....	11
SECTION 27 - REAR MECHANICAL DRIVE .....	12
SECTION 31 - MECHANICAL POWER TAKE-OFF .....	12
SECTION 33 - BRAKING SYSTEM .....	13
SECTION 35 - HYDRAULIC SYSTEM .....	14
SECTION 41 - STEERING .....	18
SECTION 44 - AXLE AND WHEELS .....	19
SECTION 50 - CAB CLIMATE CONTROL .....	20
SECTION 55 - ELECTRICAL SYSTEMS .....	20
SECTION 90 - CAB, PLATFORM, AND BODYWORK .....	24

The following pages are the collation of the contents pages from each section and chapter of the TNFA Series Repair manual. Complete Repair part # 87675643.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNFA Series Tractors.

---

## SECTION 00 - GENERAL

BOOK 1 - 87675644

### Chapter 1 - General

#### CONTENTS

Section	Description	Page
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	Consumables .....	25

## SECTION 10 - ENGINE

BOOK 1 - 87675644

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	10
	Tightening Torques .....	12
	Sectional Views .....	14
	Troubleshooting .....	18
	Overhaul .....	19
10 001 10	Engine .....	19
	Removal .....	19
	Installation .....	19
	Compression Test .....	25
10 001 54	Disassembly .....	26
	Assembly .....	27
	Seal Installation .....	40

---

# SECTION 10 - ENGINE

BOOK 1 - 87675644

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Checks, Dimensions and Repairs .....	50
	Cylinder Block .....	50
	Crankshaft .....	52
	Main Bearings .....	54
	Flywheel .....	55
	Connecting Rods .....	56
	Pistons .....	57
	Valves .....	60
	Valve Timing .....	60
	Camshaft .....	61
	Tappets .....	62
	Cylinder Head .....	62
	Valve Seats .....	63
	Valve Guides .....	64
	Crankshaft Front Oil Seal .....	67
10 102 70	Rotating Counterweight Dynamic Balancer .....	72
	Valve/Rocker Arm .....	74

---

# SECTION 10 - ENGINE

BOOK 1 - 87675644

## Chapter 2 - Cooling System

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Sectional Views .....	4
	Description and Operation .....	5
	Cooling System .....	4
	Radiator .....	4
	Thermometer .....	4
	Thermostat .....	4
	Thermostatic Switch .....	4
	Overhaul .....	6
10 406 10	Coolant Pump .....	6
	Removal .....	6
	Installation .....	10
	Disassembly .....	11
	Assembly .....	11
	Drive Belt Tension Adjustment .....	12
10 402 30	Cooling System Thermostat .....	13
	Removal .....	13
	Installation .....	14
10 402 28	Radiator .....	15
	Removal .....	15
	Installation .....	18

---

## SECTION 10 - ENGINE

BOOK 1 - 87675644

### Chapter 3 - Lubrication System

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Sectional Views .....	4
	Description and Operation .....	5
	Oil Filter .....	5
	Low Oil Indicator .....	5
10 001 10	Oil Pump .....	6

## SECTION 10 - ENGINE

BOOK 1 - 87675644

### Chapter 4 - Fuel System

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	4
	Tightening Torques .....	5
	Description and Operation .....	6
	Fuel Injection Pump (Bosch) .....	6
	Turbocharged Models .....	6
	All Models .....	8
	Overhaul .....	10
10 218 30	Fuel Injectors .....	10
	Removal .....	10
	Installation .....	11
10 246 14	Injection Pump .....	12
	Removal .....	12
	Installation .....	16
	Checking the Fuel Injection Pump Timing with the Pump on the Tractor .....	17
	Lock-time the Fuel Injection Pump with the Pump Removed from the Tractor ...	21
	Fuel Circuit Air Bleeding .....	26

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$