
TZ18DA, TZ22DA, TZ24DA, TZ25DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE SYSTEMS	4
SECTION 25 - FWD	11
SECTION 27 - DIFFERENTIAL AND REAR AXLES	13
SECTION 29 - HYDROSTATIC TRANSMISSION	14
SECTION 31 - PTO	17
SECTION 33 - BRAKES	19
SECTION 35 - HYDRAULIC SYSTEM	19
SECTION 41 - POWER STEERING	23
SECTION 44 - WHEELS	25
SECTION 55 - ELECTRICAL SYSTEM	26
SECTION 58 - 54CMS-60CMS MID MOUNT MOWER	35
SECTION 90 - PLATFORM	36

The following pages are the collation of the contents pages from each section and chapter of the TZ18DA, TZ22DA, TZ24DA, TZ25DA Repair manual. Complete Repair part # 87350100.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TZ18DA, TZ22DA, TZ24DA, TZ25DA Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87350101

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety	3
	Information	3
	Safety	4
	Precautionary Statements	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	10
	Ecology and the Environment	16
	Helpful Hints	16
	Universal Symbols	17
	General Information	18
	Please Read Carefully	18
	Minimum Hardware Tightening Torques	19
	Metric Bolt Torque Specifications	20
	Lubrication and Maintenance	21
	General Information	21
	Grease Fittings	21
	Chains	21
	Lubrication and Maintenance Chart	23
	Lubrication Fittings	24
	Diesel Fuel	24
	Fuel Usage Safety	24

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87350101

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Specifications	25
	Engine	25
	Capacities	25
	Cooling System	26
	Electrical System	26
	Fuel System	26
	Brakes	27
	Steering	27
	Power Take-Off (PTO)	27
	Hydraulic Lift Section	27
	Transmission Speeds	28
	Cast Iron Weights	29
	Drawbars	29
	3-Point Hitch	29
	Tires	29
	Wheel Bolt Torques	29
	ROPS Attaching Bolt Torques	29
	General Dimensions	30
	Wheel Tread Settings	30
	Liquid Ballast (optional)	32
	Tire Pressure	32

SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87350101

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
10 000	Specifications	6
	Torque Specifications	15
	Metric Bolt Torque Specifications	15
	Special Tools	16
	General Information - Description of Operation	17
	Identification Chart	17
	Cylinder Head and Valve Train Components	17
	Cylinder Block Assembly	19
	Troubleshooting	20
	Overhaul	26
	Engine Access	26
	Disassembly	26
	Fuel Injector and Glow Plug	29
	Removal	29
	Hydraulic Pump	30
	Removal	30
	Fan, Water Pump and External Oil Tube	30
	Removal	30
	Fuel Shutoff Solenoid	30
	Removal	30
	Oil Pressure Switch	31
	Removal	31
	Temperature Sending Switch and Alternator	31
	Removal	31
	Throttle Cable	31
	Disconnection	31
	Support Frame	32
	Removal	32
	Engine	32
	Removal	32
	Valve Cover	33
	Removal	33

SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87350101

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Rocker Shaft and Push Rod	34
	Removal	34
	Cylinder Head	34
	Removal	34
	Valve Tappet	35
	Removal	35
	Engine Timing Gear Cover, Timing Gears and Camshaft	35
	Timing Gears and Camshaft	36
	Removal	36
	Oil Sump	36
	Removal	36
	Oil Suction Pipe and Strainer	37
	Removal	37
	Connecting Rods, Bearings and Piston	37
	Removal	37
	Flywheel	38
	Removal	38
	Backplate and Oil Seal	38
	Removal	38
	Crankshaft and Main Bearings	38
	Removal	38
18 110	Cylinder Head	39
	Disassembly	39
	Inspection and Repair	39
	Valve Seats	40
	Inspection and Repair	40
	Valves	40
	Inspection and Repair	40
	Valve Guides	42
	Inspection and Repair	42
	Valve Springs	42
	Inspection and Repair	42

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$