

I02IF
I12IF
Tier 4
Wheel Loader

SERVICE MANUAL

Part number 8455573
1st edition English
October 2011



Contents

INTRODUCTION

HYDRAULIC, PNEUMATIC, ELECTRICAL, ELECTRONIC SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM.....	A.10.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM.....	A.40.A
ELECTRONIC SYSTEM	A.50.A
FAULT CODES	A.50.A

ENGINE AND PTO IN B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM.....	B.20.A
AIR INTAKE SYSTEM.....	B.30.A
EXHAUST SYSTEM Emissions control	B.40.B
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

TRANSMISSION, DRIVE AND PTO OUT C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Powershift	C.20.E

AXLES, BRAKES AND STEERING..... D

FRONT AXLE	D.10.A
REAR AXLE	D.12.A
STEERING Hydraulic.....	D.20.C
SERVICE BRAKE Hydraulic.....	D.30.C
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Wheels.....	D.50.C

FRAME AND CAB E

SHIELD	E.20.A
USER CONTROLS AND SEAT	E.32.A

USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system.....	E.40.C
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning.....	E.40.D
SAFETY SECURITY ACCESSORIES Safety	E.50.B
HITCH AND WORKING TOOL	H
SINGLE ARM Lift.....	H.40.B



INTRODUCTION

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$