

The CASE logo is displayed in white, bold, italicized capital letters. It is positioned on a black trapezoidal background that tapers to the right. A horizontal orange bar is located directly beneath the letters.

REPAIR MANUAL
SKID STEER/COMPACT TRACK LOADER

410
420
420CT
SERIES 3

87634765 NA

Issued 01Jan08

REPAIR MANUAL

**SKID STEER/
COMPACT TRACK LOADERS**

**410
420
420CT
SERIES 3**

87634765 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL

**SKID STEER/
COMPACT TRACK LOADERS**

**410
420
420CT
SERIES 3**

87634765 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL

**SKID STEER/
COMPACT TRACK LOADERS**

**410
420
420CT
SERIES 3**

87634765 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL

**SKID STEER/
COMPACT TRACK LOADERS**

**410
420
420CT
SERIES 3**

87634765 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER
Repair Manual
Mechanical and Pilot Control Machines
(Tier 3 and Cab Up-Grade Machines)
Bur 87634765
Table of Contents

Description	Section Number	Publication Form Number
General		Tab 1
Section Index - General		6-79041
Fluids and Lubricants	1001	6-79031
Fluids and Lubricants Tier 3 Engines	1001	5-7580
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
Engines		Tab 2
Section Index - Engines		6-79051
Engine and Radiator Removal and Installation	2000	6-79130
Engine and Radiator Removal and Installation (410 Tier 3 Engines)	2000	5-7650
Engine and Radiator Removal and Installation (420/420CT Tier 3 Engines)	2000	5-7660
For Engine Repair - See Engine Repair Manual		6-79550
For 420/420CT Tier 3 Engine Repair - See Tier 3 Engine Repair Manual		87693888
Fuel Systems		Tab 3
Section Index - Fuel Systems		6-79061
For Fuel System Repair - See the Engine Repair Manual		6-79550
For 420/420CT Tier 3 Fuel System Repair - - See Tier 3 Engine Repair Manual		87693888
Electrical		Tab 4
Section Index - Electrical		6-79071
Electrical Specifications and Troubleshooting and Schematics	4001	6-79540
Electrical Specifications and Troubleshooting and Schematics (Tier 3 Cab Up-Grade Machines)	4001	5-9590
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53091
Tracks		Tab 5
Section Index - Tracks		5-2631
Tracks	5001	5-2610
Drive Sprocket, Idler Wheels, and Rollers	5002	5-2620
Track Drive Motor	5003	5-7630

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER
Repair Manual
Mechanical and Pilot Control Machines
(Tier 3 and Cab Up-Grade Machines)
Bur 87634765

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Power Train		Tab 6
Section Index - Power Train		6-79081
Hydrostatic System "How it Works" (ISO and H-Pattern Pilot Control Machines)	6000	5-4930
Hydrostatic System Troubleshooting	6001	6-79331
Hydrostatic System Troubleshooting (Machines Equipped with Pilot Controls)	6001	5-7610
Removal and Installation of Hydrostatic Components	6002	6-79532
Drive Coupling	6003	6-79120
Drive Coupling - Tier 3 Engines	6003	5-9440
Piston Pump	6004	6-49580
Piston Pump (Machines Equipped with Pilot Controls)	6004	5-7600
Drive Motors (Eaton)	6005	6-79020
Drive Motors -Single Speed	6005	6-79000
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310
Load Management System	6012	5-7590
Brakes		Tab 7
Section Index - Brakes		6-79091
Removal and Installation of Park Brake Components	7002	6-79571
410 Brakes - Spring Applied - Hydraulic Release (Refer to Section 6005 - Single Speed Drive Motor)		
420 Brakes - Spring Applied - Hydraulic Release	7004	6-79580
420CT Brakes - Refer to Section 5003 Track Drive Motor		
Hydraulics		Tab 8
Section Index - Hydraulics		6-79102
Hydraulic System Troubleshooting and Schematics (Mechanical and Pilot Control Machines)	8001	6-79512
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79520
Gear Pump (Equipment and High Flow)	8004	6-79350
Loader Control Valve	8005	5-2640
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER
Repair Manual
Mechanical and Pilot Control Machines
(Tier 3 and Cab Up-Grade Machines)
Bur 87634765

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		6-79111
Pedals and Levers	9001	6-79500
Pedals and Levers (Cab Up-Grade Machines)	9001	5-7670
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
ROPS Canopy, Seat, Seat Belts, and Operators Compartment (Cab Up-Grade Machines)	9004	5-9460
Heater	9006	6-79450
Air Conditioning Troubleshooting for Systems with R134A Refrigerant (Cab Up-Grade Machines)	9011	5-9480
Air Conditioner System Gauges and Testing for Systems with R134A Refrigerant (Cab Up-Grade Machines)	9012	5-9490
Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging (Cab Up-Grade Machines)	9013	5-9500
Air Conditioner System Gauges and Testing for Systems with R134A Refrigerant (Cab Up-Grade Machines)	9014	5-9510
Schematic Set		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	6-78971
Hydraulic and Electrical Schematic Foldout (Tier 3 - Cab Up-Grade and Machines Equipped with Pilot Controls)	In Rear Pocket	5-9610

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$