

# **REPAIR MANUAL**

# SKID STEER COMPACT TRACK LOADER

430 440 440 (Mechanical and Pilot Control Machines-H and ISO Pattern)

87578830 NA Replaces 87364091 NA

Revised 01-2007 Issued 03-2006

#### **Table of Contents**

| Description  | Section Number | Publication<br>Form Number |
|--|----------------|----------------------------|
| General  | Tab 1          |                            |
| Section Index - General  |                | 6-79150                    |
| Fluids and Lubricants  | 1001           | 6-79031                    |
| Standard Torque Specifications   | 1002           | 7-52931                    |
| Metric Conversion Chart  | 1003           | 7-52950                    |
|  |                |                            |
| Engines  | Tab 2          |                            |
| Section Index - Engines  |                | 6-79160                    |
| Engine and Radiator Removal and Installation   | 2000           | 6-79290                    |
| For Engine Repair - See Engine Service Manual  |                | 6-74500                    |
|  |                |                            |
| Fuel Systems   | Tab 3          |                            |
| Section Index - Fuel Systems   |                | 6-79170                    |
| For Fuel System Repair - See the Engine Service Manual   |                | 6-74500                    |
|  |                |                            |
| Electrical   | Tab 4          |                            |
| Section Index - Electrical   |                | 6-79181                    |
| Electrical System Specifications, Troubleshooting, and Schematics (Mechanical<br>and Pilot Control Machines) | 4001           | 6-79371                    |
| Battery  | 4005           | 7-51310                    |
| Starter and Starter Solenoid   | 4006           | 7-53090                    |
|  |                |                            |
| Tracks   | Tab 5          |                            |
| Section Index - Tracks   |                | 5-2630                     |
| Tracks   | 5001           | 5-2610                     |
| Drive Sprocket, Idler Wheels, and Rollers  | 5002           | 5-2620                     |
|  |                |                            |
| Power Train  | Tab 6          |                            |
| Section Index - Power Train  |                | 6-79191                    |
| Hydrostatic System "How it Works" (ISO- Pattern and H-Pattern Pilot Control<br>Machines)                     | 6000           | 5-4930                     |
| Hydrostatic System Troubleshooting   | 6001           | 6-79331                    |
| Hydrostatic System Troubleshooting (Machines Equipped with Pilot Controls)                                   | 6001           | 5-4910                     |
| Removal and Installation of Hydrostatic Components (Mechanical and Pilot Control Machines)                   | 6002           | 6-79322                    |

#### Table of Contents (Continued)

| Description  | Section Number | Publication<br>Form Number |
|--|----------------|----------------------------|
| Drive Coupling   | 6003           | 6-79230                    |
| Piston Pump  | 6004           | 6-49580                    |
| Piston Pump (Machines Equipped with Pilot Controls)  | 6004           | 5-4920                     |
| Drive Motors Single Speed  | 6005           | 6-79000                    |
| Drive Motors Two Speed   | 6005           | 6-79010                    |
| Sprocket, Chains, and Axle Assemblies  | 6007           | 6-79300                    |
| Wheels and Tires   | 6011           | 6-79310                    |
|  |                |                            |
| Brakes   | Tab 7          |                            |
| Section Index - Brakes   |                | 6-79200                    |
| Removal and Installation of Park Brake Components  | 7002           | 6-79441                    |
|  |                |                            |
| Hydraulics   | Tab 8          |                            |
| Section Index - Hydraulics   |                | 6-79212                    |
| Hydraulic System Troubleshooting and Schematics (Mechanical and Pilot<br>Control Machines)   | 8001           | 6-79342                    |
| Cleaning the Hydraulic System and Hydrostatic System   | 8002           | 6-45290                    |
| Removal and Installation of Hydraulic Components   | 8003           | 6-79431                    |
| Gear Pump (Equipment and High Flow)  | 8004           | 6-79350                    |
| Loader Control Valve   | 8005           | 5-2640                     |
| Cylinders  | 8006           | 6-79360                    |
| Flat Faced Couplers  | 8007           | 7-54740                    |
| Accumulator for Ride Control   | 8013           | 6-45550                    |
|  |                |                            |
| Mounted Equipment  | Tab 9          |                            |
| Section Index - Mounted Equipment  |                | 6-79220                    |
| Pedals and Levers  | 9001           | 6-79421                    |
| Loader   | 9002           | 6-79390                    |
| Attachment Coupler   | 9003           | 6-79400                    |
| ROPS Canopy, Seat, Seat Belts, and Operators Compartment   | 9004           | 6-79410                    |
| Heater   | 9006           | 6-79450                    |
| Air Conditioning Troubleshooting for Systems with R-134A Refrigerant   | 9011           | 6-79460                    |
| Air Conditioner System Gauges and Testing for Systems with R-134A<br>Refrigerant   | 9012           | 6-79470                    |
| Air Conditioner System Service for Systems with R-134A Refrigerant<br>Refrigerant Recovery, Compressor Removal and<br>System Evacuation and Recharging | 9013           | 6-79480                    |
| Air Conditioner Component Service for Systems with R-134A Refrigerant  | 9014           | 6-79490                    |
|  |                |                            |

#### Table of Contents (Continued)

| Description                                | Section Number | Publication<br>Form Number |
|--|----------------|----------------------------|
| Schematic Set                              |                |                            |
| Hydraulic and Electrical Schematic Foldout | In Rear Pocket | 5-5350                     |
|  |                |                            |

Table of Contents (Continued) NOTES It's a preview. You can download the full file by clicking the link below.

# https://shopservicemanual.com/

Service Manuals from 2\$